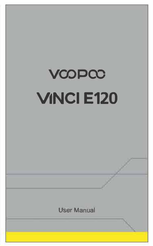

Warranty Terms

VOOPOO will provide repair or replacement under warranty according to the following conditions:
A. Warranty provides repair or replacement free of charge for defects in eligible VOOPOO merchandise within 180 days of purchase by the end user.
B. The warranty does not cover the following circumstances:
* The customer does not provide a valid warranty card and the original receipt of purchase.
* Merchandise failure or damage is caused by improper use or improper installation.
* Merchandise failure or damage is caused by improper repair or maintenance by unauthorized personnel.
* Merchandise failure or damage because of negligence (wear or broken) and improper use, storage, maintenance, or accidents.
* Merchandise failure or damage by cause of water or other external sources.
* Merchandise failure or damage by cause of leakage of battery electrolyte.
C. The warranty does not cover parts that are consumable (such as cotton, coil, glass tube, battery, charging port, O-ring, silicone ring, atomizer, and USB cable).
D. If a warranty claim arises, we will provide VOOPOO customer service with the following information: the serial number of the product, the type of the fault, and a detailed description of the problem.
For more information, please visit our website at www.voopoo.com or email us at support@voopoosmart.com.

Purchase Information

Purchase Record:
Date of Purchase (Present with a date such as receipt of purchase):
Model:
Qty:
Store Information:
Store Name:
Tel:
Store Address:
City:
Country:
Post Code:
Customer Information:
Customer Name:
Phone:
Customer Address:
City:
Country:
Post Code:

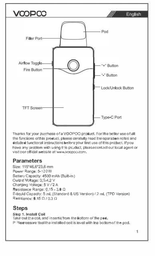

Thanks for your purchase of VOOPOO product. For the better use of this product, please read this manual carefully before first use. Please pay attention to electrical and thermal safety and follow the rules of this product. If you have any problem with using it (e.g.leak), please contact our local agent or contact official website at www.voopoo.com.

Parameters

Pod Capacity: 2.0 ml
Power Range: 5-120W
Series Coil(s): 0.6Ω mesh (Built-in)
Recommended Coil: 0.6Ω
Charging Voltage: 5V⎓2A
Resistance Range: 0.75~3.8Ω
Battery Capacity: 1000mAh (Nominal) 0.8Ω (Nominal) / 2 ml, (TPD Version)
Firmware: 8.00 / 0.12.01

Steps

Step 1. Install Coil
Remove the mouthpiece and insert the atomizer of the pod.
* Reminder: Insert the coil/atomizer in a level with the bottom of the pod.

Safety Protection

* Overtime Protection 8 h
* Short-Circuit Protection
* Low Power Protection
* Low Battery Protection
* Coil/Cell Check Protection

Maintenance and Cleaning

1. When using the device, you may notice a reasonable amount of condensation on the inside of the atomizer. This is due to the physical properties of the e-liquid and is not a sign of a leak. Please do not disassemble the device.
2. As daily use, you can allow you a deep power breakscape the atomizer and wipe the inside of the device with a dry cotton swab or tissue.
3. When a small amount of condensate is found inside the device during use, we recommend removing the atomizer, turning the device upside down, and shaking it for a few seconds.

Notes

A. This product is not recommended for infants, children, pregnant or nursing women, individuals with allergies, asthmatics, and people with a history of heart disease.
B. Please keep the device away from heat, fire and water. This device is not waterproof. Do not use it in the bathroom or shower.
C. Please do not drop, throw or immerse the device in the water.
D. Please, in the unlikely event that the device is damaged, do not use it.
E. Please carefully use the device according to your personal situation. If

Short press the "+" or "-" button to select the "ACCEPT" mode, and then press the button to confirm and exit.
Short press the "+" or "-" button to select the "REFRESH" mode, and then press the button to confirm and exit. This setting is used when the device is paired with a new atomizer for the first time.
Short press the "+" or "-" button to select the "SCREEN" mode, and then press the button to confirm and exit. This setting is used when the screen is damaged or broken.
Short press the "+" or "-" button to select the "SCREEN" mode, and then press the button to confirm and exit. This setting is used when the screen is damaged or broken.
Short press the "+" or "-" button to select the "SCREEN" mode, and then press the button to confirm and exit.
Hold down the button for 3 seconds to enter the "Lock/Unlock" mode. Then, short