SPECIFICATION

LED TROFFER FIXTURE(New Construction)
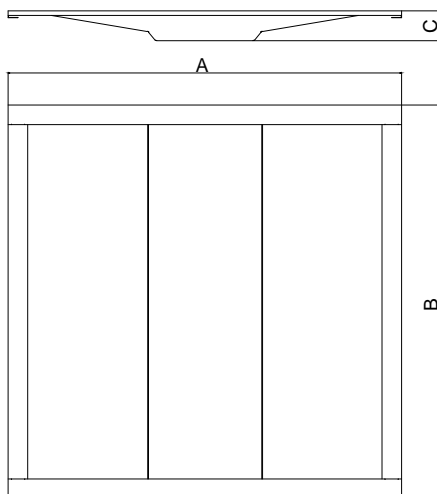
Maximum overall	A	B	C
2*2ft	603mm	603mm	45mm
2*4ft	603mm	1213mm	45mm
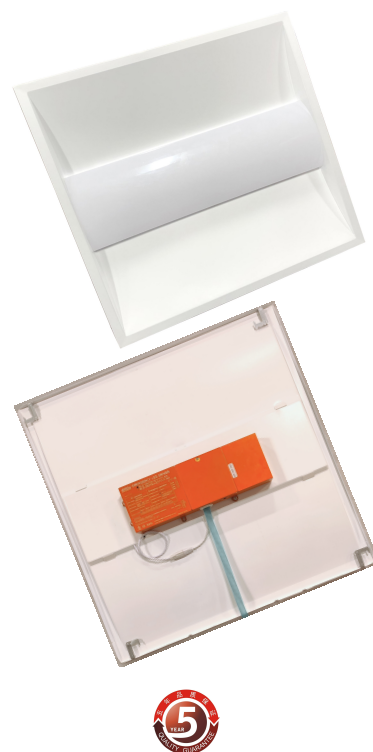
FEATURES

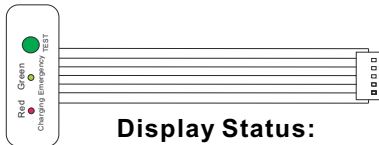|	
Input voltage:	AC100-277V
Operating frequency:	50/60Hz
Power factor:	> 0.95
Ambient temperature range:	-20°C ~+45°C
Color Temp:	3000K/4000K/5000K
Dimmable:	0-10V dimming
THD:	≤10%
IP Rating:	IP40
CRI:	>Ra80
Beam angle:	120°

- Cloud series led troffer gives >130lm/W
- Selectable emergency power 10W by 2x2ft,and 10W by 2x4ft
- Standby for 90 minutes
- 5 years' warranty

PARAMETER

Length	Product code	CRI	Wattage	Function	Lumens 3000/4000/5000K	Packing/carton
				Description		
2x2ft	ZS-TF2*2-Q01-K40-3050	>80	40W	dimming(0-10V) CCT Tunable	5200 LM	750*130*650mm 2 pieces 1*40HQ Loading=2280pcs
2x4ft	ZS-TF2*4-Q01-K60-3050	>80	50W	dimming(0-10V) CCT Tunable	6500 LM	1360*130*650mm 2 pieces 1*40HQ Loading=1230pcs

WIRING DIAGRAM

LED Emergency driver
BLD-DM75I-42YYYY-AA
BLD-DM75H-42YYYY-AA

NOTE:WALL SWITCH:Control switch light.

1.The power supply cannot insert the battery packet into the mainboard co
It has been installed to allow the battery package to be inserted into the main
the AC voltage is completed.

2.Test accessory leads-observe proper polarity wiring.

Display Status:

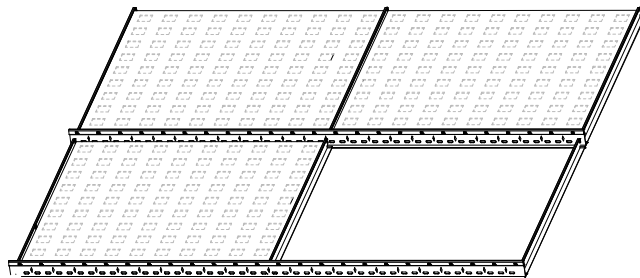| Operating Condition	Red	Green
Charging	ON	OFF
Emergency	OFF	ON

⚠️ **Electric Shock Attention**

Ensure the power supply has been cut off before connecting the wire,
and all wiring and installation of this product are required
to be operated by professionals.
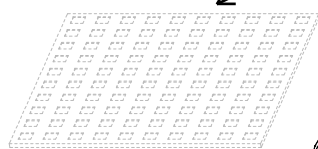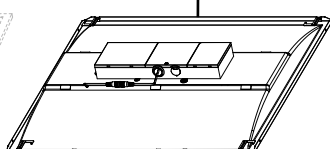
Step2-3

Wiring Diagram:

From Branch Circuit
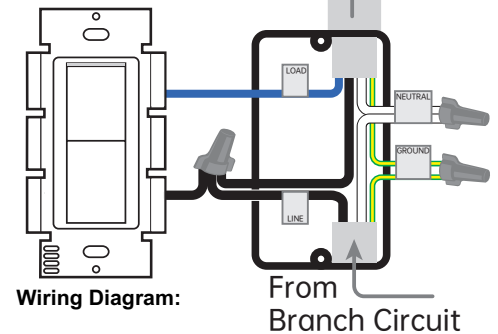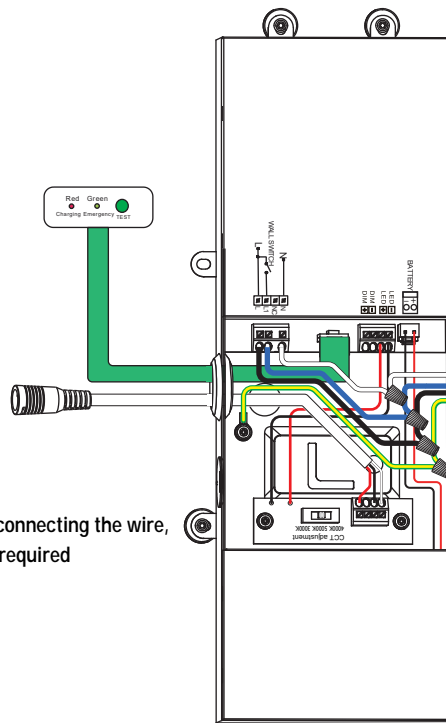
INSTALLATION INSTRUCTION

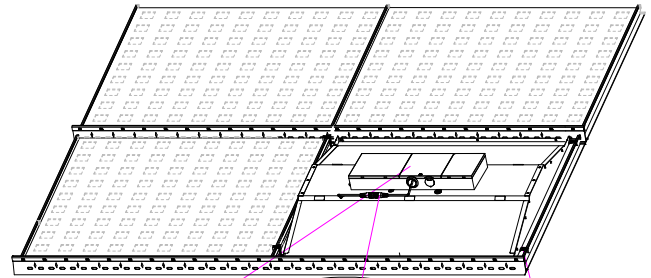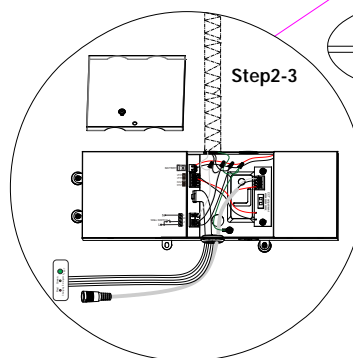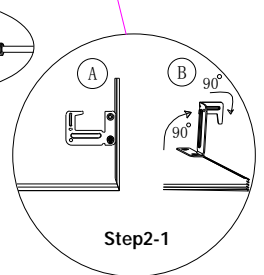Step1

Step1-1   Step1-2

Step2

Step2-3   Step2-2   Step2-1

Step 1: Make sure of all the power is off before installing. Remove the one ceiling tile
that you need to install light fixture on. Then place the light fixture on the T-bar carefully
and make sure it is correctly in place and secure.

Step 2: Lift the 4 buckles on the back of the panel up by 90° then bend the top part of
the buckles 90° towards the direction where you can anchor the light fixture to the T-bar.

Step 3: Open the driver's junction box and connect the AC wire to the driver correctly (L=black & N=white)

Warning:
Ensure the power supply has been cut off before connecting the wire,
and all wiring and installation of this product are required to be operated by professionals.