Use the chart to determine the T-Type chain length for the bicycle frame chainstay length (mm) and chainring combination.

## Chainring Size

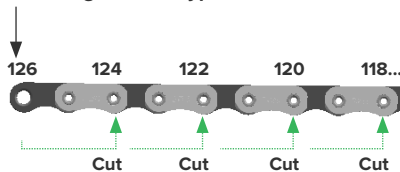### Chainstay Length (mm)
The direct distance from the bottom bracket axis to the hub axis, with the frame fully extended.



Chainstay Length (mm)
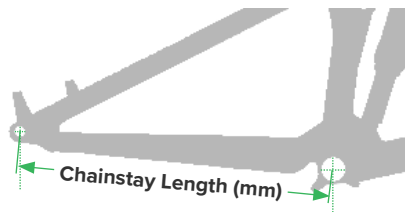
### T-Type Chain Sizing
Count the pins and cut the chain at the correct length. Install the chain with the included T-Type PowerLock.

**Full Length AM T-Type Chain**

126   124   122   120   118...

Cut   Cut   Cut   Cut

**T-Type Power Lock**

**Chainstay Length (mm)**

| Chainstay | 30 | 32 | 34 | 36 | 38 | 40 | 42 |
|---|---|---|---|---|---|---|---|
| 425 | | | | | | | |
| 426 | | 114 | | 116 | | 118 | |
| 427 | | | | | | | |
| 428 | | | | | | | |
| 429 | 114 | | 116 | | 118 | | 120 |
| 430 | | | | | | | |
| 431 | | | | | | | |
| 432 | | | | | | | |
| 433 | | | | | | | |
| 434 | | 116 | | 118 | | 120 | |
| 435 | | | | | | | |
| 436 | | | | | | | |
| 437 | | | | | | | |
| 438 | | | | | | | |
| 439 | | | | | | | |
| 440 | 116 | | 118 | | 120 | | 122 |
| 441 | | | | | | | |
| 442 | | | | | | | |
| 443 | | | | | | | |
| 444 | | | | | | | |
| 445 | | | | | | | |
| 446 | | | | | | | |
| 447 | | 118 | | 120 | | 122 | |
| 448 | | | | | | | |
| 449 | | | | | | | |
| 450 | | | | | | | |
| 451 | | | | | | | |
| 452 | | | | | | | |
| 453 | 118 | | 120 | | 122 | | 124 |
| 454 | | | | | | | |
| 455 | | | | | | | |
| 456 | | | | | | | |
| 457 | | | | | | | |
| 458 | | | | | | | |
| 459 | | | | | | | |
| 460 | | 120 | | 122 | | 124 | |
| 461 | | | | | | | |
| 462 | | | | | | | |
| 463 | | | | | | | |
| 464 | | | | | | | |
| 465 | 120 | | 122 | | 124 | | 126 |
| 466 | | | | | | | |
| 467 | | | | | | | |
| 468 | | 122 | | 124 | | 126 | |
| 469 | | | | | | | |
| 470 | | | | | | | |

Notes:

- Drawings are not to scale.
- Chart does not apply to bikes that have additional idler pulleys in the path of the chain.
- Full length chain size (126) is from AM packaging size.
- T-Type PowerLock installs the same as the Eagle PowerLock. Consult the user manual at www.sram.com/service for instructions.