Model AX Switch Settings

External DIP Switch Settings			
DIP Frequency			
1	2	Level	Value
OFF	OFF	Hi	3
ON	OFF	Med Hi	2
OFF	ON	Med Lo	1
ON	ON	Lo	0
DIP	Switch Off	Switch On	Default
3	Presence	Pulse	OFF
4	No Boost	Sensitivity x 4	OFF
DIP Sensitivity			
5	6	Level	ΔL/L
ON	ON	Hi	0.02%
OFF	ON	Med Hi	0.08%
ON	OFF	Med Lo	0.16%
OFF	OFF	Lo	0.32%
Internal DIP Switch Settings			
DIP	Switch Off	Switch On	Default
1	With External DIP 3 OFF (Pres.)		
	True Pres.	Limited Pres.	OFF
	With External DIP 3 ON (Pulse)		
	On Entry	On Exit	OFF
2	No Delay	2 Sec. Delay	OFF

551-0105-00 Rev 10/29/04

Model AX Switch Settings

External DIP Switch Settings			
DIP Frequency			
1	2	Level	Value
OFF	OFF	Hi	3
ON	OFF	Med Hi	2
OFF	ON	Med Lo	1
ON	ON	Lo	0
DIP	Switch Off	Switch On	Default
3	Presence	Pulse	OFF
4	No Boost	Sensitivity x 4	OFF
DIP Sensitivity			
5	6	Level	ΔL/L
ON	ON	Hi	0.02%
OFF	ON	Med Hi	0.08%
ON	OFF	Med Lo	0.16%
OFF	OFF	Lo	0.32%
Internal DIP Switch Settings			
DIP	Switch Off	Switch On	Default
1	With External DIP 3 OFF (Pres.)		
	True Pres.	Limited Pres.	OFF
	With External DIP 3 ON (Pulse)		
	On Entry	On Exit	OFF
2	No Delay	2 Sec. Delay	OFF

551-0105-00 Rev 10/29/04

Model AX Switch Location

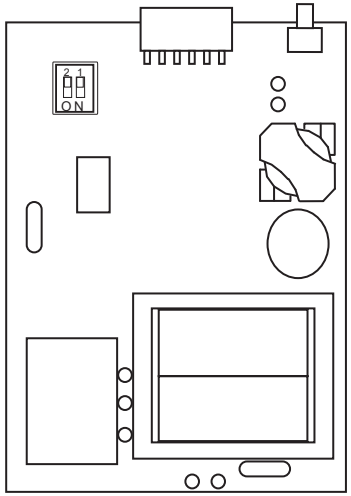

Model AX Switch Location

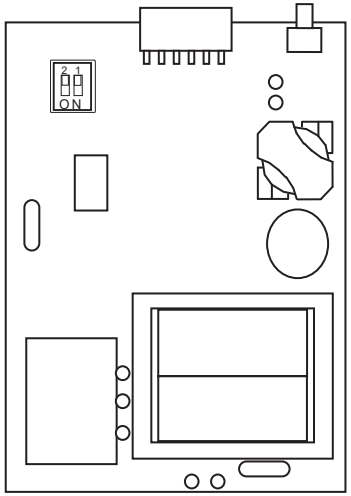

Model AX Switch Location

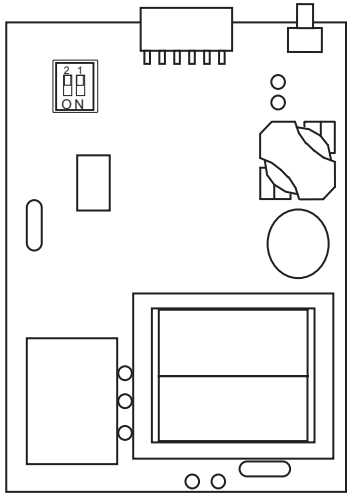

Model AX Switch Location

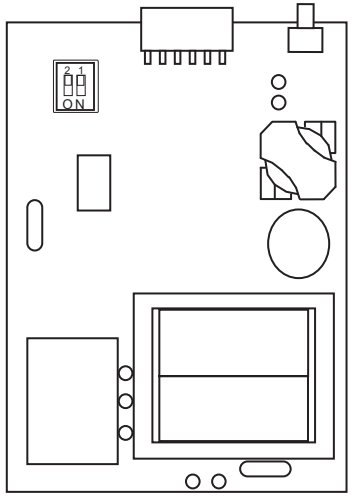

Model AX Switch Location

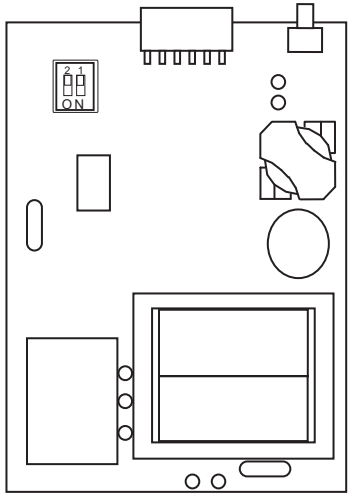

Model AX Switch Location

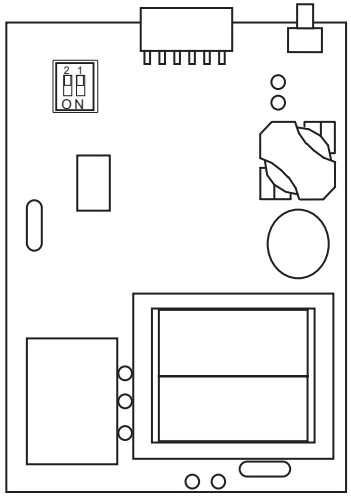

Model AX Switch Location

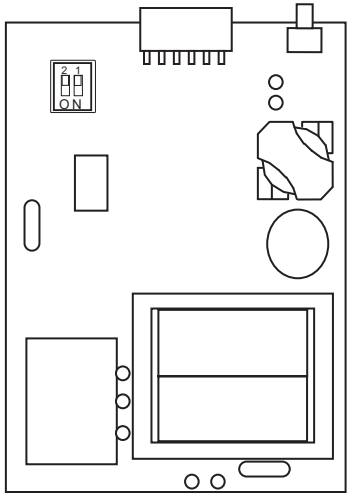

Model AX Switch Location

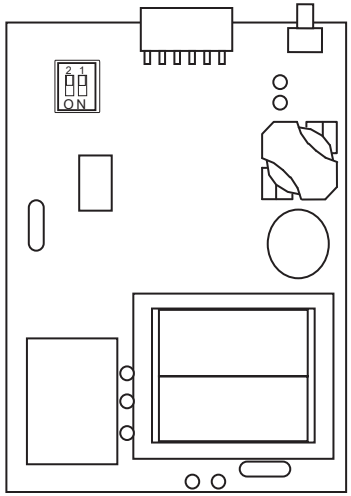

Model AX Switch Location

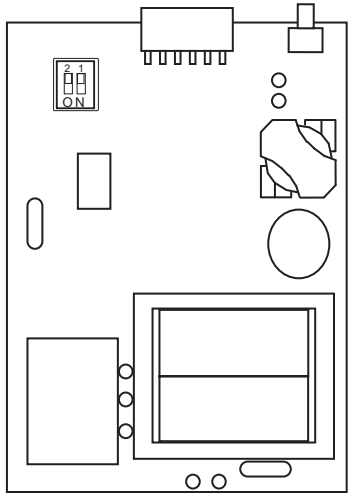
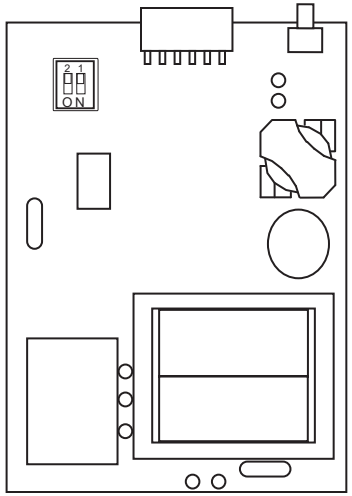
Model AX Switch Location