INFINITY SOLAR LIGHTS

Supreme Solar Christmas Lights Manual

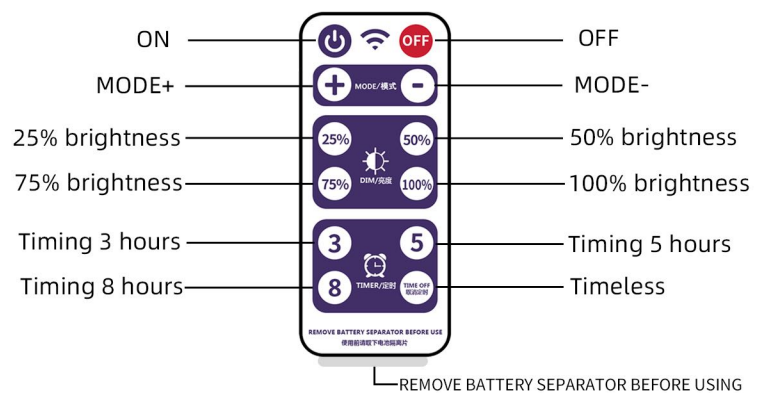## REMOTE SOLAR STRING LIGHTS INSTRUCTIONS

PRODUCT SPECIFICATION

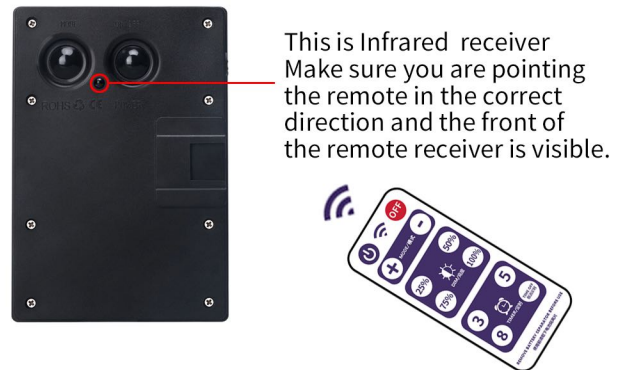|	
SOLAR PANEL	5V 300MA
BATTERY	18650-3.7V 1200mAH
WORKTIME	8-36 hours if power is full
FUNCTION	brightness control、8 modes adjust、timing
COLOR	☐white ☐warm white ☐multi-color ☐others
LED	☐30LED ☐50LED ☐60LED ☐100LED ☐200LED
	☐300LED ☐500LED ☐1000LED ☐others
MODE	1.Combination 2.In waves 3.Sequential 4.Slo Glo 5.Chasing/Flash 6.Slow fade 7. Twinkle/Flash 8.Steady on

DIRECTION FOR USING

Infrared receiver

Power switch — Remote control

Set light mode、brightness、timing by remote control

Mode button

Key-control

Press the Power switch（ON/OFF）

Set light mode by pressing mode button
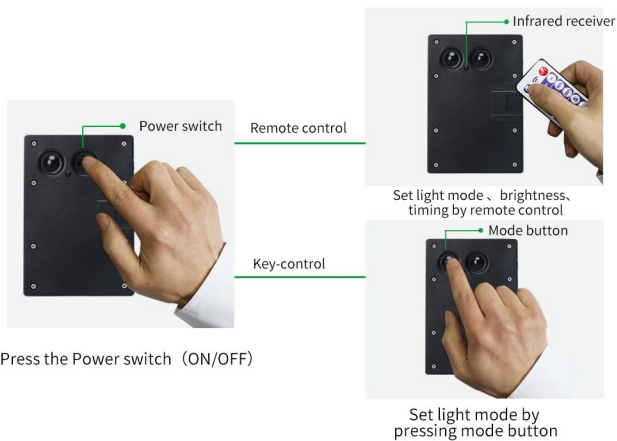
HOW TO USE REMOTE CONTROL

ON — OFF
MODE+ — MODE-
25% brightness — 50% brightness
75% brightness — 100% brightness
Timing 3 hours — Timing 5 hours
Timing 8 hours — Timeless

REMOVE BATTERY SEPARATOR BEFORE USING

REMOTE CONTROL ATTENTIONS

This is Infrared receiver Make sure you are pointing the remote in the correct direction and the front of the remote receiver is visible.

Supreme Solar Christmas Lights Manual

INSTALLED ON THE GROUND

1.Take out the bracket and connect it

2、Combine the bracket with the controller

3、Install the product according to the picture

INSTALLED ON THE WALL

1、Punch holes in the wall according to the positioning holes

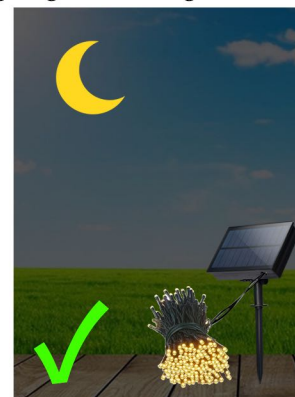2、Tighten the screw and fix the bracket

3、The best installation angle as the picture

ATTENTIONS

Charging during the day，please make sure nothing cover the solar panel，Whether or not it will affect the charging effect of solar energy，and affect the lighting time and brightness.

Make sure there is no strong light on the solar panel after dark，Whether or not it will enter charging mode，and the string lights will not work.

sales@outdoorsolarstore.com - 800-985-4129