CASITA CANOPY TENTS™ 20FT UV PRINT

OUTDOOR BANNER STAND

PRODUCT CODE: CAS-CST20UV

LIFE TIME on frame | 1 YEAR on graphic | OUTDOOR USE | ADJUSTABLE HEIGHT

PRODUCT DESCRIPTION	
Our Casita Canopy Tents™ are an excellent way to provide shade during outdoor events. This canopy is 20' x 10' and is available in custom UV print, which has a high quality finish with vivid color. Set up is quick, easy, and user friendly. Telescopic legs snap into place offering a range of heights. This lightweight system includes a protective dust cover to use while in storage.	
DISPLAY DIMENSIONS	232"W x 133"H x 118.75"D
MIN. HEIGHT	99"H
MAX. HEIGHT	133"H
LOWEST SETTING TO PEAK	120.25"H
FLOOR TO LOWEST SETTING	22"H
GRAPHIC DIMENSIONS	Canopy: 232"W x 89"H Back Wall: 232"W x 79"H Half Wall: 117"W x 40.5"H
GRAPHIC MATERIAL	
UV Fabric (water resistant)	
GRAPHIC FINISHING	
Hemmed around sides.	
DISPLAY CONSTRUCTION	
Aluminum frame (Hex leg thickness: 50mm)	
SHIPPING WEIGHTS & DIMENSIONS	
Shipping Weight	69 lbs (frame only) 84 lbs (frame and graphic)
Shipping Dimensions	62"H x 10"W x 17"D (over size)
LARGE QUANTITY FREIGHT	
Freight Shipping	12 boxes per 48"L x 40"W x 67"H skid
Freight Weight	873 lbs (frame only) 1053 lbs (frame & graphic)
GRAPHIC TURN AROUND TIME	
4 business days after proof approval	
AVAILABLE ACCESSORIES	
Rope	Sand Bag
Stakes	La Caja Hard Case
Flag Holder	Travel Bag Wheels
AVAILABILITY	CA Only
WIND RATING	20 mph

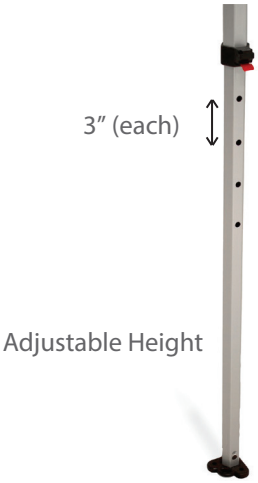

Water Resistance

Optional Sand Bag

Stakes

Rope

Travel Bag w/wheels (option)

Nylon Travel Bag

Optional La Caja Hardcase

CASITA CANOPY TENTS™ 20FT UV PRINT

OUTDOOR BANNER STAND

PRODUCT CODE: CAS-CST20UV

PARTS LIST

(qty 1) Canopy Frame

(qty 1) Rope

(qty 1) Travel Bag

(qty 8) Stakes

(qty 1) Bag for Rope & Stakes

CASITA CANOPY TENTS™ 20FT UV PRINT

OUTDOOR BANNER STAND

PRODUCT CODE: CAS-CST20UV

SET UP INSTRUCTIONS

(5FT CANOPY SHOWN BELOW)

Step 1

Take your frame and slightly expand it open to expose the corner bars.

Step 2

Take your canopy graphic and place it on top of the frame.

Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of loop Velcro sewn to it and each corner of the frame has a strip of hook Velcro.

Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.

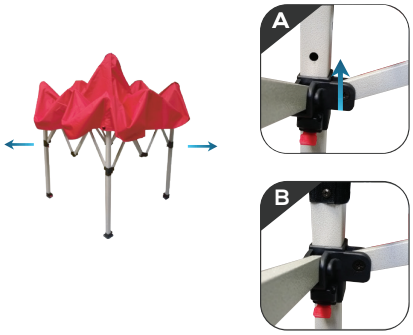

Step 5

Increase the height by extending the lower legs.

Step 6

Pull each leg down until the latch locks into place.

Step 7

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole. The dome cap will push out the canopy creating tension to flush out any loose areas.

Step 8

The install is complete.