Halo Wall Light Installation Instructions

HAVIT Lighting

Product Specifications

| Model No.	HV3591RGBW-BLK	HV3591RGBW-WHT	HV3592RGBW-BLK	HV3592RGBW-WHT	HV3593RGBW-BLK	HV3593RGBW-WHT	HV3594RGBW-BLK	HV3594RGBW-WHT
Name	Halo							
Material	Aluminium							
Colour	Black	White	Black	White	Black	White	Black	White
IP Rating	IP65							
Input Voltage	12v DC							
Protection Class	3 (Low Voltage)							
Lamp Base	Built in LED							
Lamp Wattage	1x 7w		1x12w		1x18w		1x24w	
Colour Temp	RGBW (Red, Green, Blue + 3000k)							
Lumens	250lm (3000k)		300lm (3000k)		350lm (3000k)		400lm (3000k)	
CRI	> 80							
Wiring	Parallel							
Dimmable	Yes							
Warranty	3 Years Replacement*							
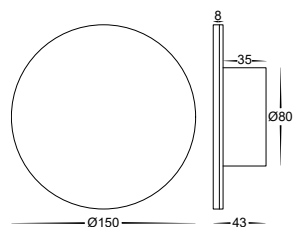
HV3591 Dimensions	HV3592 Dimensions	HV3593 Dimensions	HV3594 Dimensions
8, 35, Ø80, Ø150, 43	8, 35, Ø100, Ø200, 43	8, 39, Ø130, Ø250, 47	8, 39, Ø130, Ø300, 47
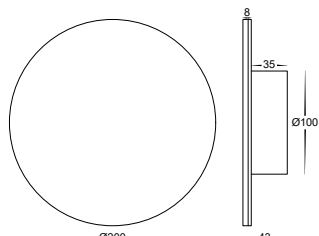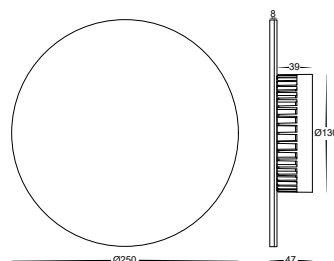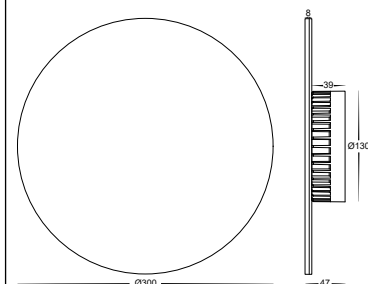
Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Loosen allen screws on side of fitting
3. Remove base plate from fitting
4. Install base plate to wall in desired location using appropriate screws for application.
5. Seal all holes including cable entry hole and mounting screws.
6. Use an appropriate 12v DC LED Driver - DO NOT CONNECT LIGHT FITTING DIRECT TO 240V
7. Connect the cable, Connect live then neutral wires.
8. Reattach fitting to base plate making sure allen screws are tight to avoid water penetration
9. Apply silicon around edge of base to prevent any water from getting inside to electrical connections.
10. See APP Installation Instructions for connection to tablet or smartphone.
11. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

Warranty Terms & Conditions*

Additional Information

Halo Wall Light Installation Instructions

HAVIT Lighting

Steps for Connection to Smartphone or Tablet:

1. Download EASYLIGHTING App from APP Store or Scan QR Code
2. Change WIFI to Easylighting
3. Open APP on Smartphone or Tablet
4. Use direct connection with WIFI Controller
5. Press Learn button on receiver
6. Press Wheel on APP
7. Light will flash when pairing is Successful.
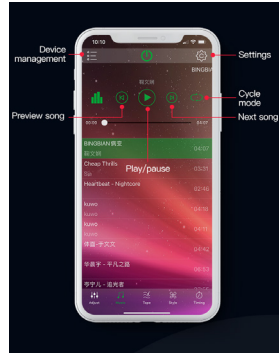
Steps for Connection to Home Network:

1. Connect Controller to home network
2. Press I got it and then Yes
3. Select WIFI you wish to connect to.
4. Enter Password
5. Close APP and Reopen
6. Controller will now be connected to Home Network
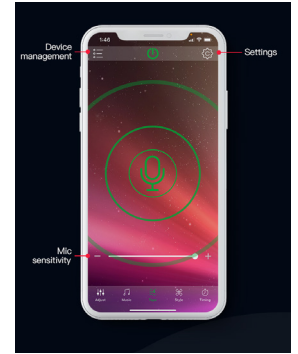
Controls for Smartphone or Tablet:

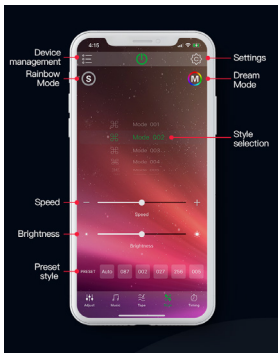### Main User Interface
to adjust colours and brightness

Device management
Switch color disk
On/Off
Settings
Adjust colour
Brightness
Preset colour
Standard colour

Music
Play music and Fitting will change with the beat

Device management
Settings
Preview song
Cycle mode
Next song
Play/pause

Tape
Change colours using the microphone

Device management
Settings
Mic sensitivity

Saved Modes
Change Colour with saved modes

Device management
Rainbow Mode
Settings
Dream Mode
Style selection
Speed
Brightness
Preset style

Timers
Set timers for automatic on/off control

Device management
Device selection
Settings
Set-up timing
Open/Close

Shake
Shake phone to change colours

Device management
Settings
Help
Background
Dream Settings
Shake
About
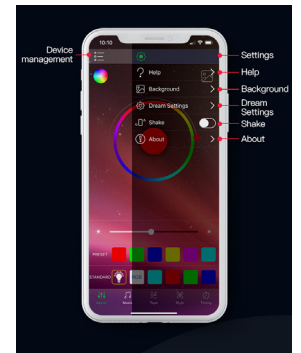
Dream Setting
When dream mode is active, LED
Strip can be set to individual settings

Please select a device
LED Type
RGB output sequence
Style Loop
LED Qty
Time Loop
Enable/ Enabled password
OK
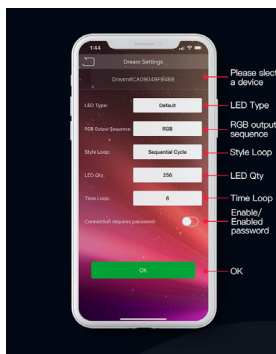
Remote
Remote control settings

Automatic mode
On
Off
Mode up
Speed up
Brightness up
Speed down
Brightness down
Mode down
Seven colors
Timer
MIC sensitivity up
MIC sensitivity down
MIC mode
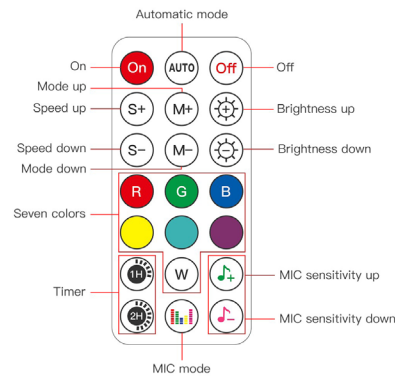
Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*

Additional Information