# CFE FIRMWARE UPGRADE

1. Plug the ethernet cable to the router and the PC.
2. Configure static IP on your PC

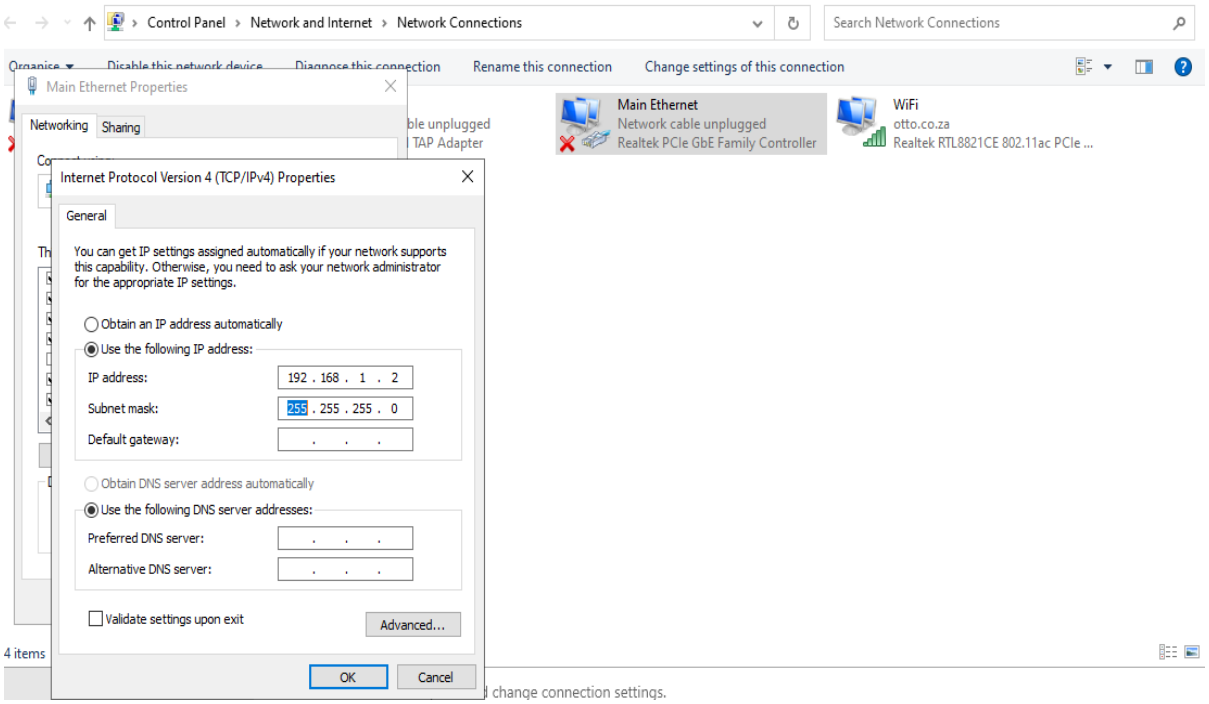


3. Open command prompt to ping 192.168.1.1 -t
4. Press RST button and hold it. Please don't release the RST button
5. Power on the Router, then release the RST button after 15 seconds
6. Input 192.168.1.1in URL or IE browser. The router will enter CFE upgrade mode as following

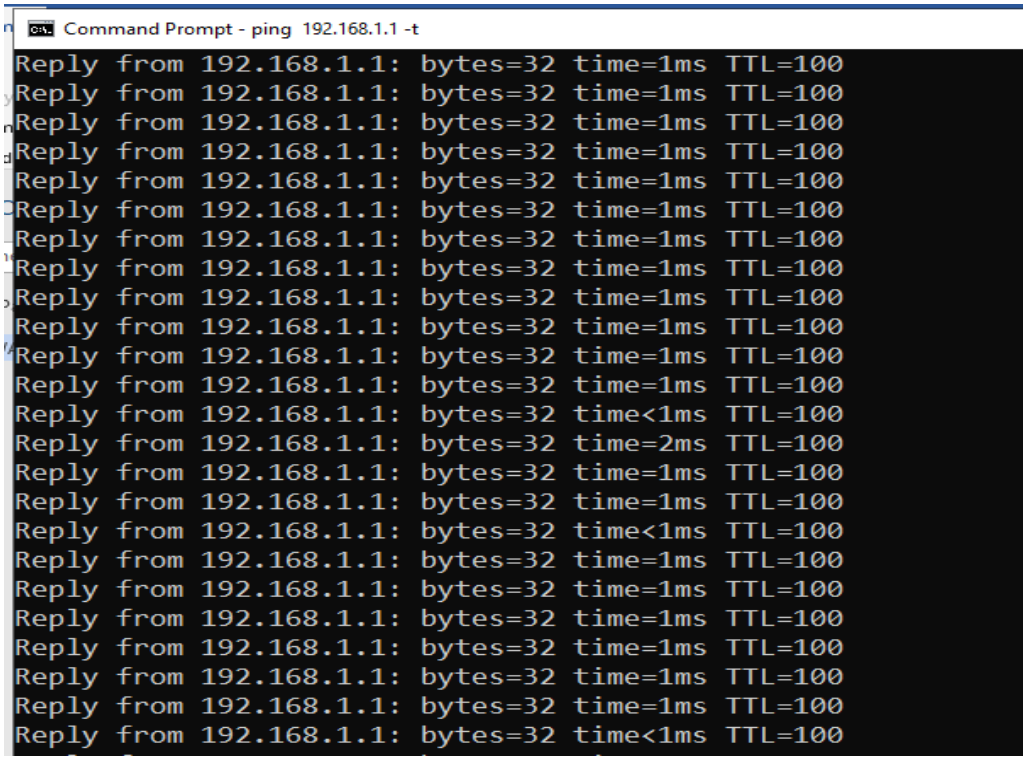

7. Choose firmware and click upload.

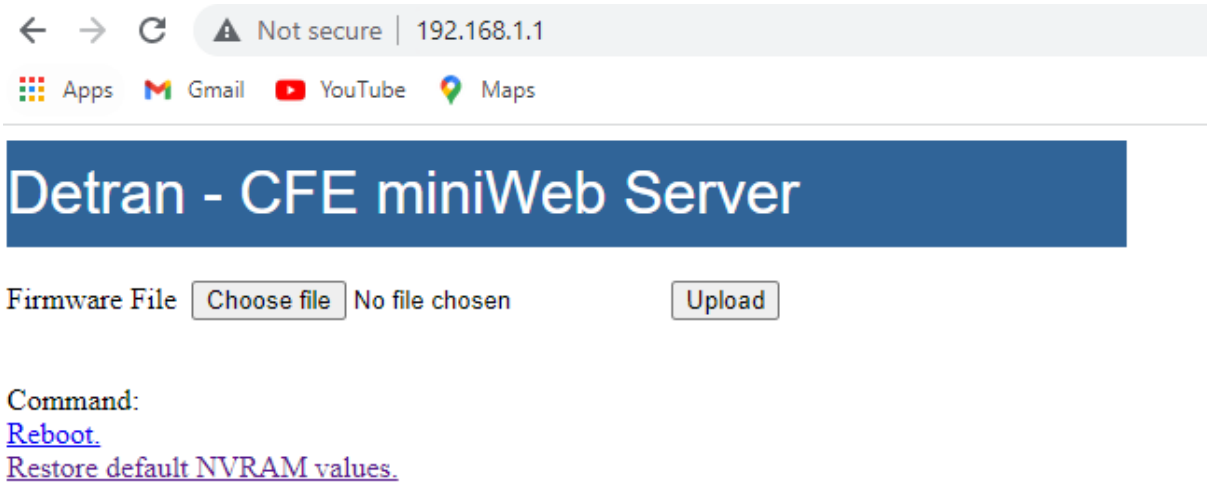


8. The Firmware will be uploaded into the router successfully

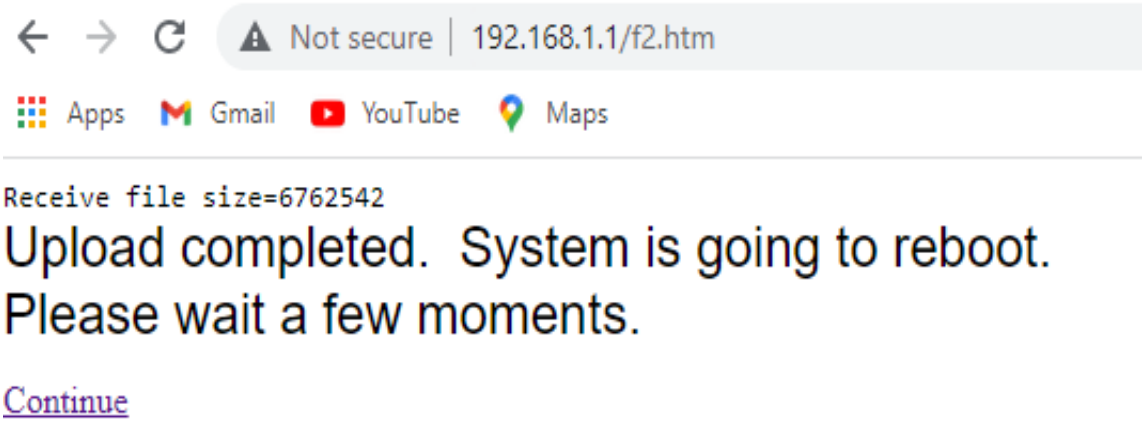
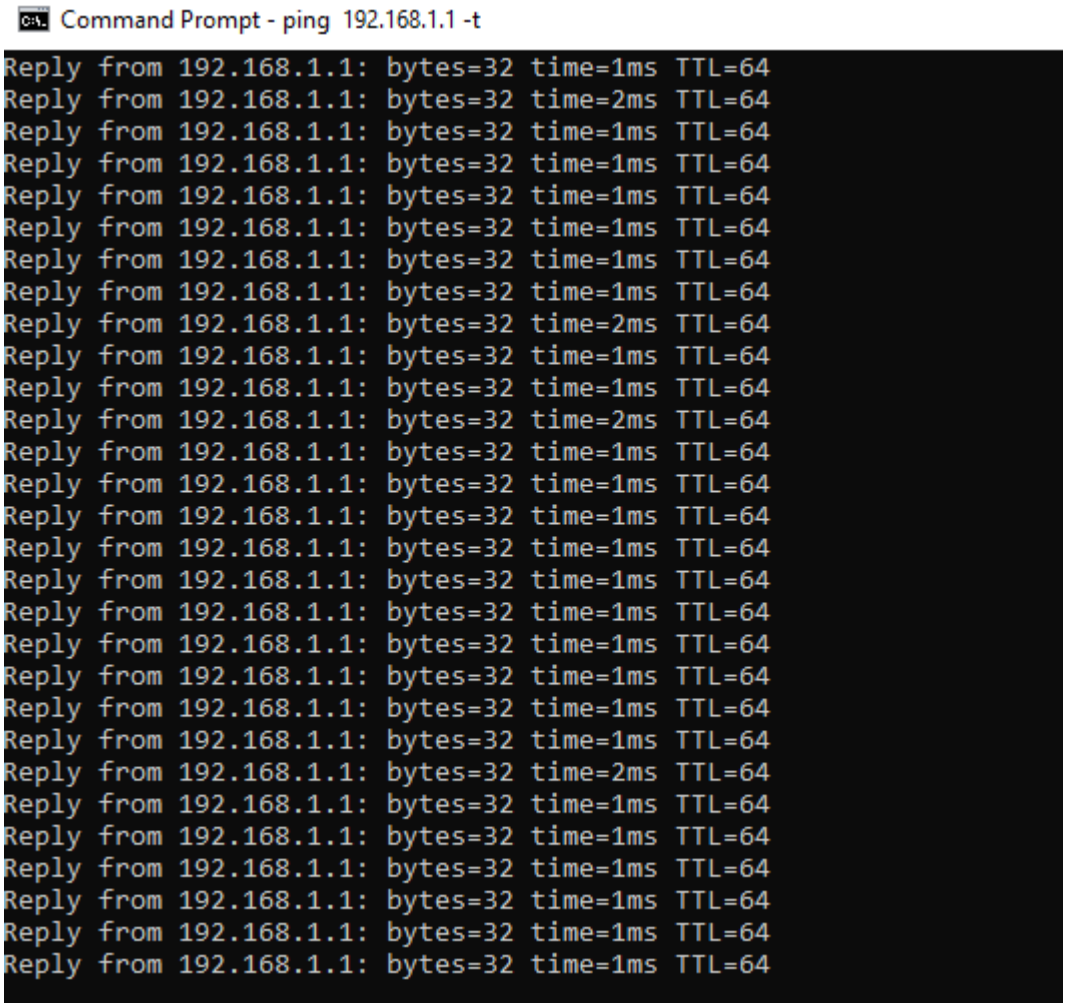
9. The router will upgrade firmware automatically. Please don’t power off the router. The process will take few minutes/seconds.