HÄFELE

English

INSTRUCTION MANUAL

PRODUCTS NAME: Cordless Stick Vacuum Cleaner HSV-21G

Products Applied: 535.43.079

Important Safety Instructions and Warnings

Read all documents before using

The appliance is not to be used by children. Persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge may only use this appliance if they are supervised or have been given instruction about how to use it safely and understand what risks are involved. Children should be supervised to ensure they do not play with the device.

Storage

Please take it gently and carefully to avoid breaking the device;
Please don't use it close to fire source or in any location of high temperaturep;
Don't use or keep the cleaner in extreme climate conditions, e.g. cooling rooms, high temperature environment, suggested temperature of using and storage is 0-35^{O}C of indoor areas;
Please charge your cleaner at least every three months if you are not using it regularlly;

Before Use

Check the adapter cable and confirm it is in good condition;
Fully charge the cleaner before using if it's not used for long time;
Please make sure the hepa filter and stainless filter are installed properly;

In use

Don't use the cleaner in or near flammable or explosive conditions;
Don't use your cleaner to suck glass particles, needle, dirty water, ashes, or any other liquid;
Don't use your cleaner to suck cement, land plaster, wall plaster or toys, which may cause defects to the device;
Don't block your suction inlet or tube, clear the suction inlet and tube in time to retain good performance of cleaning and avoid motor defects; If the cleaner can't start working even when the battery is full, please go to service agent or distributors for inspection, don't disassemble it on your own;
Don't use the cleaner if dust bin is not in position;

In maintenance

Dry cloth is suggested to clean the cleaner, no gas/alcohol or other chemical solution is allowed to clean the device;
Turn off the cleaner first before proceeding with any cleaning task or maintenance;
Please clean the dust box, suction inlet and tube in time to avoid air channel being blocked, air channel blockage would reduce suction power and cause motor heating;
Hepa filter is suggested to be replaced in three month, or even in shorter period if the device is used too offen.

Application of Power Adatper and Batterys

Use only the power adapter supplied with this device. Use of other type of power adapter will result in malfunction and/or danger.
Please use the proper electric outlet and make sure no heavy objects are placed on the power adapter or power cord.
Allow adequate ventilation around the adapter when using it to operate the device. Do not cover the power adapter with objects that will reduce cooling.
Do not use the adapter in a high moisture environment. Never handle the adapter with wet hands.
Connect the adapter to a proper power source. The voltage requirements are found on the adapter.
Do not use broken adapter, power cord or plug. The plug must be removed from the receptacle before cleaning or maintaining the Appliance. Do not unplug the Power Adapter by pulling on the power cord.
Do not attempt to service the adapter. There are no service parts inside. Replace the whole unit if it is damaged or exposed to high moisture. Consult your dealer for help and maintenance.
The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, short contact, heat above 60^{O}C(140^{O}F), or incinerate.
If you have to dispose of this old equipment, please take it to the local recycling center for recycling electrical and electronic parts.
Retain the safety and operating instructions for future reference.
Do not expose your device to rain or excess humidity, and keep it away from liquids (such as beverages, faucets, and so on).
Avoid exposing your device to direct sunlight or intense light source, and keep it away from heat source (such as radiators, space heaters, stoves, and so on).
On waxed floors the movement of the cleaner head may create an uneven lustre. If this happens, wipe with a damp cloth, polish the area with wax, and wait for it to dry.
The Appliance must be disconnected from the receptacle before removing the battery for disposal of the Appliance.
The Appliance must be used in accordance with the directions in this Instruction Manual.
Product manufacturer cannot be held liable or responsible for any damages or injuries caused by improper use.

1. Product Description

1.1 The main frame of the product

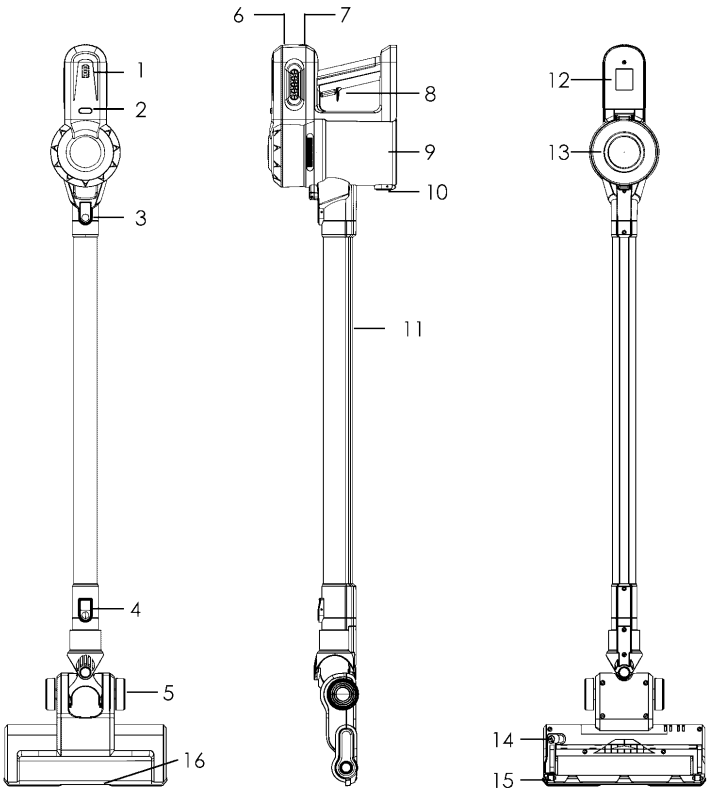

Product diagram

1	Battery Indicator	5	Big assist wheel	9	Dust box	13	Dust box hook
2	Release Button of battery pack and dust box	6	Charging port	10	Dust box release button	14	Release button of B-Beater Brush
3	Tube upper buttonl	7	Release Button of battery pack and handle	11	Aluminum tube	15	Small assist wheel
4	Tube lower button	8	Switch/Power shift button	12	Mounting groove	16	LED Light

1.2 Introduction of Brush Sets

B-BEATER Brush Set: motorized brush set to clean hard floors like marble, wooden floors, laminated floors,carpets with long/short rugs, etc.

B-CAR Brush Set: it is suitable for cleaning places with small gaps or similar, like gaps between windows/doors, vehicle seats, storage cases, etc.

B-CREVICE Brush Set: it has a shrinkable bristle brush to vacuum hard-to-reach areas like windowsill,sofa gaps, inside closet, book shelves, inside computer cases, etc.

B-MATTRESS Brush Set: it is good to clean sofa, beds, or curtains that are of textile fabrics and dust mite, etc.

1.3 Vacuuming Power Modes

Standard Power Mode
Press Switch for once to turn on and enter Standard Power Mode, with vacuuming power of around 5KPA that can be used for around 45 minutes if with motorized brush sets and around 55 minutes if with non-motorized brush sets;

SUPER Power Mode
When your machine is on, press the Switch again to enter Super Power Mode that provides around 10KPA vacuuming power for around 25 minutes working time with motorized brush sets and around 35 minutes vacuuming with non-motorized brush sets.

2. Operation

2.1 Switch on/off and vacuuming mode options

Press Switch once to turn on the and enter STANDARD Power Mode, press again to enter SUPER Power Mode.
When the device is running in Standard Mode, press once the Switch to change to Super Mode;
When in Super Mode, press the Switch to turn off your V6.

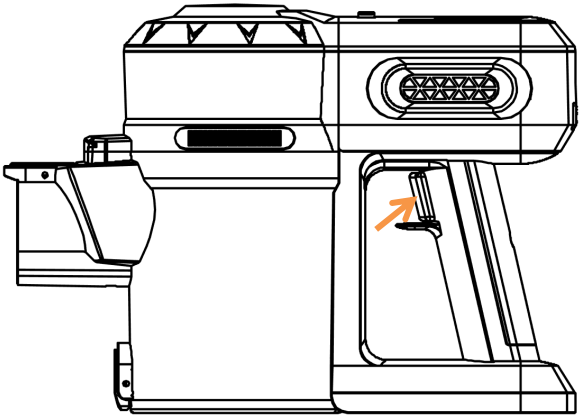

Switch/Power Mode Button

2.2 Introduction and Switching of other brush sets

Hafele HSV-21G has multiple brush sets, including the main motorized B-Beater brush sets, there are other brush sets for different purpose of vacuuming, include brush sets of B-Mattress, -Car, B-Crevice.

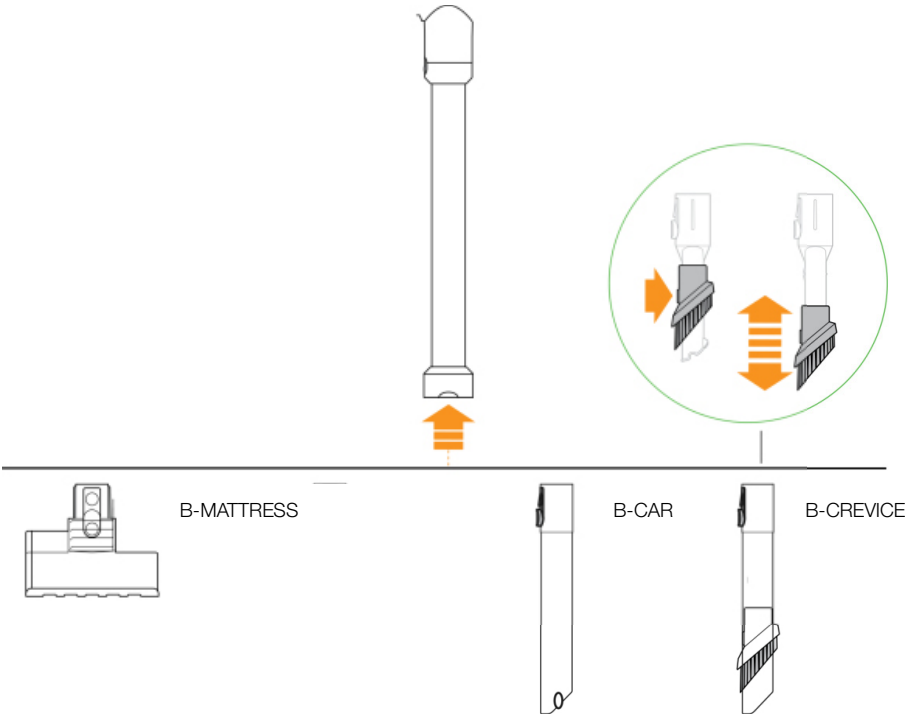

While the accessories provided for some models are slightly different, they are subject to the actual product.

2.3 Charging

After connecting the adapter with the power supply and device, the battery indicator light flashing from low to high means it is in charging. Battery is fully charged if all the indicator lights are illuminated without flashing.
Attention:
1. The battery level may be low when you use it for the first time. Please fully charge it.
2. When there is only one LED light working on the indicator light, please charge the battery.
3. The cleaner will be switched off automatically to protect the battery when battery level is too low, please charge battery fully before using.
4. The indicator light will be off automatically in minutes after battery is fully charged.
5. The cleaner can't be switched on in charging.

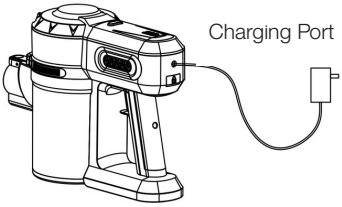
Charging Port

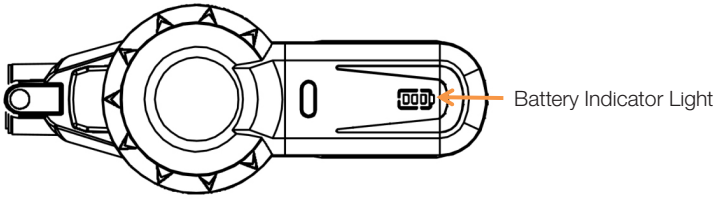
Battery Indicator Light

3. Maintenance

3.1 Battery pack installation

As below images show, install the battery pack on the handle properly until you hear CLICK sound

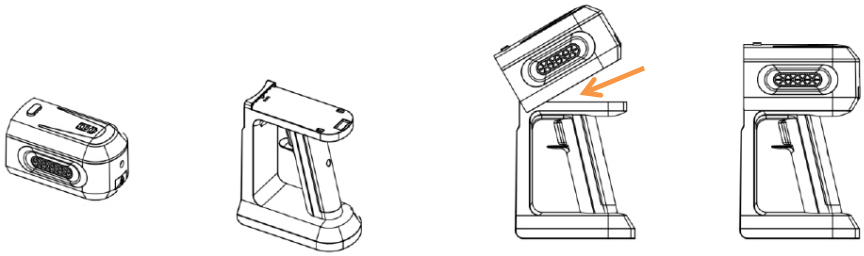

3.2 Disassemble battery pack

Press the Release Button of battery and handle as below images to disassemble the battery pack.

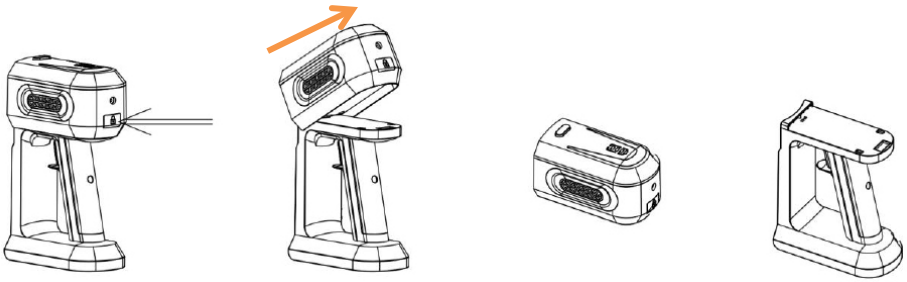

3.3 Handle installation

Put the handle on dust box hook and press them properly until you hear CLICK sound.

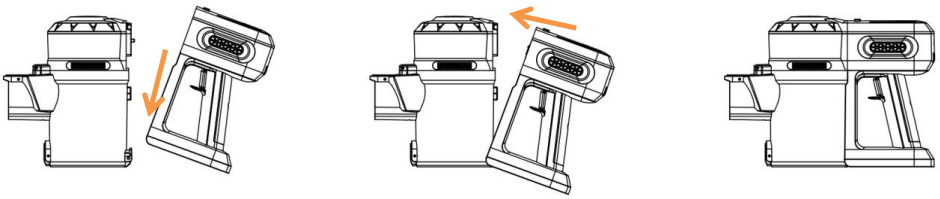

3.4 Disassemble handle

Press the Release Button of battery pack and dust box to disassemble the handle.

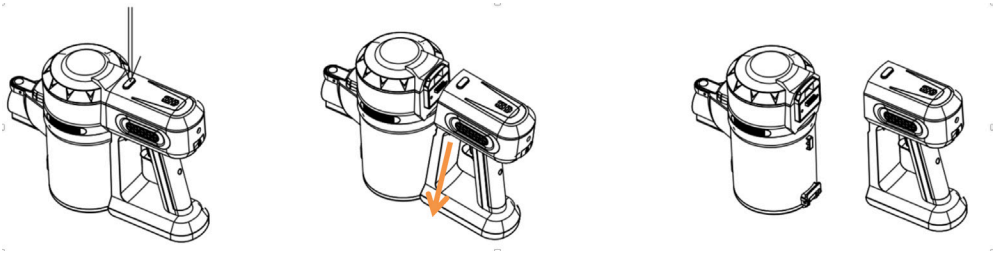

3.5 Empty dust box

Press the Release Button of dust box to empty it.

> ! **NOTE:** Turn off the cleaner before emptying dust box.
> Please put the dust box on above of trash bin when empty the cleaner's dust box.

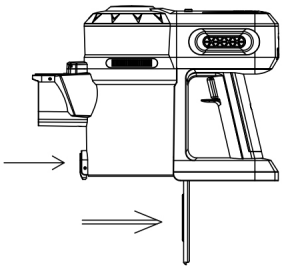

3.6 Disassemble dust box

Rotate the motor set in anti-clockwise direction to disassemble the dust box

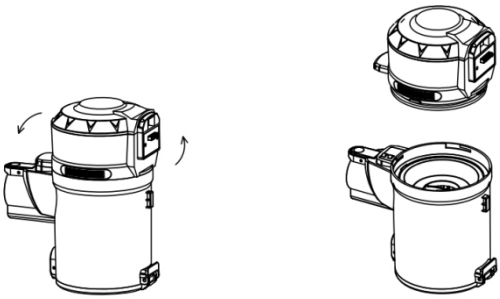

3.7 Disassemble hepa filter

Rotate the Hepa filter in anti-clock wise direction to take it out and dusting debris inside the filter

> ! **NOTE:** : If the stainless filter or hepa filter are rinsed in water, please don't use until thoroughly dry

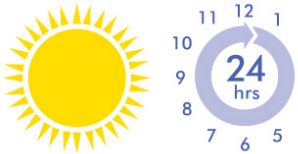

3.8 Disassemble aluminum tube

Press the Release Buttons of aluminum tube to take off tube from the brush set and cleaner head.

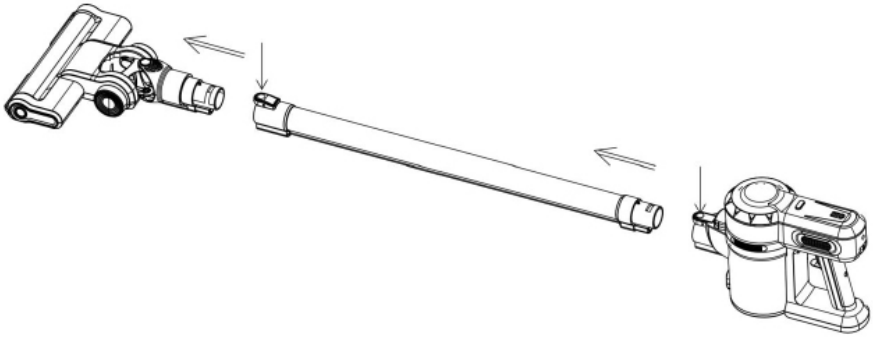

3.9 Disassemble and clean the motorized brush set

1. Turn off the cleaner and put motorized brush set up-side-down, use a coin to rotate the Release Button of B-Beater Brush set in anti-clock wise direction, take off the brush bar.
2. Clean dust, hair, fabric particles on the brush bar with your cleaning tool, cut hair with knife or scissor if the brush bar is tangled.
3. Please make sure the brush bar is dried thoroughly before second use.

> ! **NOTE:** Please switch off your cleaner, take off the brush set from tube before cleaning, children are prohibited from cleaning it in case of personal injury.

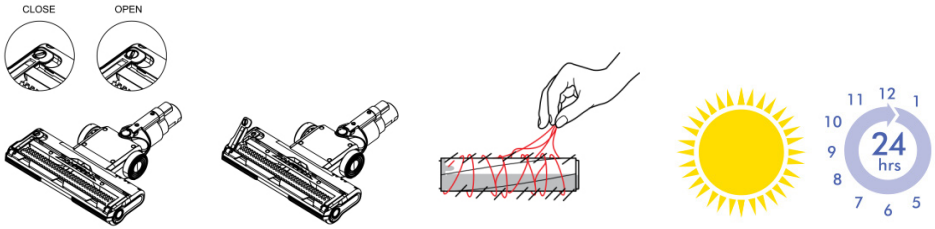

3.10 Cradle installation

It is suggested that the vacuum cleaner's brush set can touch floor surface in a proper position. Therefore, the cradle's position is recommended with the same height as the cleaners straight height from floor surface. Fix the cradle on the wall with provided screws and expansion pipes (Don't hang the cleaner in air without touching floor because it may cause damage)

> ! **NOTE:** Ensure no pipe work (gas, water, air) or electrical cables, wires or ductwork are located directly behind the mounting area. The docking station must be mounted in accordance with regulations and applicable codes/standards (state and local laws may apply).

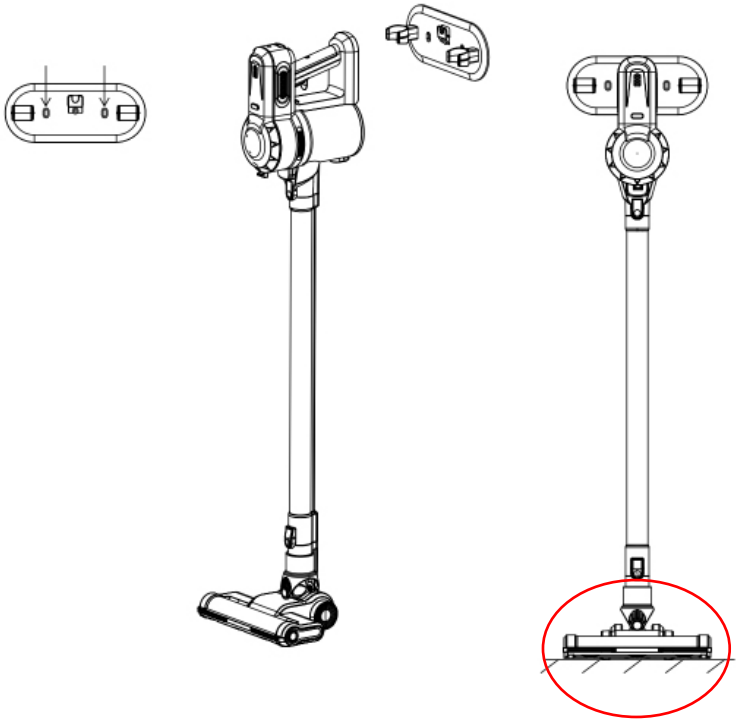

3.11 Disassemble B-Mattress brush set

Press Release Button of the tube to release the brush set, then take it off from the cleaner's head.

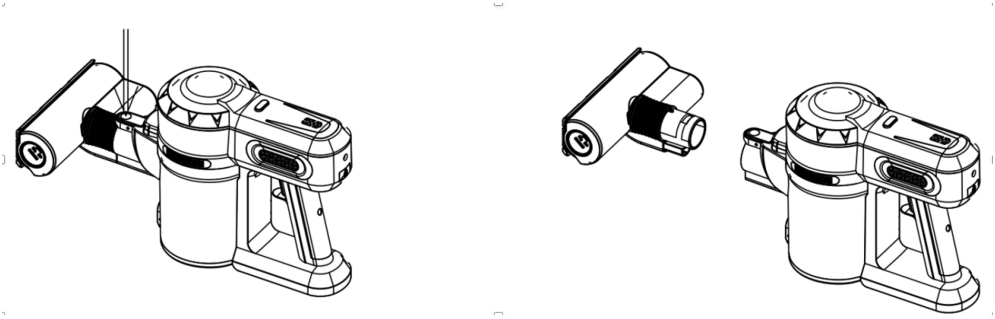

4. Parameters

DescCordless stick vacuum cleaner Hafele HSV-21G

Model: HSV-21G Rated Voltage(V): DC 22.2V

Rated Power(W): 100W Battery Capacity (mAh): 600mAh

Vacuum Power(kPa): ≤10kPa Dust box Capacity(L): 0.6L

Charging time: About 5hrs Noise Level (dB): ≤75dB

Working time (Standard/Super): Around 50min/25min

Charging Voltage: DC 26.5V Charging Current: 0.5A

Dimension: 116*25*20cm Materials: ABS, PC

Standards:
GB4706.1-2005, GB4706.7-2014 GB4343.1-2009, GB17625.1-2012
EU directive 2011/65/EU, directive 2014/35/EU, directive 2014/30/EU

5. What's in the box

Description	Qty	Remarks
Main frame body	1pcs	
Motorized B-BEATER Brush Set	1pcs	
Motorized B-Mattress Brush Set	1pcs	
B-CAR Brush Set	1pcs	
B-CREVICE Brush Set	1pcs	
Aluminum Tube	1pcs	
Battery Pack	1pack	
Adapter	1pcs	AC 100-240V
Cradle	1set	Contains screws and expansion pipes
Dust Box Cleaning Tool	1pcs	For clearing dust box
User Manual	1pcs	

6. Troubleshooting

If there is any failure of the V6 vacuum cleaner, please follow below solutions to check and solve the problems. If none of the solutions is workable, please contact Mamibot distributor or authorized agent for repairing and further solutions.

Failures	Possible Causes	Solutions
Failure of motorized brush bar	Brush bar is tangled by cable, hair or other trashes	Clean the brush bar
The first LED light flashes, vacuum motor doesn't work	Low battery	Charge the battery
The middle LED light flashes, vacuum motor doesn't work	Battery pack is over heated or over cooled	Move the cleaner to indoor location with regular temperature (0-35) and cool it down to restart
Three LED lights flash vacuum motor doesn't work	Cleaner in over-current protection	Check if the brush bar/alumi-num tube are blocked, clear the blockage
Shorter running time	Aged battery pack	Replace the battery
	Over heated or over cooled battery	Cool down and restart
	Non-fully charged battery pack	Charge the battery
The middle LED light flashes, can't be charged	Over heated or over cooled battery	Keep the cleaner cooled down, restart for regular use thereafter
Weaker vacuuming power	Dust box overfilled	Empty dust box in time
	Stainless filer or hepa filler blocked	Clean the filters in time
	Non-dried filters after washing	Thoroughly dry filters after washing
	Air channel is blocked	Check air channel and take out blocked debris
No LED indicator or flashing when charging	Adapter is not plugged in properly	Check the adapter connection with both power supply and charging port, make sure they are in position
Battery leakage	Battery reaches life time or in no use for long time	Replace the battery

HÄFELE

HƯỚNG DẪN SỬ DỤNG

Vietnamese

TÊN SẢN PHẨM: Máy hút bụi cầm tay HSV-21G

Mã sản phẩm áp dụng: 535.43.079

Hướng dẫn và Cảnh báo An toàn Quan trọng

Đọc tất cả các tài liệu trước khi sử dụng
Trẻ em không được sử dụng thiết bị. Những người bị suy giảm khả năng thể chất, giác quan hoặc tinh thần, hoặc thiếu kinh nghiệm và kiến thức chỉ có thể sử dụng thiết bị này nếu họ được giám sát hoặc được hướng dẫn về cách sử dụng an toàn và hiểu những rủi ro liên quan. Trẻ em nên được giám sát để đảm bảo chúng không nghịch thiết bị.

Bảo quản
Hãy nhẹ nhàng và cẩn thận để tránh làm vỡ thiết bị;
Vui lòng không sử dụng thiết bị gần nguồn lửa hoặc ở bất kỳ vị trí nào có nhiệt độ cao;
Không sử dụng hoặc bảo quản máy hút bụi trong điều kiện khí hậu khắc nghiệt, ví dụ: phòng làm lạnh, môi trường nhiệt độ cao, nhiệt độ đề xuất sử dụng và bảo quản là 0-35^{O}C khu vực trong nhà;
Vui lòng sạc máy hút bụi ít nhất ba tháng một lần nếu không sử dụng thường xuyên;

Trước khi sử dụng
Kiểm tra cáp bộ chuyển đổi nguồn điện và xác nhận rằng ở trong tình trạng tốt;
Sạc đầy máy hút bụi trước khi sử dụng nếu không sử dụng trong một thời gian dài;
Hãy đảm bảo rằng bộ lọc hepa và bộ lọc không gỉ được lắp đặt đúng cách;

Trong khi sử dụng
Không sử dụng máy hút bụi trong hoặc gần các điều kiện dễ cháy hoặc nổ;
Không sử dụng máy hút bụi để hút các mảnh thủy tinh, kim tiêm, nước bẩn, tro hoặc bất kỳ chất lỏng nào khác;
Không sử dụng máy hút bụi để hút xi măng, vữa trát đất, vữa trát tường hoặc đồ chơi, những thứ có thể gây ra lỗi cho thiết bị;
Không chặn đầu vào hoặc ống hút, thông tắc đầu vào và ống hút kịp thời để duy trì hiệu suất làm sạch tốt và tránh các lỗi cho động cơ;
Nếu máy không thể bắt đầu hoạt động ngay cả khi pin được sạc đầy, vui lòng đến đại lý dịch vụ hoặc nhà phân phối để kiểm tra, không tự tháo rời thiết bị;
Không sử dụng máy hút bụi nếu hộp chứa bụi không để đúng vị trí;

Khi bảo trì
Nên dùng vải khô để lau máy hút bụi, không được dùng xăng dầu/cồn hoặc dung dịch hóa chất khác để lau thiết bị;
Trước tiên, hãy tắt máy trước khi tiếp tục bất kỳ công việc làm sạch hoặc bảo trì nào;
Hãy làm sạch hộp đựng rác, cửa hút và ống hút kịp thời để tránh bị tắc ống dẫn khí, vì tắc nghẽn ống dẫn khí sẽ làm giảm công suất hút và gây nóng động cơ;
Đề xuất thay thế Bộ lọc Hepa sau ba tháng hoặc có thể sớm hơn nếu thiết bị được sử dụng thường xuyên.

Sử dụng Bộ chuyển đổi nguồn điện và Pin

Chỉ sử dụng bộ chuyển đổi nguồn điện được cung cấp cùng với thiết bị này. Việc sử dụng loại khác sẽ dẫn đến sự cố và/hoặc nguy hiểm.
Vui lòng sử dụng ổ cắm điện thích hợp và đảm bảo không đặt vật nặng lên bộ chuyển đổi nguồn điện hoặc dây nguồn.
Cho phép thông gió đầy đủ xung quanh bộ chuyển đổi khi sử dụng để sạc thiết bị. Không che bộ chuyển đổi nguồn điện bằng các vật có thể làm giảm khả năng làm mát.
Không sử dụng bộ chuyển đổi trong môi trường độ ẩm cao. Không được cầm bộ chuyển đổi bằng tay ướt.
Kết nối bộ chuyển đổi với nguồn điện thích hợp. Các yêu cầu về điện áp được ghi rõ trên bộ chuyển đổi.
Không sử dụng bộ chuyển đổi, dây nguồn hoặc phích cắm bị hỏng. Phải rút phích cắm ra khỏi ổ cắm trước khi vệ sinh hoặc bảo trì Thiết bị. Không rút Bộ chuyển đổi nguồn điện bằng cách kéo dây nguồn.
Không cố gắng bảo dưỡng bộ chuyển đổi. Không có phụ tùng bảo dưỡng bên trong. Thay thế toàn bộ thiết bị nếu bị hỏng hoặc tiếp xúc với độ ẩm cao. Tham khảo ý kiến đại lý để được trợ giúp và bảo trì.
Bộ sạc được sử dụng trong thiết bị này có thể có nguy cơ cháy hoặc bỏng hóa chất nếu sử dụng sai. Không tháo rời, tiếp xúc gần, nhiệt độ trên 60 (140), hoặc đốt.
Nếu bạn phải vứt bỏ thiết bị cũ này, vui lòng mang nó đến trung tâm tái chế tại địa phương để tái chế các bộ phận điện và điện tử.
Giữ lại các hướng dẫn an toàn và vận hành để tham khảo trong tương lai.
Không để thiết bị của bạn tiếp xúc với nước mưa hoặc độ ẩm quá cao và để thiết bị tránh xa chất lỏng (chẳng hạn như đồ uống, vòi nước, v.v.).
Tránh để thiết bị của bạn tiếp xúc trực tiếp với ánh nắng mặt trời hoặc nguồn sáng mạnh và tránh xa nguồn nhiệt (chẳng hạn như bộ tản nhiệt, máy sưởi không gian, bếp, v.v.).
Trên sàn có sáp, chuyển động của đầu lau có thể tạo ra độ bóng không đồng đều. Nếu điều này xảy ra, hãy lau bằng khăn ẩm, đánh bóng bằng sáp và đợi cho khô.
Thiết bị phải được ngắt kết nối khỏi ổ cắm trước khi tháo pin để vứt bỏ Thiết bị.
Thiết bị phải được sử dụng theo hướng dẫn trong Sách hướng dẫn này.
Nhà sản xuất sản phẩm không chịu trách nhiệm về bất kỳ thiệt hại hoặc thương tích nào do sử dụng không đúng cách.

1. Mô tả sản phẩm

1.1 Cấu tạo chính của sản phẩm

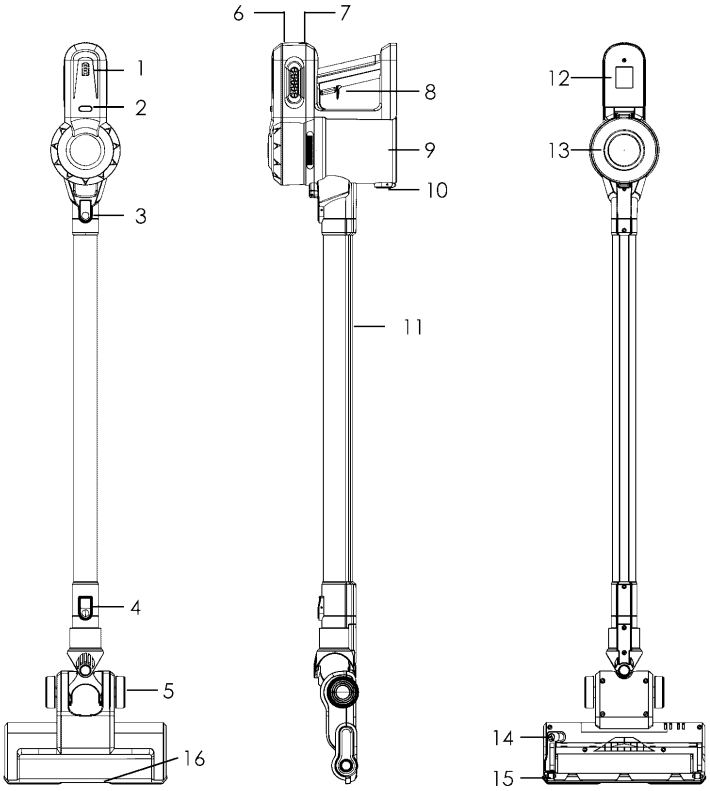

Sơ đồ sản phẩm

1	Đèn báo sạc	5	Bánh xe trợ lực lớn	9	Hộp đựng rác	13	Móc hộp chứa bụi
2	Nút mở bộ sạc và hộp chứa bụi	6	Cổng sạc	10	Nút mở hộp chứa bụi	14	Nút mở đầu chổi
3	Nút trên ống	7	Nút mở bộ sạc và tay cầm	11	Ống nhôm	15	Bánh xe trợ lực nhỏ
4	Nút dưới ống	8	Nút chuyển đổi tốc độ và tắt/bật nguồn	12	Rãnh lắp	16	Đèn LED

1.2 Giới thiệu các bộ bàn chải

Bộ chổi B-BEATER: bộ chổi xoay giúp làm sạch sàn cứng như đá cẩm thạch, sàn gỗ, sàn nhiều lớp, thảm dài/thảm ngắn, v.v.

Bộ chổi B-CAR: thích hợp để làm sạch những nơi có khoảng trống nhỏ hoặc tương tự, như khoảng trống giữa cửa sổ/cửa ra vào, ghế xe, hộp đựng đồ, v.v.

Bộ chổi B-CREVICE: nó có một chổi lông có thể co lại để hút bụi các khu vực khó tiếp cận như bệ cửa sổ, khoảng trống trên ghế sofa, bên trong tủ quần áo, kệ sách, bên trong hộp máy tính, v.v.

Bộ chổi B-MATTRESS: rất tốt để làm sạch ghế sofa, giường hoặc rèm cửa bằng vải dệt và mạt bụi, v.v

1.3 Chế độ hút chân không

Chế độ công suất tiêu chuẩn:
Nhấn nút công tắc một lần để bật và vào Chế độ Nguồn tiêu chuẩn với công suất hút bụi khoảng 5KPA, có thể sử dụng trong khoảng 45 phút nếu dùng bộ chổi xoay và khoảng 55 phút nếu dùng bộ chổi thường;

Chế độ công suất cao
Khi máy được bật, hãy nhấn tiếp vào nút Công tắc để vào Chế độ công suất cao với công suất hút bụi khoảng 10KPA trong thời gian làm việc khoảng 25 phút nếu dùng bộ chổi xoay và khoảng 35 phút hút bụi nếu dùng bộ chổi thường.

2. Vận hành

2.1 Bật/tắt và các tùy chọn chế độ hút bụi

Nhấn nút công tắc một lần để bật và vào Chế độ nguồn TIÊU CHUẨN, nhấn một lần nữa để vào Chế độ công suất cao.
Khi thiết bị đang chạy ở Chế độ Chuẩn, hãy nhấn một lần vào nút Công tắc để chuyển sang Chế độ công suất cao;
Khi ở Chế độ công suất cao, nhấn nút Công tắc lần nữa để tắt động cơ.

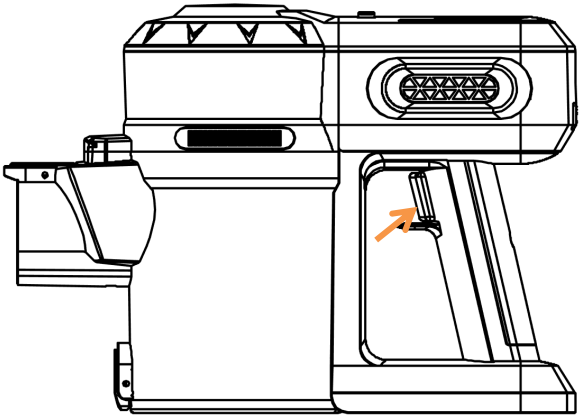

Nút chế độ nguồn/công tắc

2.2 Giới thiệu và chuyển đổi các bộ chổi khác nhau

Máy hút bụi Hafele HSV-21G có nhiều bộ chổi, bao gồm bộ chổi B-Beater xoay chính, còn có các bộ chổi khác cho các mục đích hút bụi khác nhau, bao gồm bộ chổi sử dụng cho đệm, xe ô tô và khe hở.

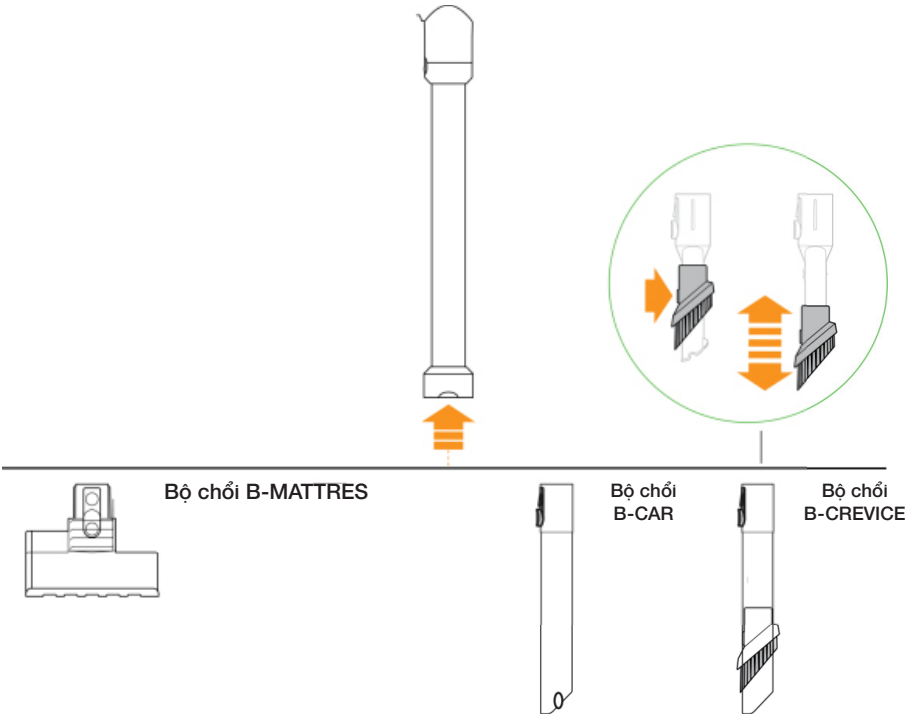

Mặc dù các phụ kiện được cung cấp cho một số kiểu máy sẽ hơi khác nhau nhưng chúng tùy thuộc vào sản phẩm thực tế.

2.3 Sạc điện

Sau khi kết nối bộ chuyển đổi nguồn điện với nguồn điện và thiết bị, đèn báo sạc điện nhấp nháy từ thấp đến cao có nghĩa là pin đang được sạc. Pin được sạc đầy nếu tất cả các đèn báo sáng và không nhấp nháy.
Chú ý:
1. Mức pin có thể yếu khi bạn sử dụng lần đầu tiên. Vui lòng sạc đầy nó.
2. Khi chỉ có một đèn LED hoạt động trên đèn báo, vui lòng sạc pin.
3. Trình dọn dẹp sẽ tự động tắt để bảo vệ pin khi mức pin quá thấp, vui lòng sạc đầy pin trước khi sử dụng.
4. Đèn báo sẽ tự động tắt trong vài phút sau khi pin được sạc đầy.
5. Không thể bật máy hút bụi khi đang sạc.

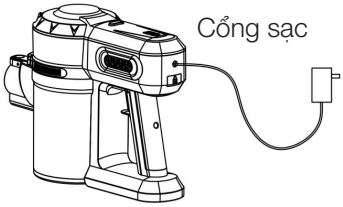
Cổng sạc

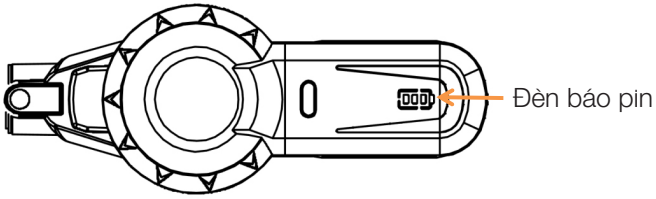
Đèn báo pin

3. Bảo trì

3.1 Lắp đặt bộ pin sạc

Như hình ảnh bên dưới cho thấy, hãy lắp bộ sạc vào tay cầm đúng cách cho đến khi bạn nghe thấy âm thanh LÁCH CÁCH.

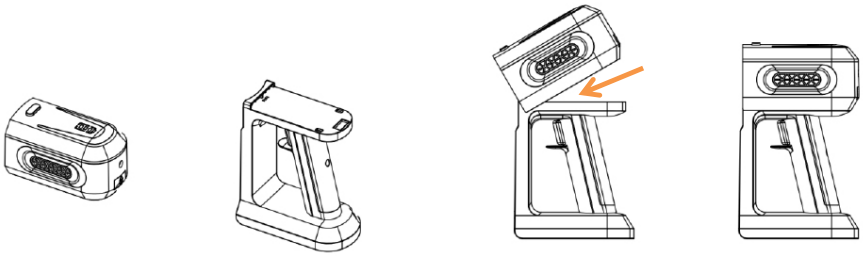

3.2 Bộ pin sạc tháo rời

Nhấn Nút tháo pin và xử lý như hình ảnh bên dưới để tháo rời pin.

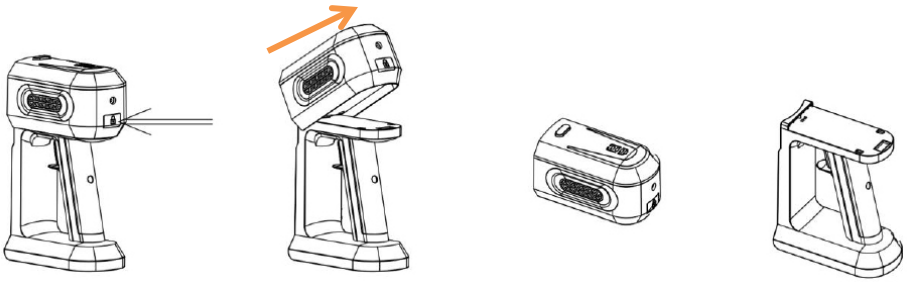

3.3 Lắp tay cầm

Đặt tay cầm vào móc hộp đựng rác và ấn chúng đúng cách cho đến khi bạn nghe thấy âm thanh LÁCH CÁCH.

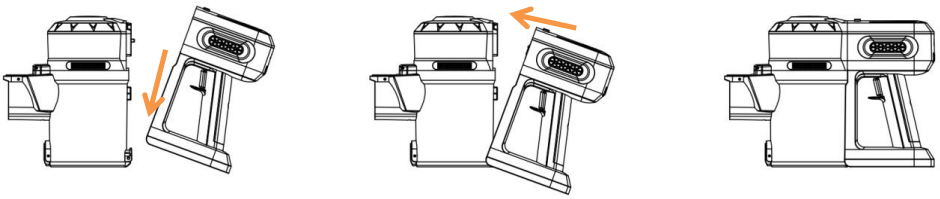

3.4 Tay cầm tháo rời

Nhấn Nút mở bộ pin sạc và hộp đựng rác để tháo rời tay cầm.

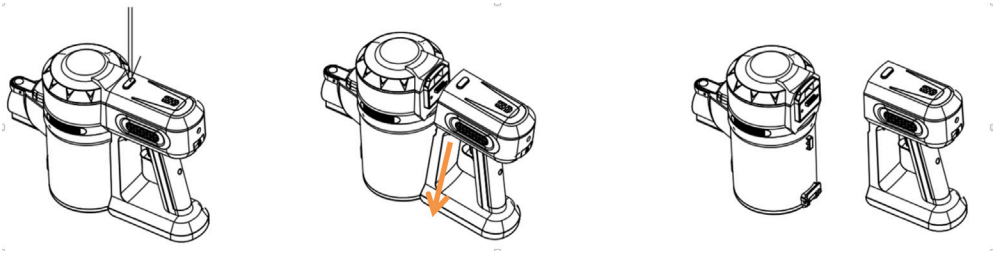

3.5 Đổ rác trong hộp chứa bụi

Nhấn Nút mở hộp chứa bụi để đổ rác.

> ! **LƯU Ý:** Tắt máy hút bụi trước khi đổ hộp chứa bụi.
> Vui lòng đặt hộp chứa bụi phía trên thùng rác khi đổ hộp chứa bụi của máy hút bụi.

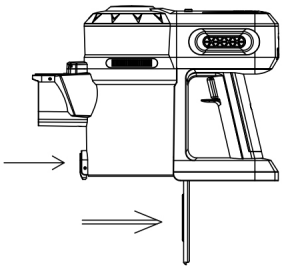

3.6 Hộp đựng rác tháo rời

Xoay bộ mô tơ theo hướng ngược chiều kim đồng hồ để tháo rời hộp đựng rác.

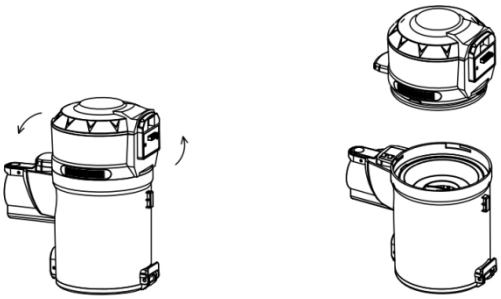

3.7 Bộ lọc hepa tháo rời

Xoay bộ lọc Hepa theo hướng ngược chiều kim đồng hồ để lấy ra và làm sạch các mảnh vụn bên trong bộ lọc.

> ! **LƯU Ý:** : Nếu bộ lọc không gỉ hoặc bộ lọc hepa được rửa bằng nước, vui lòng không sử dụng cho đến khi khô hoàn toàn.

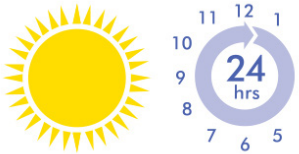

3.8 Ống nhôm tháo rời

Nhấn Các nút mở ống nhôm để tháo ống ra khỏi bộ chổi và đầu máy hút bụi.

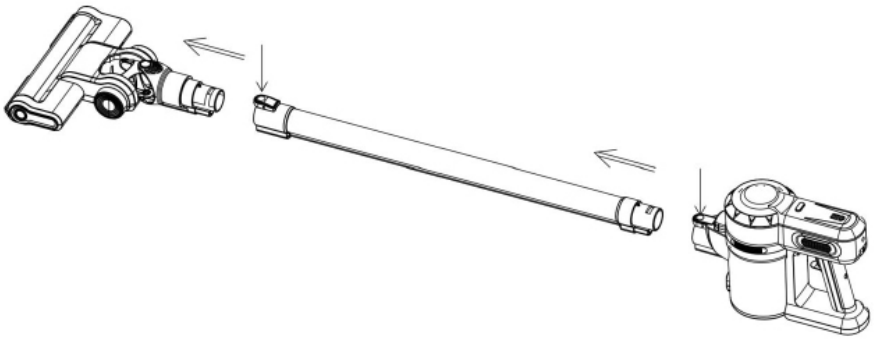

3.9 Tháo rời và làm sạch bộ chổi xoay

1. Tắt máy và lắp bộ chổi có động cơ từ trên xuống, sử dụng một đồng xu để xoay Nút mở bộ chổi B-Beater theo hướng ngược chiều kim đồng hồ, tháo thanh chổi.
2. Làm sạch bụi, tóc, mảnh vải trên thanh chổi bằng dụng cụ làm sạch của bạn, cắt tóc bằng dao hoặc kéo nếu thanh chổi bị rối.
3. Hãy đảm bảo rằng thanh chổi đã được làm khô hoàn toàn trước khi sử dụng lần thứ hai.

> ! **LƯU Ý:** Vui lòng tắt máy, tháo bộ chổi ra khỏi ống trước khi làm sạch, cấm trẻ em vệ sinh bộ chổi để đề phòng bị thương.

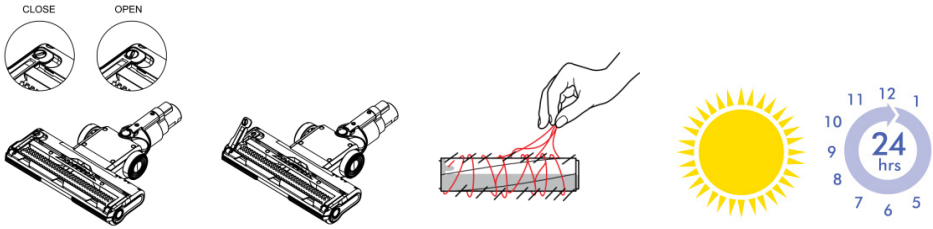

3.10 Lắp giá đỡ

Chúng tôi đề xuất bộ chổi của máy hút bụi có thể chạm vào bề mặt sàn ở một vị trí thích hợp. Do đó, vị trí của giá đỡ được đề xuất có cùng chiều cao với chiều cao thẳng của máy hút bụi so với bề mặt sàn. Cố định giá đỡ lên tường bằng vít và ống giãn nở đi kèm (Không treo máy hút bụi trên không mà không chạm vào sàn vì có thể gây hư hỏng)

> ! **LƯU Ý:** Đảm bảo không có công trình đường ống (khí đốt, nước, không khí) hoặc cáp điện, dây điện hoặc hệ thống ống dẫn nằm ngay phía sau khu vực lắp máy. Chỗ nối phải được gắn theo quy định và các tiêu chuẩn/bộ luật áp dụng (có thể áp dụng luật của tiểu bang và địa phương).

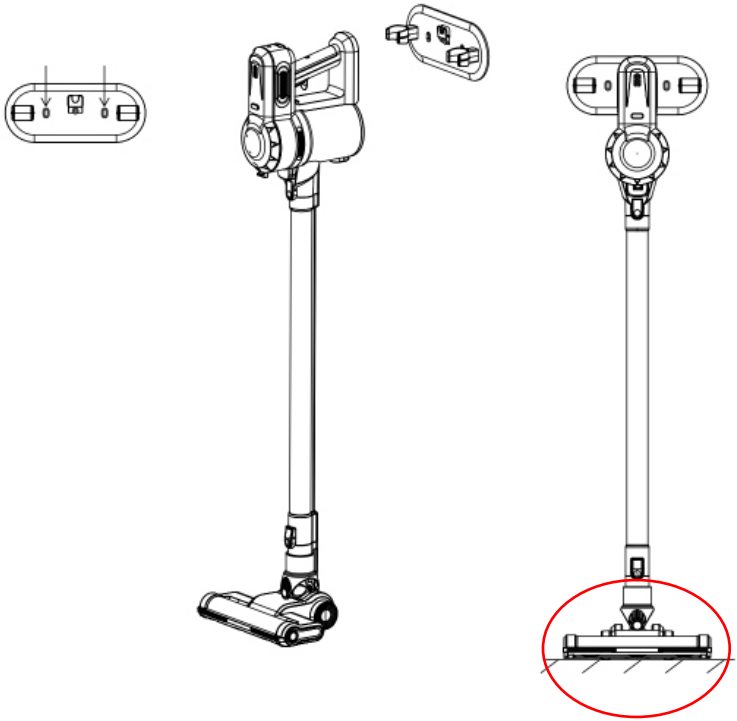

3.11 Tháo rời bộ chổi B-MATTRESS

Nhấn Nút mở ống để mở bộ chổi, sau đó tháo bộ chổi ra khỏi đầu của máy hút bụi

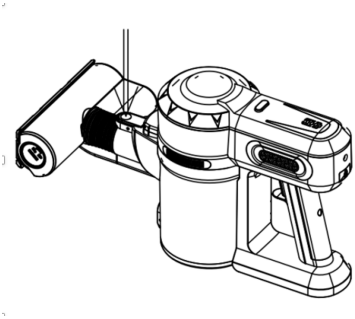

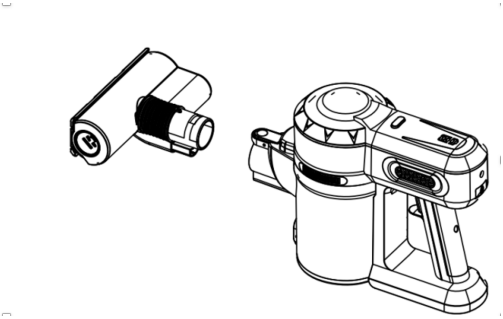

4. Thông số

Mô tả: Máy hút bụi không dây Hafele HSV-21G

Tên sản phẩm: HSV-21G Điện áp định mức (V): DC 22.2V

Công suất định mức (W): 100W Dung lượng pin (mAh): 2600mAh

Công suất hút (kPa): ≤10kPa Dung tích hộp chứa bụi (L): 0.6L

Thời gian sạc: Khoảng 5 giờ Mức ồn (dB): ≤75dB

Thời gian làm việc (công suất tiêu chuẩn/công suất cao): Khoảng 50 phút/25 phút

Điện áp sạc: DC 26.5V Dòng điện sạc: 0.5A

Kích thước: 116*25*20cm Vật liệu: ABS, PC

Các tiêu chuẩn:
GB4706.1-2005, GB4706.7-2014 GB4343.1-2009, GB17625.1-2012
Chỉ thị của EU 2011/65/EU, chỉ thị 2014/35/EU, chỉ thị 2014/30/EU

5. Có gì trong hộp

Mô tả	Số lượng	Ghi chú
Thân khung chính	1 cái	
Bộ chổi xoay B-Beater	1 cái	
Bộ chổi xoay B-Mattress	1 cái	
Bộ chổi B-CAR	1 cái	
Bộ chổi B-CREVICE	1 cái	
Ống nhôm	1 cái	
Bộ pin sạc	1 bộ	
Bộ chuyển đổi nguồn	1 cái	AC 100-240V
Giá đỡ	1set	Chứa vít và ống giãn nở
Dụng cụ làm sạch hộp đựng rác	1 cái	Để làm sạch hộp đựng rác
Hướng dẫn sử dụng	1 cái	

Mặc dù các phụ kiện được cung cấp cho một số kiểu máy sẽ hơi khác nhau nhưng chúng tùy thuộc vào sản phẩm thực tế.

6. Xử lý sự cố

Nếu có bất kỳ lỗi nào của máy hút bụi V6, vui lòng làm theo các giải pháp dưới đây để kiểm tra và khắc phục sự cố. Nếu không có giải pháp nào khả thi, vui lòng liên hệ với nhà phân phối hoặc đại lý được ủy quyền của Mamibot để được sửa chữa và đưa ra các giải pháp khác.

Sự cố	**Nguyên nhân có thể**	**Giải pháp**
Sự cố đối với thanh chổi xoay	Thanh chổi bị rối do dây cáp, tóc hoặc các rác khác	Vệ sinh thanh chổi
Đèn LED đầu tiên nhấp nháy, động cơ không hoạt động	Pin yếu	Sạc pin
Đèn LED ở giữa nhấp nháy, động cơ không hoạt động	Bộ pin quá nóng hoặc nhiệt độ quá thấp	Di chuyển máy hút bụi đến vị trí trong nhà với nhiệt độ bình thường (0-35) và làm mát máy để khởi động lại
Ba đèn LED nhấp nháy, động cơ không hoạt động	Máy hút bụi đang ở chế độ bảo vệ quá dòng	Kiểm tra thanh chổi/ống nhôm có bị tắc không, nếu có thì thông tắc
Thời gian hoạt động ngắn hơn	Bộ pin cũ	Thay pin
	Pin quá nóng hoặc nhiệt độ quá thấp	Làm nguội và khởi động lại
	Bộ pin không được sạc đầy	Sạc pin
Đèn LED ở giữa nhấp nháy, không sạc được	Pin quá nóng hoặc nhiệt độ quá thấp	Làm nguội nhiệt độ máy, khởi động lại để sử dụng thường xuyên sau đó
Công suất hút bụi yếu hơn	Hộp đựng rác đầy	Làm sạch hộp bụi
	Bộ lọc không gỉ hoặc bộ lọc hepa bị tắc	Làm sạch bộ lọc
	Bộ lọc không để khô sau khi rửa	Làm khô hoàn toàn bộ lọc sau khi rửa
	Ống hút không khí bị tắc	Kiểm tra ống dẫn khí và loại bỏ các mảnh vỡ bị tắc
Không có đèn báo LED hoặc không nhấp nháy khi sạc	Bộ chuyển đổi nguồn điện không được cắm đúng cách	Kiểm tra kết nối bộ chuyển đổi với cả nguồn điện và cổng sạc, đảm bảo chúng đã ở đúng vị trí
Rò rỉ pin sạc	Pin hết thời gian sử dụng hoặc không sử dụng trong thời gian dài	Thay pin

HÄFELE

Häfele VN LLC.
3rd Floor, REE Tower
9 Doan Van Bo Street,
District 4, Ho Chi Minh City
Phone: (+84 28) 39 113 113
Email: info@hafele.com.vn