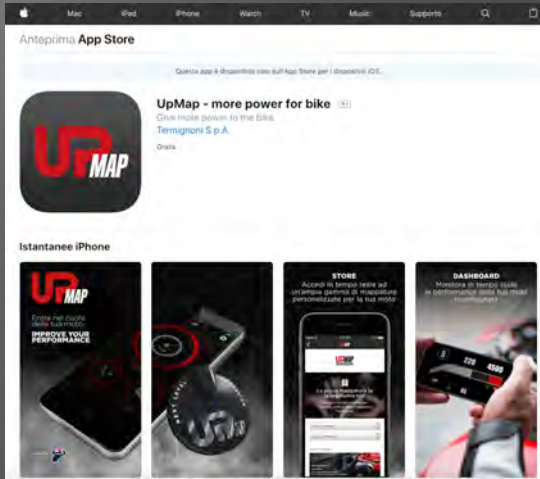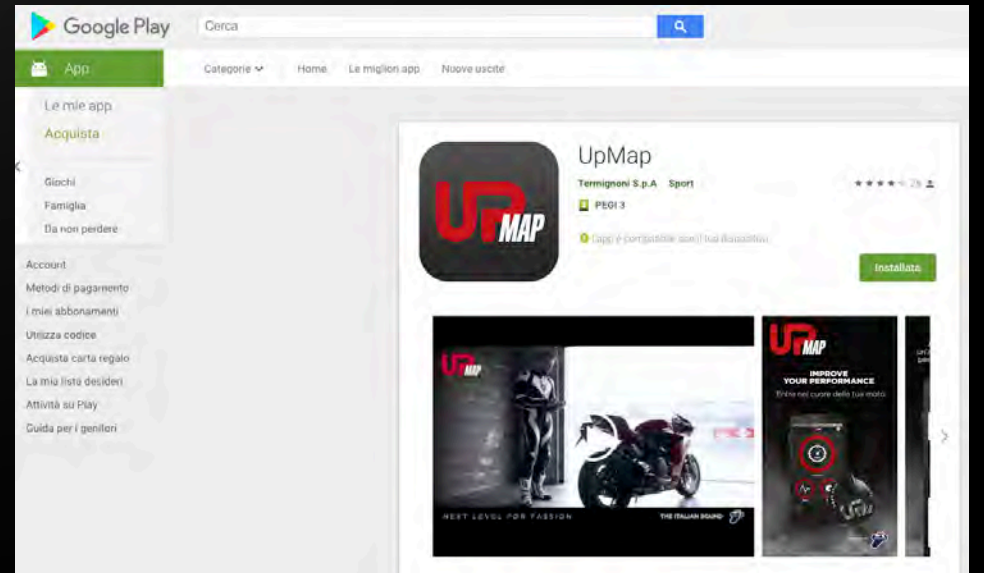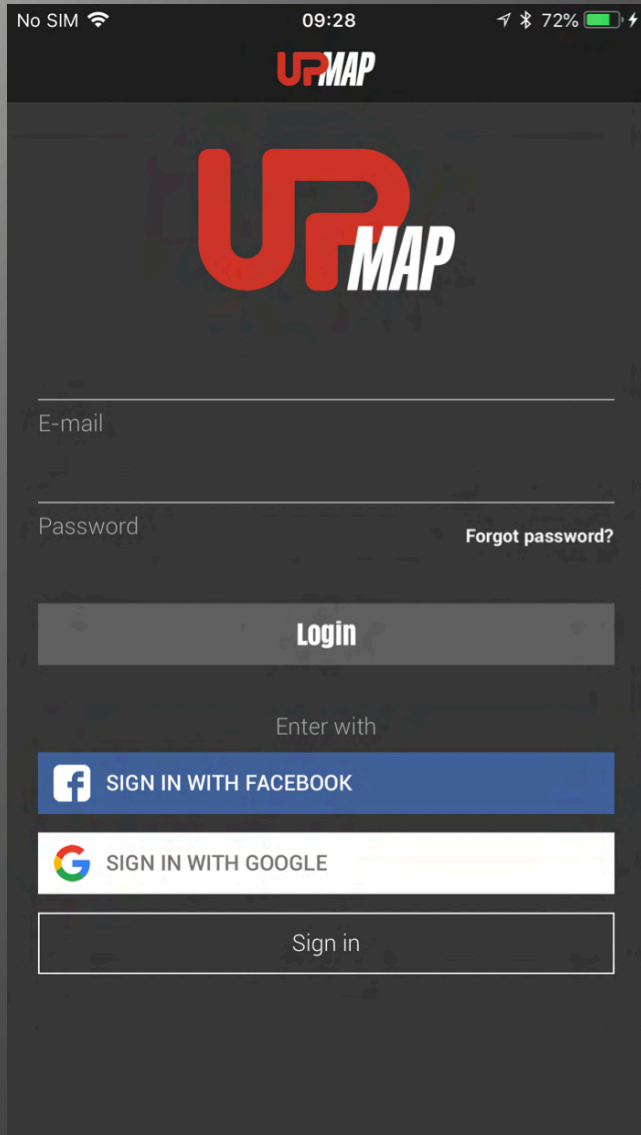# QUICK GUIDE Up-Map

For iOS smartphones, access the AppStore and install the app

For Android smartphones, access the Google Play Store and install the app

After installing the app, on first access you must proceed with **registration**.
There are 3 options:
- Through Facebook
- Through Google
- Through UpMap

UpMap Registration
Enter the required information and agree
to the Privacy Policy

Touch **GO** to proceed

Press **YES** to configure the T800

Do you want to configure your device?
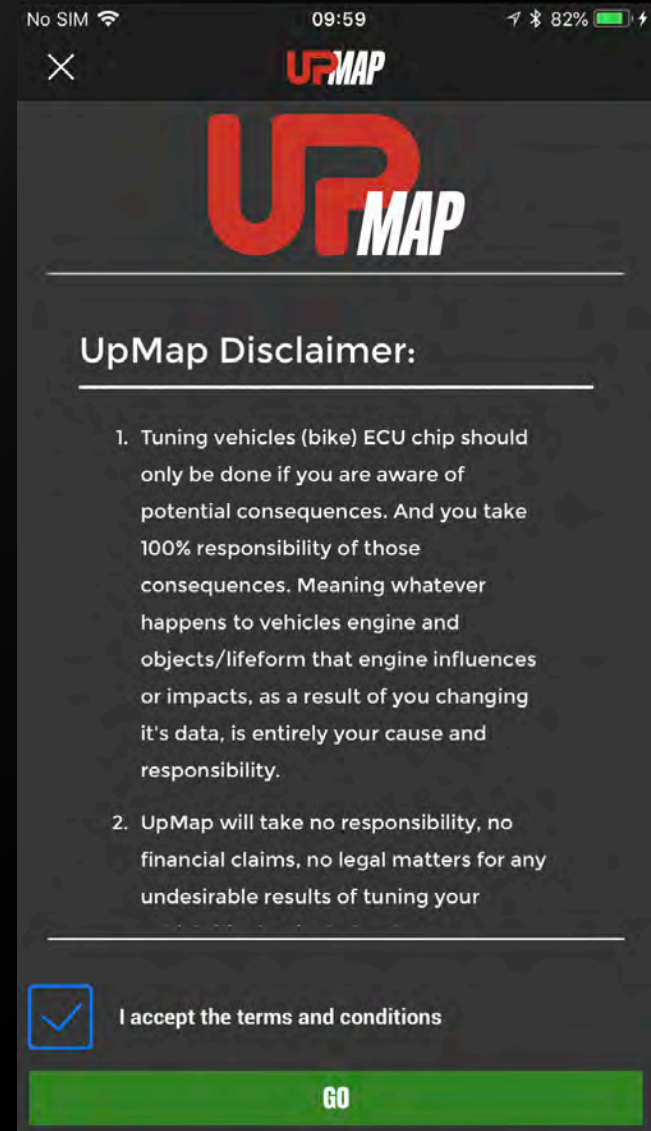
Read and check the text and accept the terms of use

During the configuration process, do not close the UpMap application and stay close to the vehicle

WARNING Before proceeding, make sure you have:
- the **T800** and the **connection cable** to the vehicle diagnostic socket
- a good **Internet** signal
- **Bluetooth** activated on the smartphone
- **Geolocation** activated on the smartphone

Press **GO** to proceed.

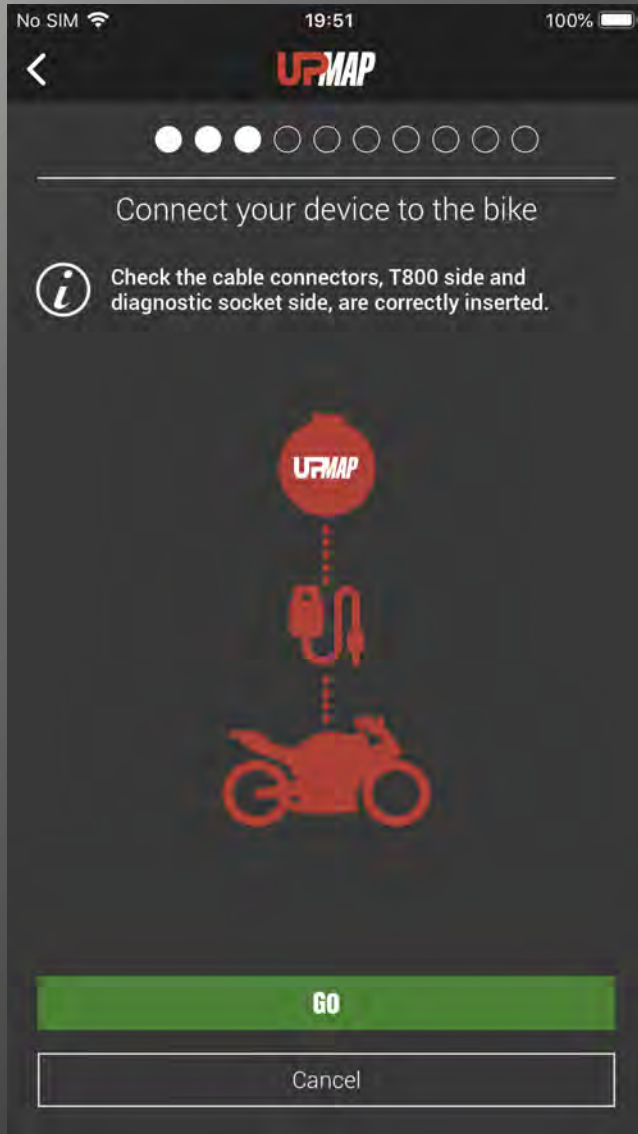Note: for smartphone settings, refer to your smartphone instructions
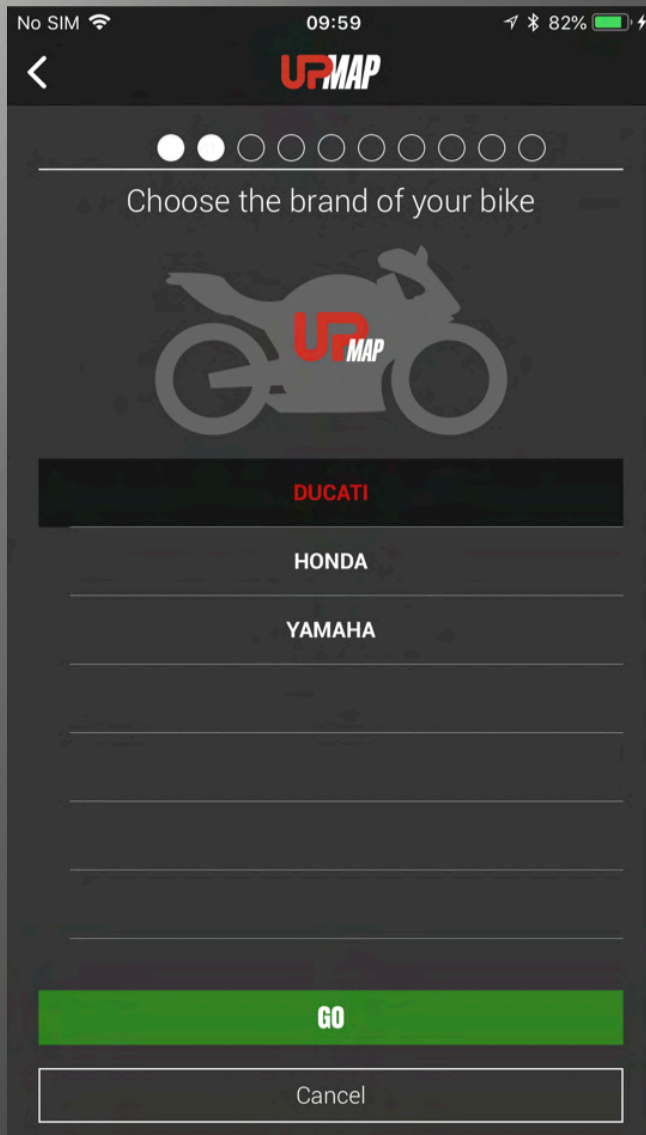
Select the brand and press **GO**

The displayed page details where to find the diagnostic socket for connection to the T800, once identified
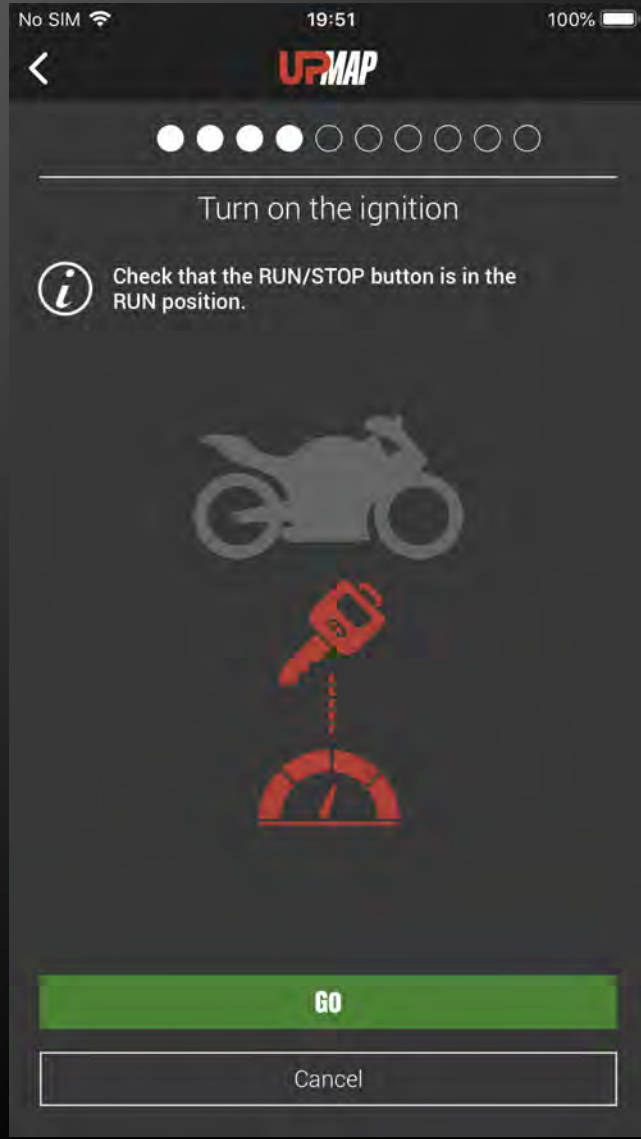
Press **GO**

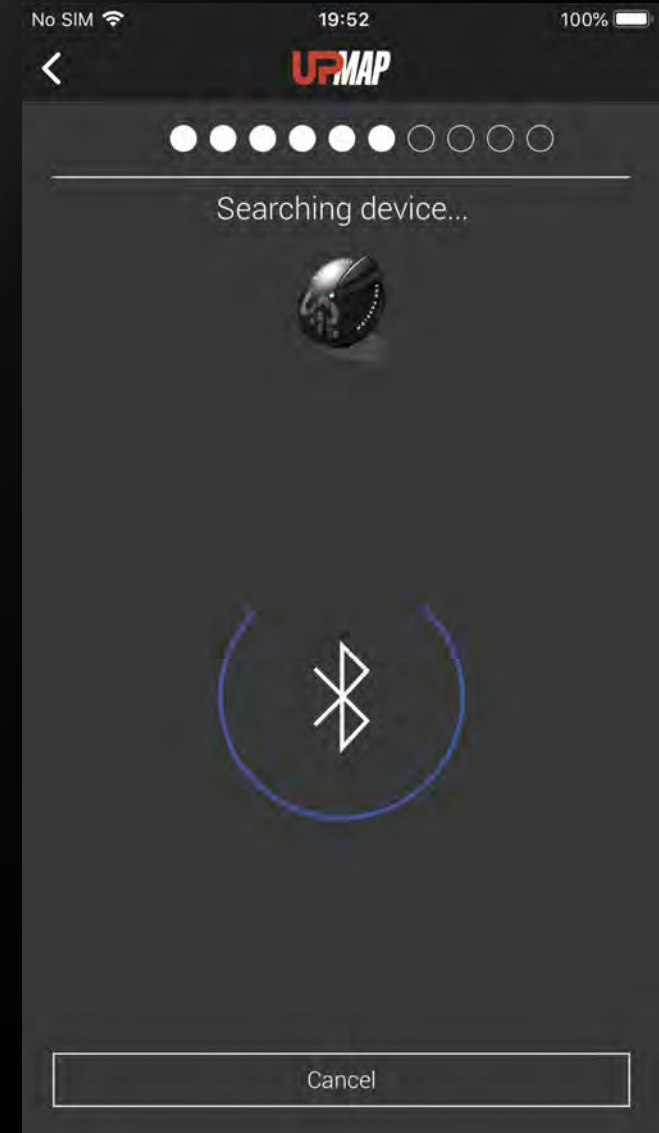Connect the T800 to the vehicle diagnostic socket and

Press **GO**

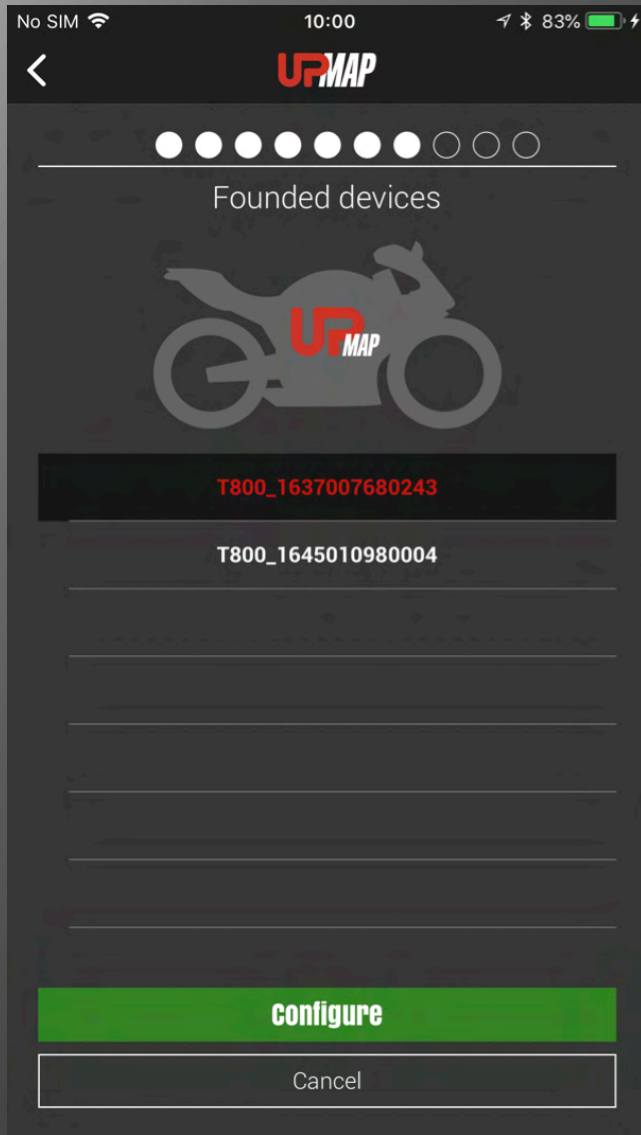Turn the key to ON and ensure the RUN/STOP button is set to RUN and

Press **GO**

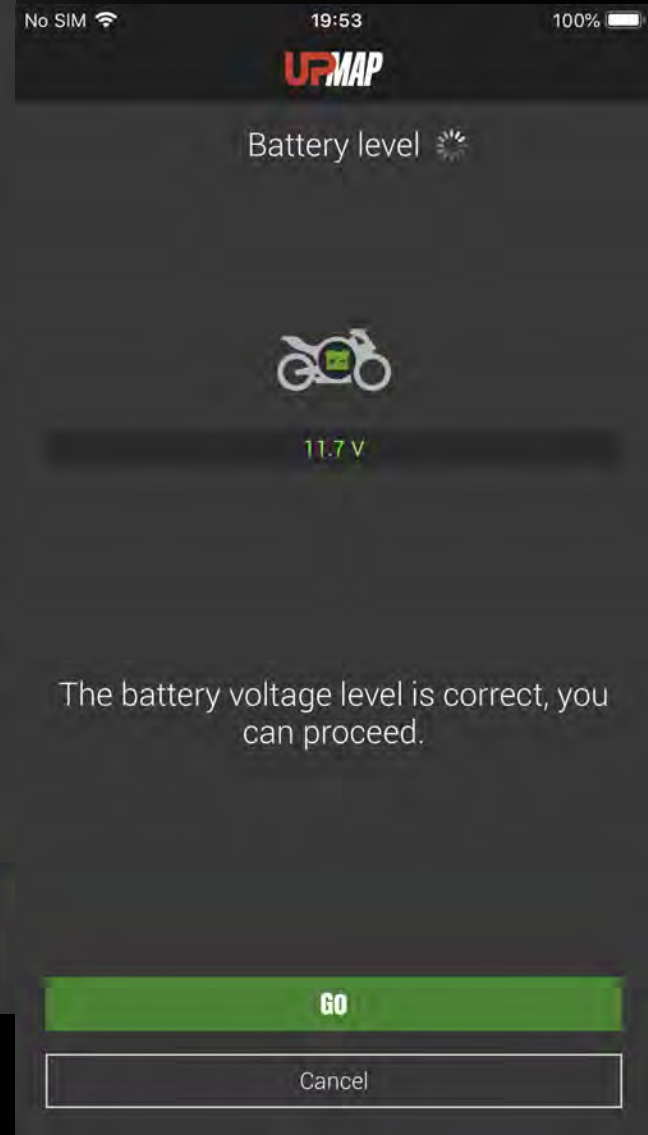Make sure the smartphone's Bluetooth is on and
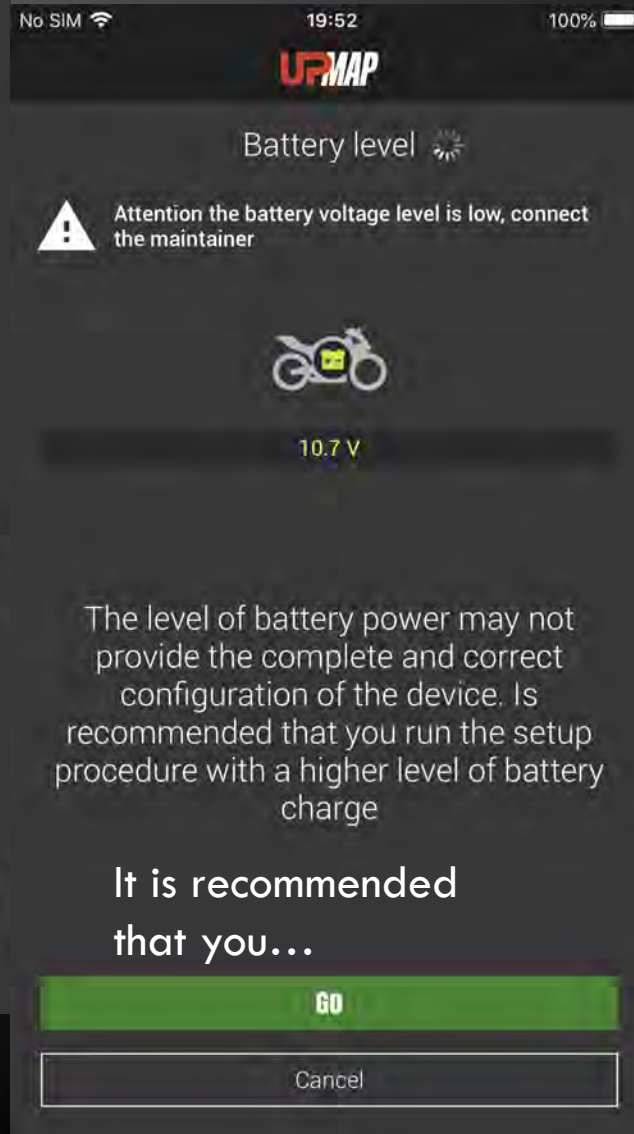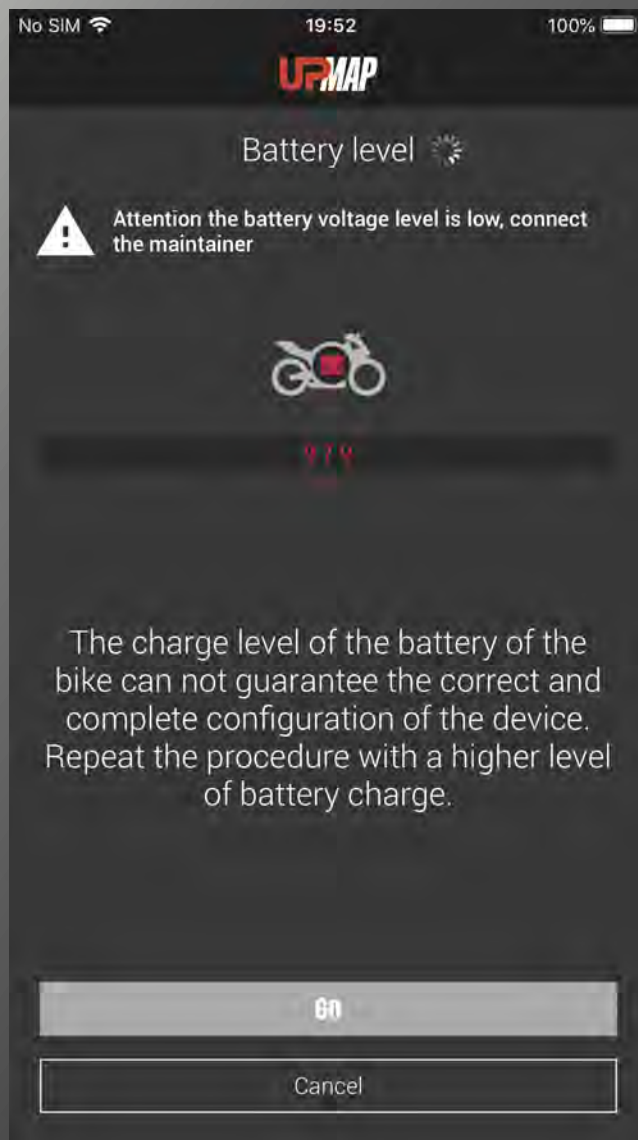
Press **GO**

Located devices

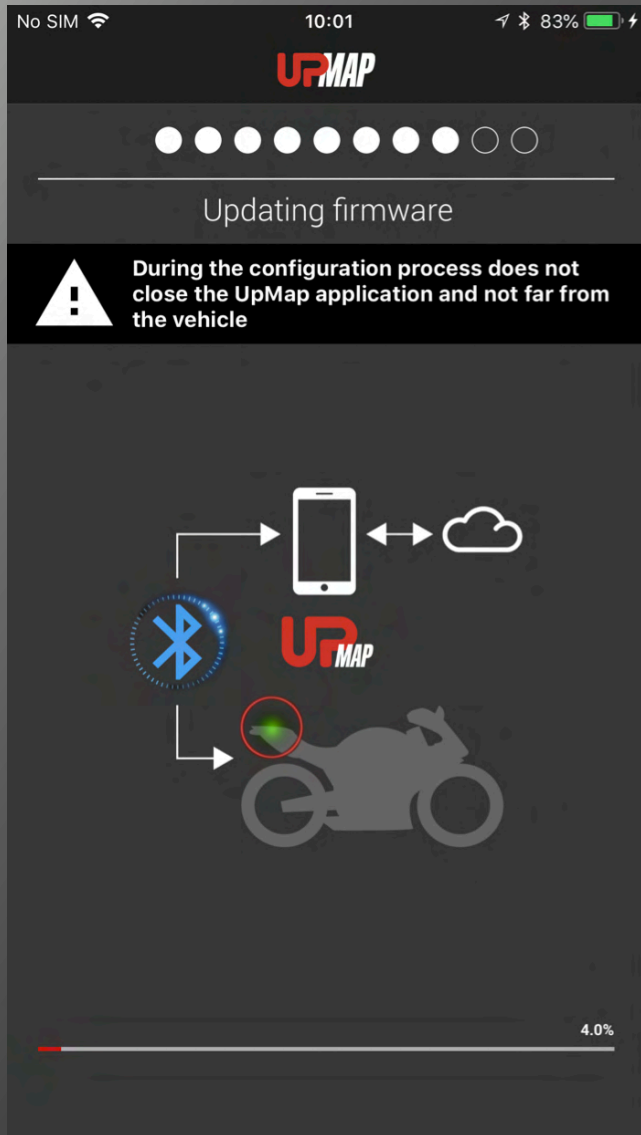The app carries out a scan and searches for T800 devices.

Select the T800 with the serial number corresponding to the device connected to the vehicle.

N.B. The serial number with 32 characters is shown on the edge of the T800

Warning

The T800 checks whether the battery voltage is sufficient to guarantee uninterrupted programming

Battery level

Attention the battery voltage level is low, connect the maintainer

The charge level of the battery of the bike can not guarantee the correct and complete configuration of the device. Repeat the procedure with a higher level of battery charge.

GO

Cancel

Battery level

Attention the battery voltage level is low, connect the maintainer

10.7 V

The level of battery power may not provide the complete and correct configuration of the device. Is recommended that you run the setup procedure with a higher level of battery charge

It is recommended that you...

GO

Cancel

Battery level

11.7 V

The battery voltage level is correct, you can proceed.

GO

Cancel

… do not close the UpMap application and stay close to the vehicle

WARNING: During the different firmware update phases, do not move away from the vehicle with the smartphone.

Wait for the procedure to finish.

Select the model to which the T800 is connected.

Press **CONFIGURE**

WARNING: It is important to select the correct vehicle. If not, the T800 cannot properly communicate with the ECU.
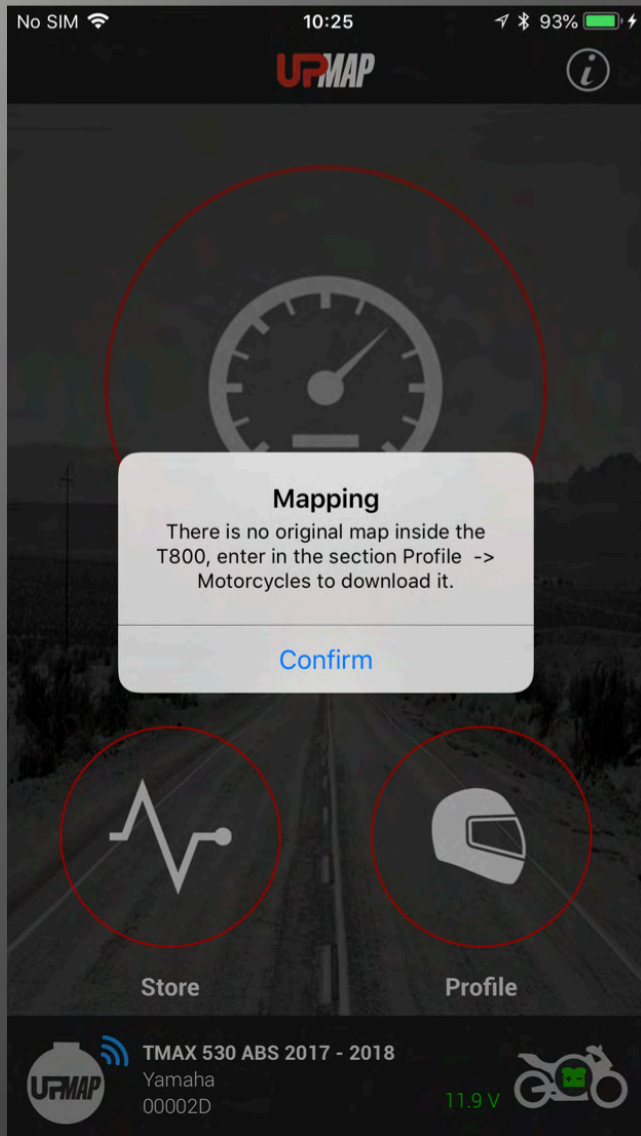
Press CONFIRM to end the procedure.

WARNING: Check that the vehicle model shown corresponds to both your vehicle's version and model year. If the information does not match, press **CANCEL** and repeat the procedure.
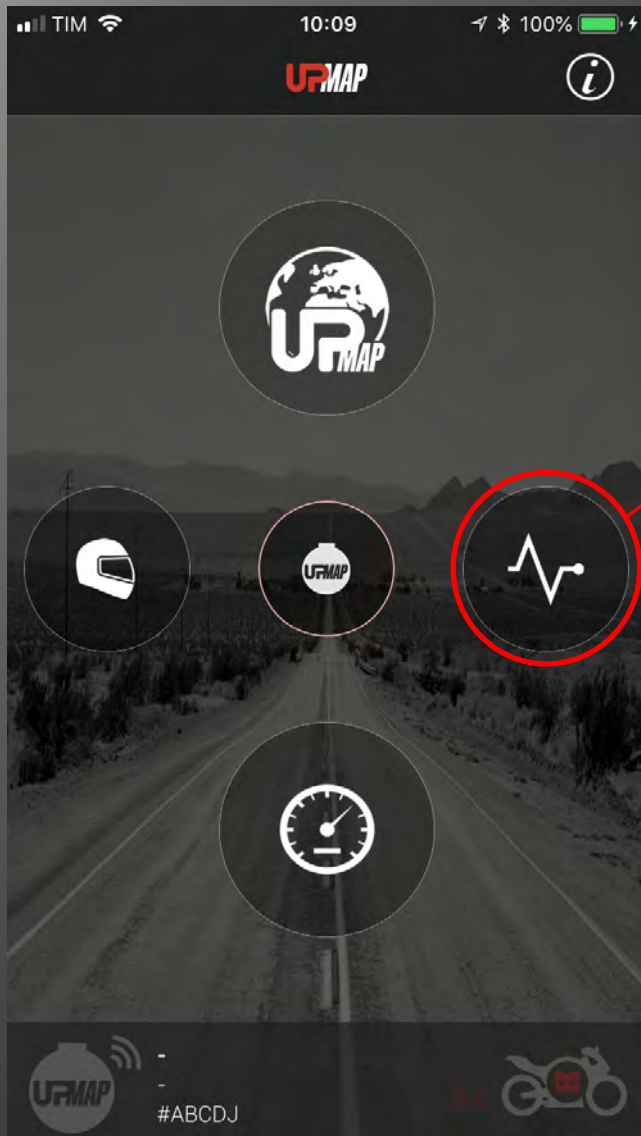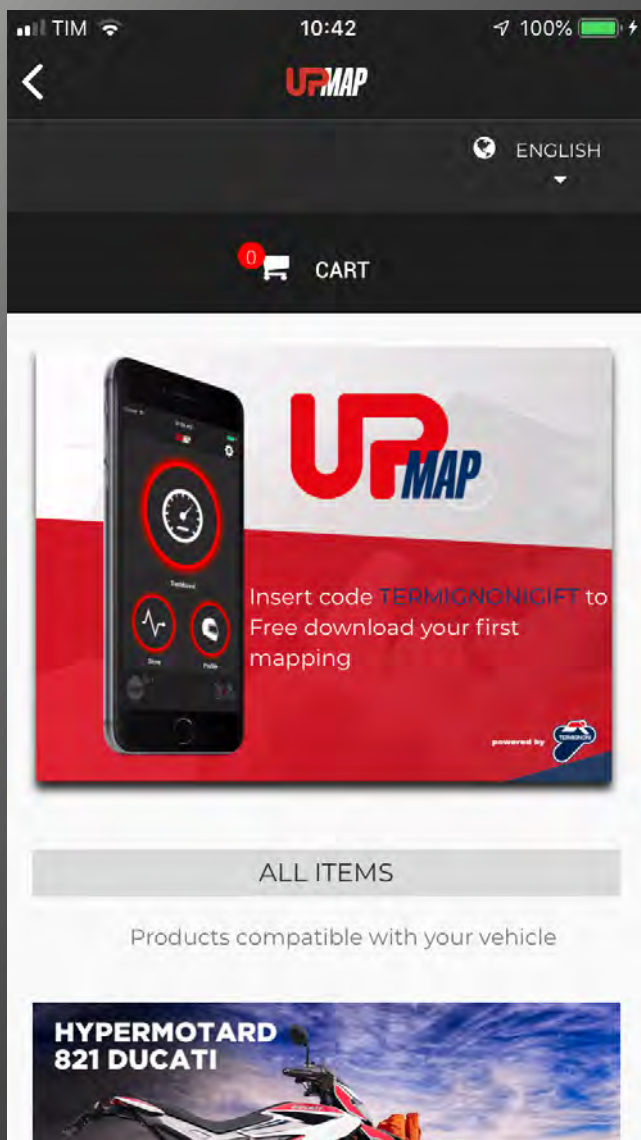
Press **END CONFIGURATION**

There is no original map inside the T800, access the Profile – Motorcycles section to download it.

The popup message indicates that the original vehicle map is available on the server and can be downloaded at any time by accessing the **PROFILE - MOTORCYCLES** section.
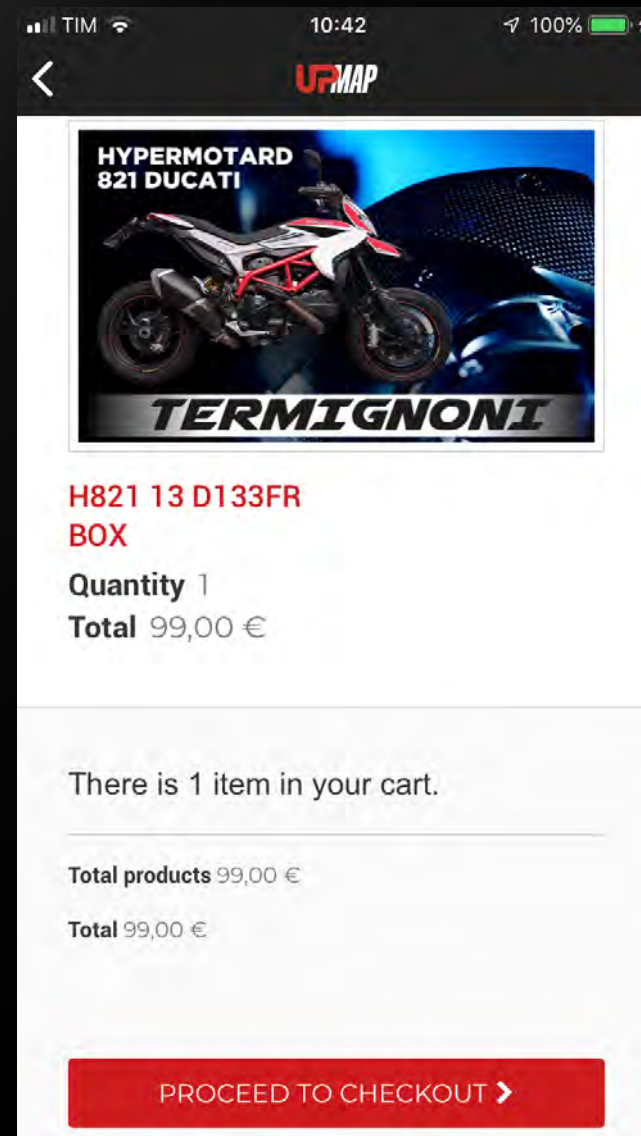
Purchase first free map

Click on STORE icon

The screen displays the code >TERMIGNONIGIFT< needed to obtain your first free map; scroll through the maps and choose the one that matches your vehicle configuration
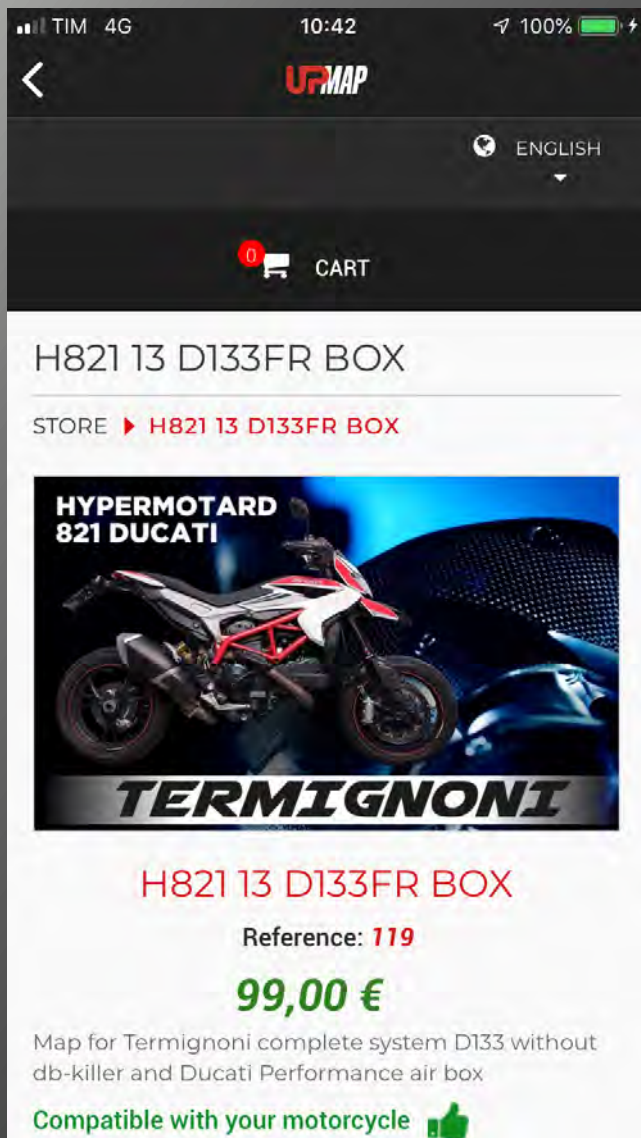
Select the desire map and click on ADD TO CART

Continue by clicking PROCEED TO CHECKOUT

Enter the required data

WARNING: Enter your name in the MY ADDRESS field

WARNING: tick the dedicated box only if you want to receive an invoice and fill out the billing information fields. Otherwise, do not select it.

Enter the code TERMIGNONIGIFT, all in uppercase and leaving no spaces, and press OK
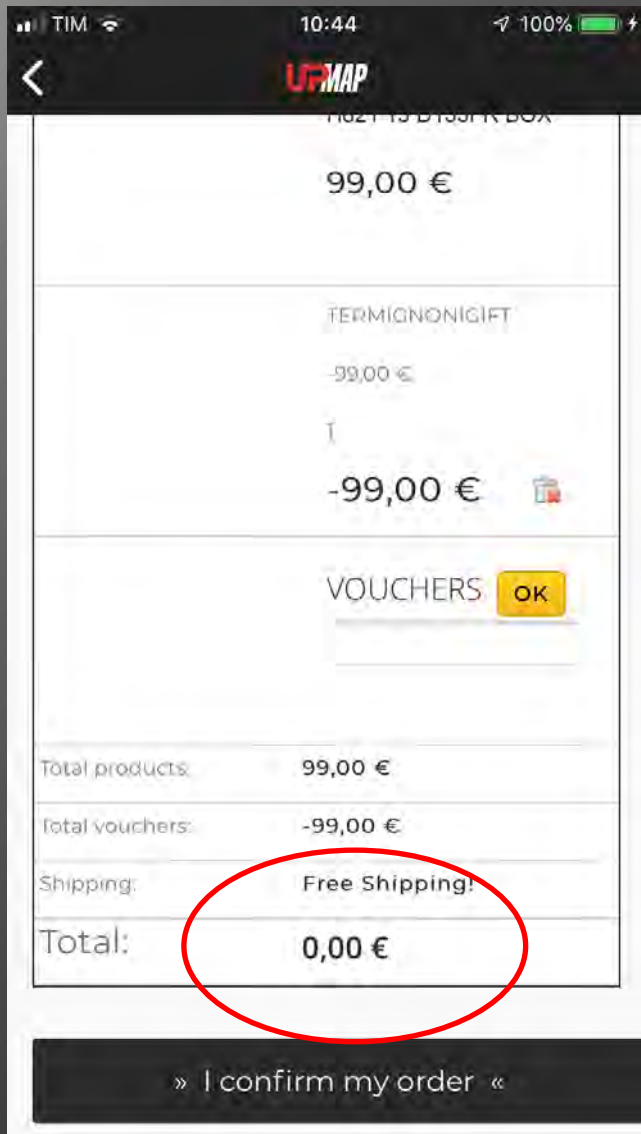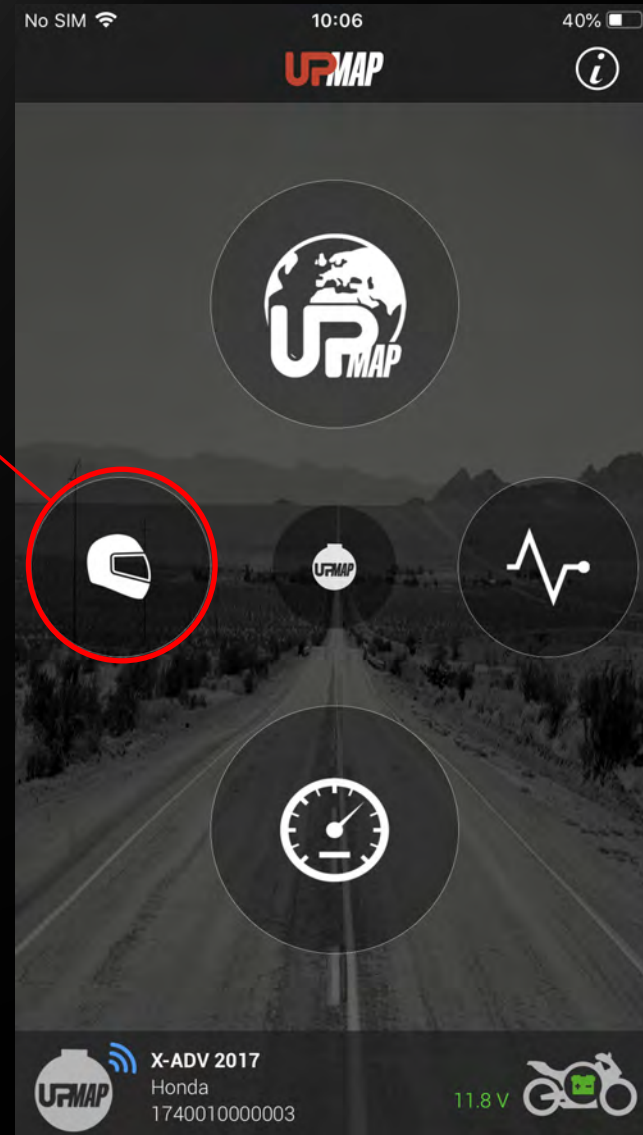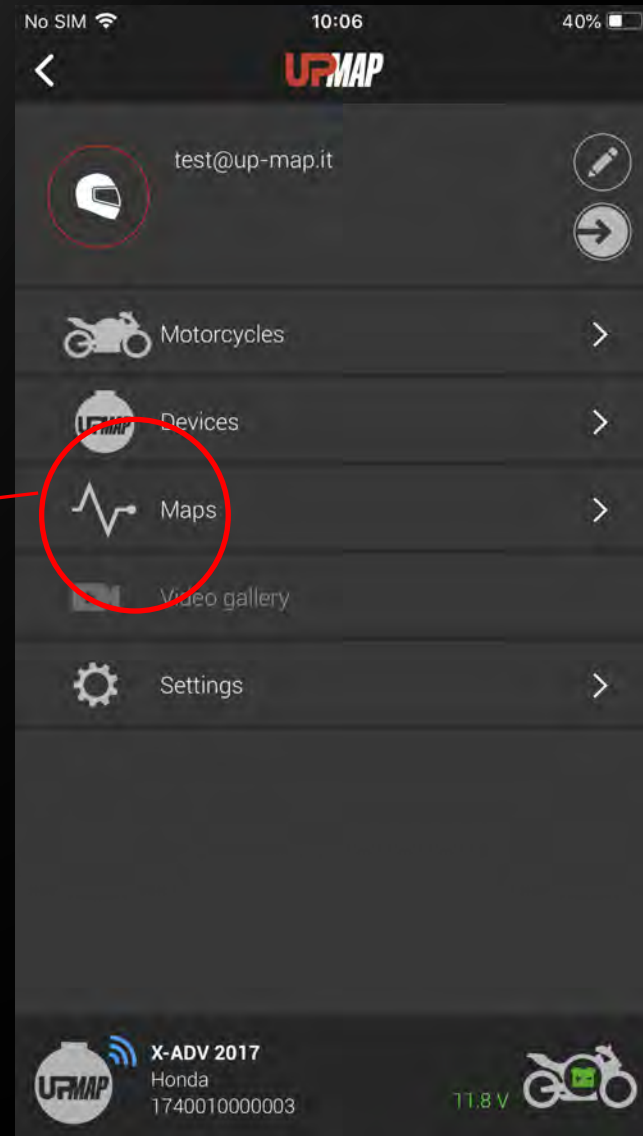
Once your promotional code is entered and validated, the total is reset to zero. Click on CONFIRM MY ORDER and wait a few seconds for the process to finish.
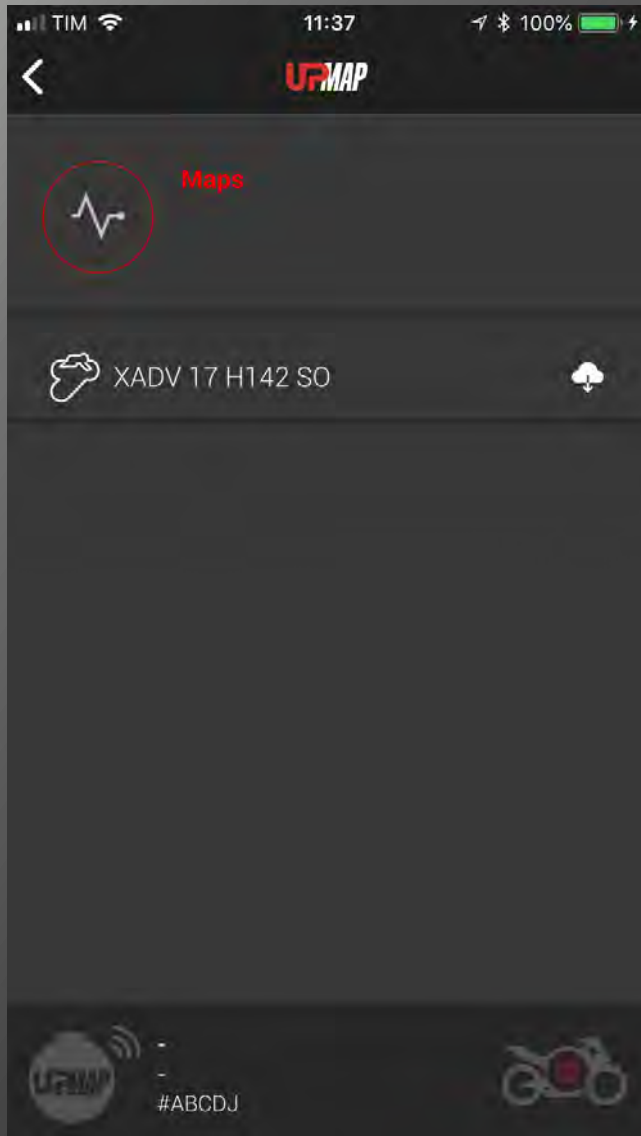
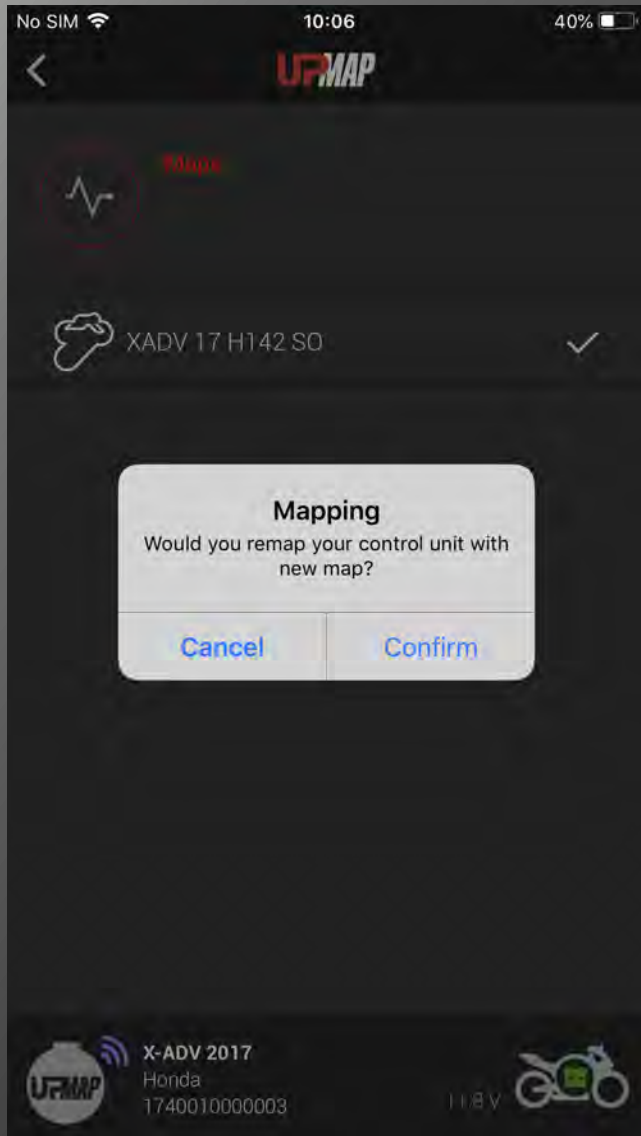# Engine control unit re-flashing

Click on PROFILE icon
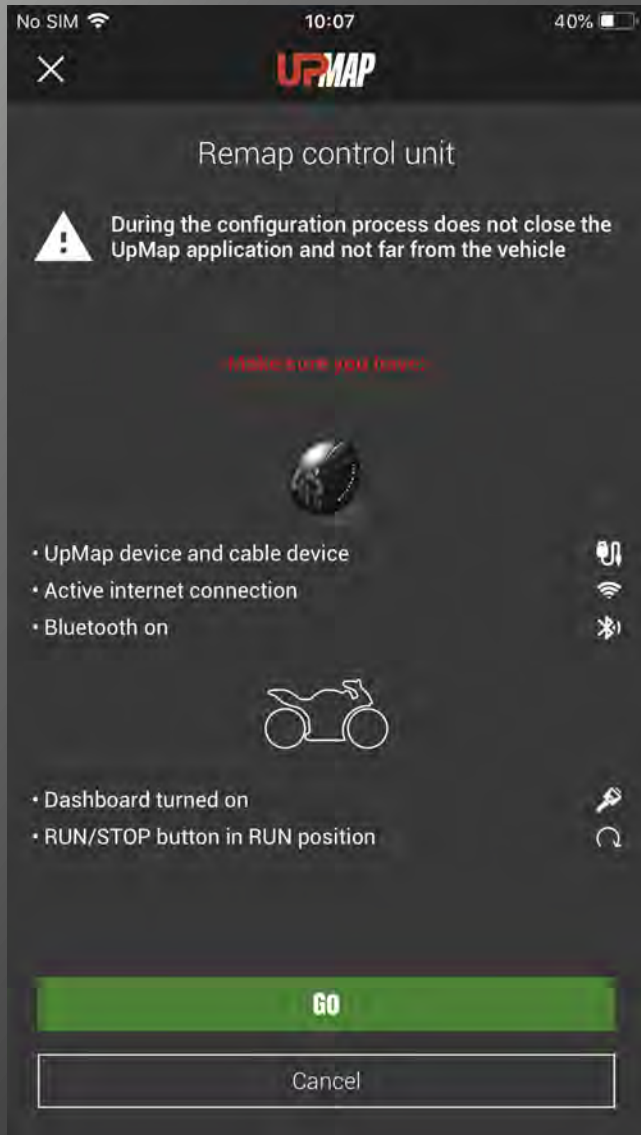
Enter the MAPS section

Once in MAPS, find the map purchased. Click on it to proceed with installation of the map on the vehicle.

Click on Confirm and follow the instructions on the screen

Do you want to remap your control unit with new map?

WARNING Carefully follow the instructions given by the app during the procedure.
To correctly execute the procedure, the T800 must be connected to the diagnostic socket, the key in the on position (the dashboard on) and the RUN button in the ON position.

Press GO to proceed

NOTES the procedure described below is for programming the engine control unit of an XADV. The reprogramming procedure may undergo some variations depending on the brand and model of motorcycle.
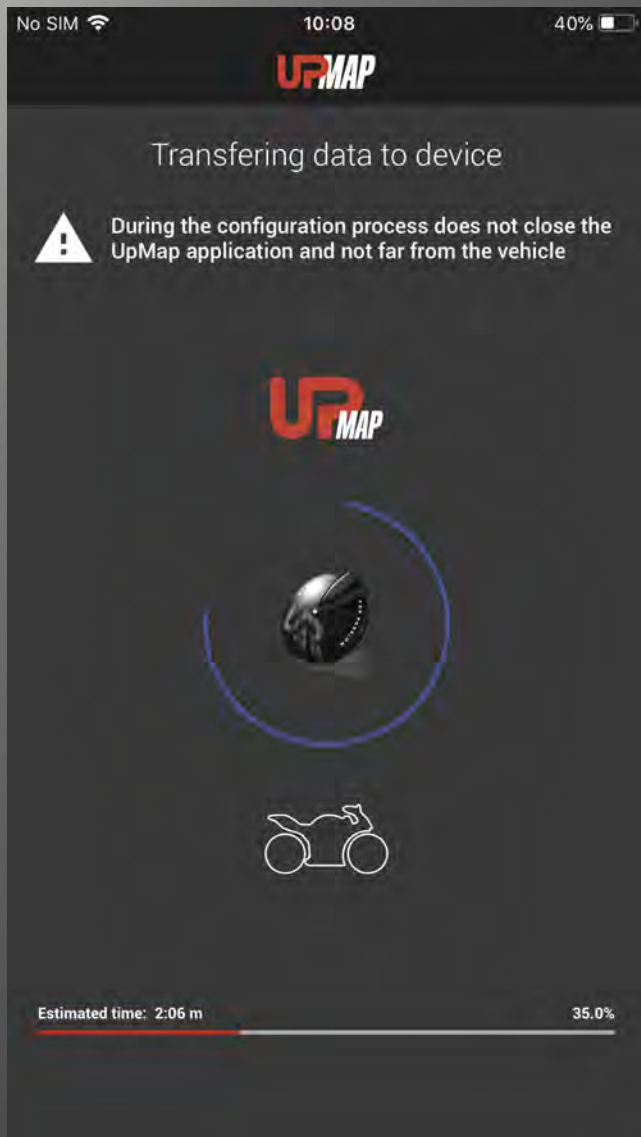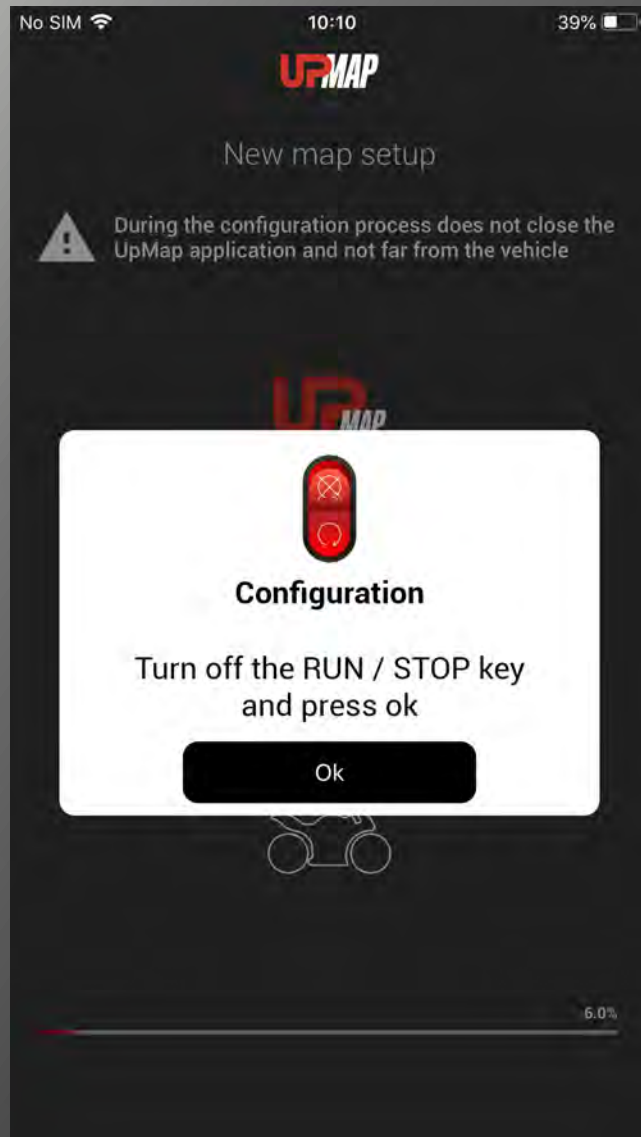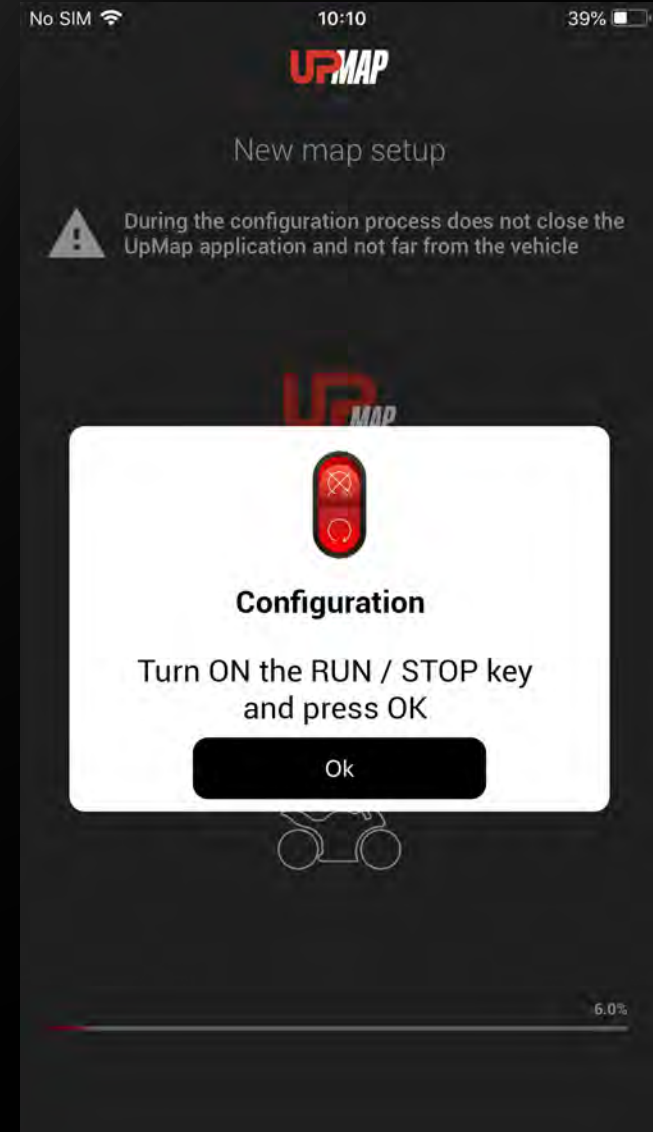
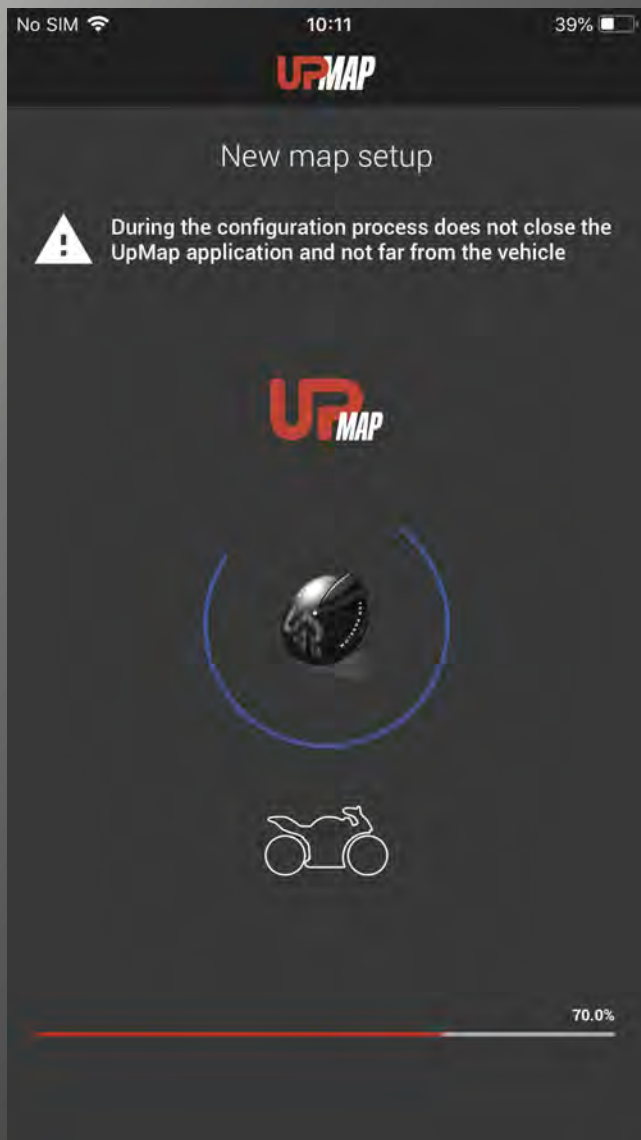Wait for the app to transfer the data to the T800
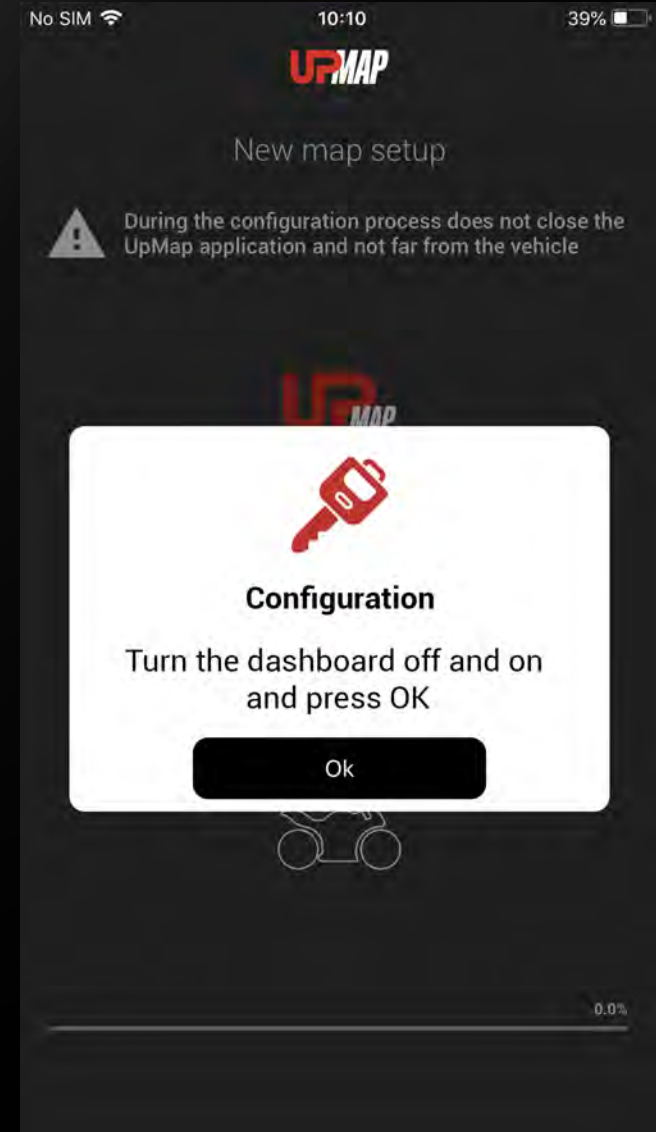
Turn the dashboard off and on and press OK

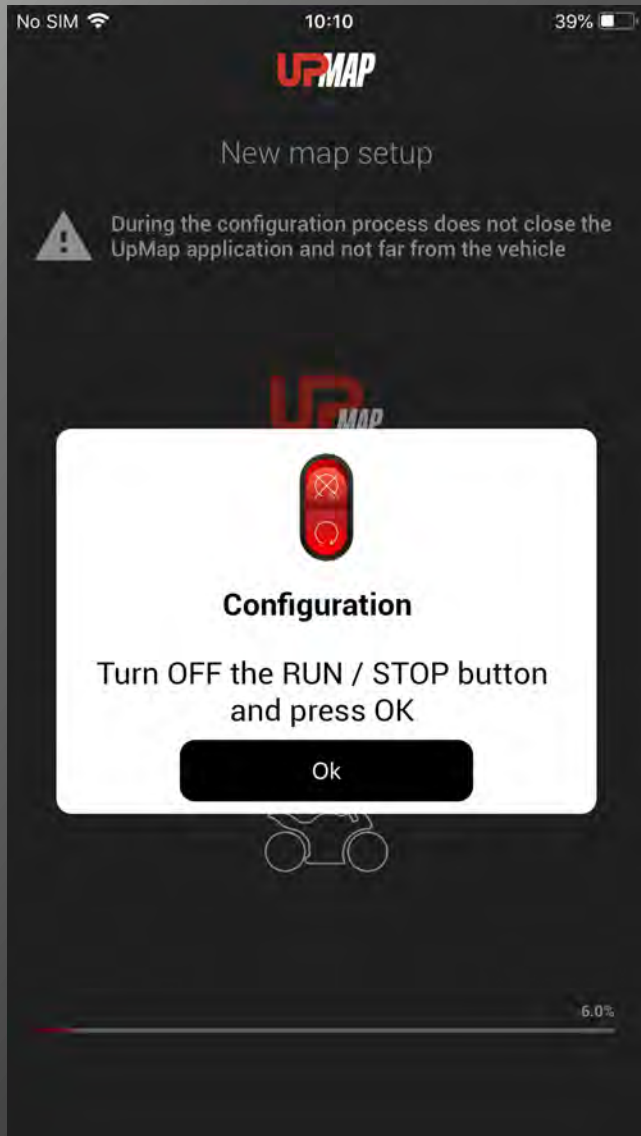Turn the RUN / STOP button on the bike to STOP and press OK

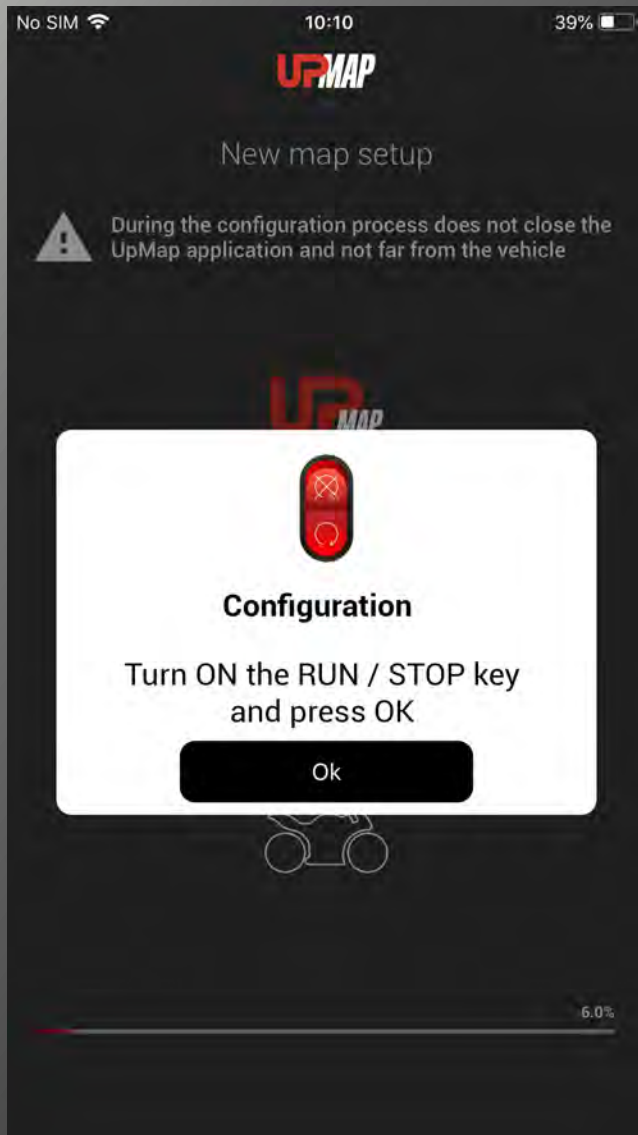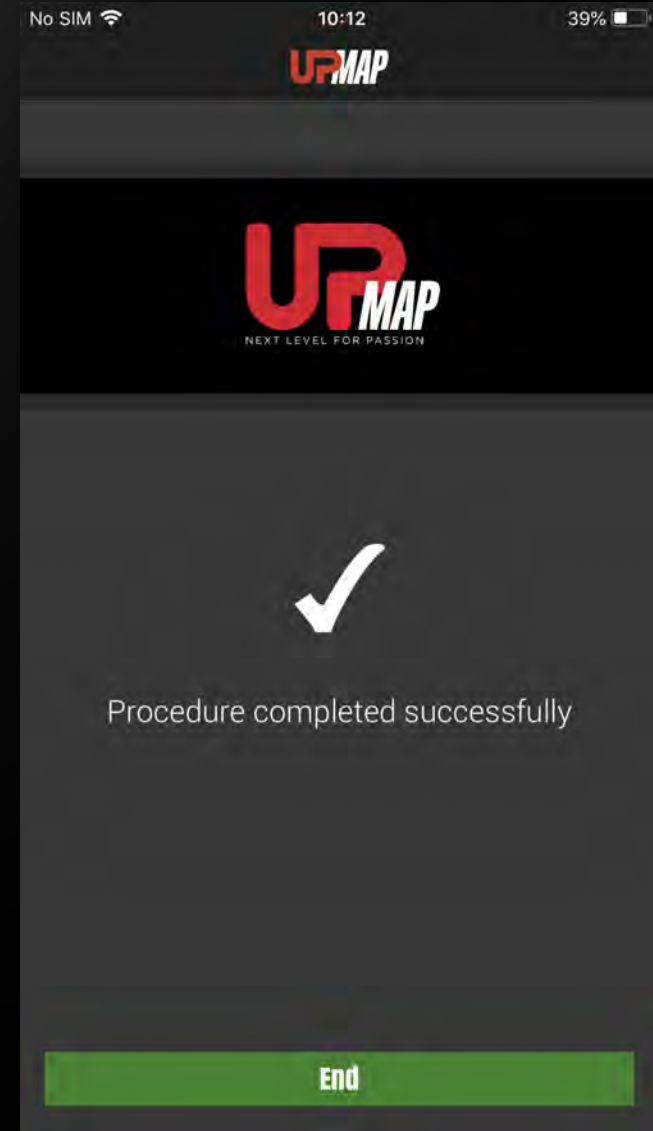Turn the RUN / STOP button on the bike to RUN and press OK

WARNING During this phase the engine ECU is cleared and rewritten with the new map. Do not turn off the RUN key or button and make sure the smartphone remains close to the vehicle! DA VERIFICARE

Turn the RUN / STOP button on the bike to STOP and press OK

Turn the RUN / STOP button on the bike to RUN and press OK

Press OK to end the flashing procedure