


Thank you for purchasing our corbels. Please take the time to mount them properly.
They will provide many years of dependable use.

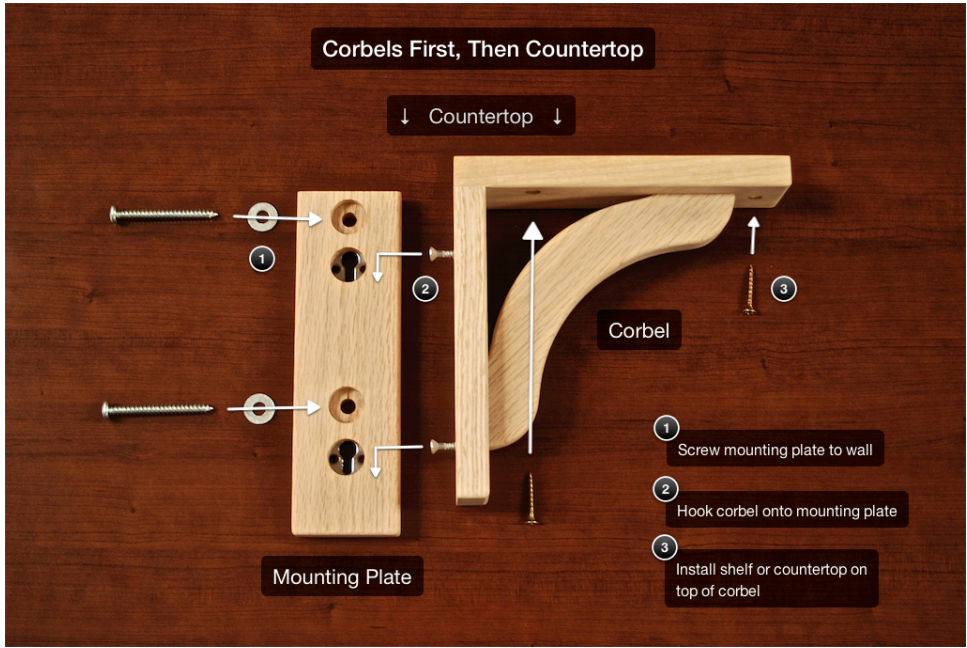


Tools Required:
#2 & #3 Phillips Head Screwdriver
Level
Drill
3/32" Drill Bit
3/16" Drill Bit

Parts Included:
Corbel with Mounting Plate
2 1/2" Long Wood Screws (for wood stud or cabinetry installation)
1 1/4" Flat Head Screws
1/4" Washers
Toggler™ Drywall Anchors (if requested)
2" Machine Screws (if requested)


Complete Instructions

Remove the corbel from the mounting plate. This is achieved by holding the mounting plate firmly in the palm of your hand and pushing the corbel portion upwards with the other hand while looking at the back of the mounting plate. You will notice that each corbel and mounting plate have corresponding numbers. We have fine-tuned the screw projection so these work best paired up.


1. Examine your wall space and determine if you will be mounting to wooden studs, cabinetry, drywall only or a combination of each.
2. Attach the mounting plates to wall with the appropriate hardware. Check for level.
 - **IF** mounting to a wooden stud or cabinetry: Attach the mounting plates with the 2 1/2" wood screws and the washers. Do this by pre-drilling (piloting) into the stud with your 3/16" drill bit. In some cases our screws may be too long. Sorry, you will have to cut them down or replace them with shorter ones.
 - **IF** mounting to drywall **ONLY** (Toggler™ Kit Required): Follow the illustrations below.



Drill the 1/2" hole. Hold Metal channel flat alongside plastic straps and slide channel through hole.

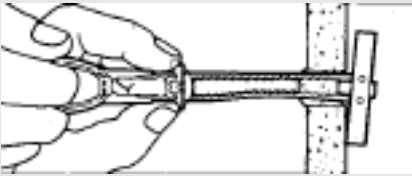

With one hand, pull plastic straps so metal channel rests flush behind wall, as you slide plastic cap with the other hand until flange of cap is flush with wall.



Place your thumb between plastic straps. Push side to side snapping off straps at wall. You are now ready to insert the 2" machine screws with washers through the mounting plate and into the anchor.

3. Hook the corbel onto the mounting plate and tap with your palm until they feel snug. The corbel portion should come to rest approximately 1/16" higher than the mounting plate.
4. Finally, place shelf or countertop on top of corbels. Pre-drill (pilot) screw holes with your 3/32" drill bit. Be careful not to drill through your shelf or countertop. Then use the 1 1/4" screws provided to attach the corbels. Disregard the screws if your countertop is solid stone and ask your countertop installer for the proper adhesive.

Questions?

See the FAQ section at TylerMorrisWoodworking.com
or call us at 866.493.0879 or Tyler's cell 970.690.0503 anytime