



Thank you for purchasing our corbels. Please take the time to mount them properly.
They will provide many years of dependable use.

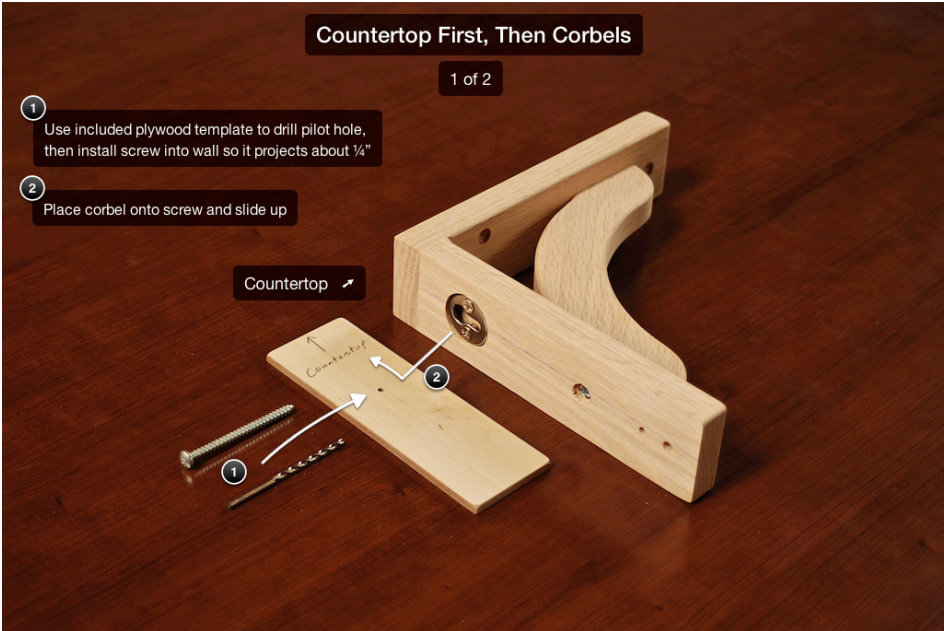

Tools Required:
#3 Phillips Head Screwdriver
Level
Drill
3/32" Drill Bit
5/32" Drill Bit
Rubber Mallet

Parts Included:
Corbel
Plywood Drilling Template
#12 X 2" Panhead Screws
#10 X 2 1/2 Flathead Screws
1 1/4" Flat Head Wood Screws
Wood Plugs

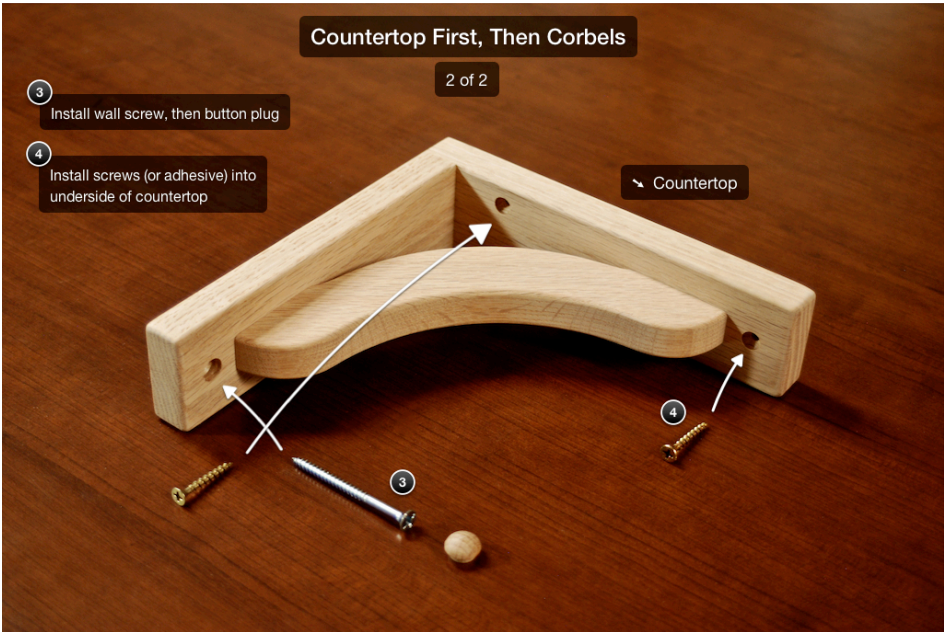

Complete Instructions

1. Mount screw in your wall or cabinetry using included template.

a. Place plywood template directly under countertop.
b. Drill 5/32" diameter pilot hole through hole in template about 2" deep.
c. Install included #12 X 2" panhead screw. The head of the screw should project out approximately 1/4", which is the same as the thickness of template. In some cases, this screw may be too long. Sorry, you will have to cut it down or replace it with a shorter one.

2. Attach corbel to your wall.

a. Fine tune screw projection so that when you slide the corbel up to the underside of your countertop the connection feels very snug.
b. With the corbel plumb and tight to the underside of your countertop, drill a 5/32" diameter pilot through bottom hole in corbel.
c. Install included #10 X 2 1/2" flathead screw. In some cases, this screw may be too long. Sorry, you will have to cut it down or replace it with a shorter one. Using a rubber mallet, tap in included wood plug to hide screw.
3. Attach corbel to your countertop.

Pre-drill (pilot) screw holes with your 3/32" drill bit. Be careful not to drill through your countertop. Then use the 1 1/4" screws provided to attach the corbels. Disregard the screws if your countertop is solid stone and ask your countertop installer for the proper adhesive.

Questions?

See the FAQ section at TylerMorrisWoodworking.com
or call us at 866.493.0879 or Tyler's cell 970.690.0503 anytime