


Thank you for purchasing our wood shelf brackets. Please take the time to mount them properly.

They will provide many years of dependable use.

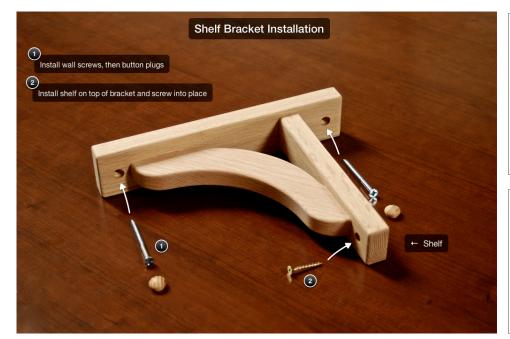

Tools Required:

Phillips Head Screwdriver
Level
Drill
3/32" Drill Bit
9/64" Drill Bit
Rubber Mallet
1/2" Drill Bit (if using drywall anchors)


Parts Included:

Shelf Bracket
2 1/2" Wood Screws (for stud installation)
1 1/4" Wood Screws
Wood Plugs
Toggler™ Drywall Anchors (if requested)
2" Machine Screws (if requested)

- 1. Examine the wall space and determine if you will be mounting to wooden studs, drywall only or both.
- 2. Attach the shelf brackets to wall with the appropriate hardware. Check for level.
 - **IF** mounting to a wooden stud: Attach the shelf brackets with the 2 1/2" wood screws. Do this by pre-drilling (piloting) into the stud with your 9/64" drill bit.
 - **IF** mounting to drywall **ONLY** (Toggler™ Kit Required): Follow the illustrations below.



Drill the 1/2" hole. Hold Metal channel flat alongside plastic straps and slide channel through hole.

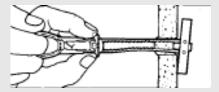

With one hand, pull plastic straps so metal channel rests flush behind wall, as you slide plastic cap with the other hand until flange of cap is flush with wall.



Place your thumb between plastic straps. Push side to side snapping off straps at wall. You are now ready to insert the 2" machine screws with washers through the mounting plate and into the anchor.

- 3. Using rubber mallet, tap in the button plugs to hide the screws.
- 4. Finally, place shelf on top of brackets. Pre-drill (pilot) screw holes with your 3/32" drill bit. Be careful not to drill through your shelf. Then use the 1¼" screws provided to attach the brackets to the shelf.

Questions?

See the FAQ section at TylerMorrisWoodworking.com or call us at 866.493.0879 or Tyler's cell 970.690.0503 anytime