

GENERAL INSTRUCTIONS


1. Using an experienced installer is recommended when installing RA Magnus sinks.
2. Countertop materials vary and require different cutting methods. Please take this into consideration during installation.
3. Please follow all local plumbing and building codes.
4. Every RA Magnus sink is handmade with slight variations in size. Please use the actual sink when making the installation cutout.
5. Prior to installation, inspect sink for any damage.
6. To protect sink, keep in shipping box until final installation (only remove it to make installation cutout).
7. RA Magnus is not responsible for the sink or countertop if any damage occurs during installation.
8. After installation, clean the sink using a mild cleanser and a soft cloth. Do not use harsh cleaners, abrasive pads, or wire brushes. Please refer to the RA Magnus "Care & Maintenance" instructions for full details.

STONE & COPPER BATHTUB INSTRUCTIONS

NOTE: RA Magnus Copper and Stone Bathtubs are freestanding and do not attach to the wall or ground. For Stone Bathtubs, make sure floor can support the weight of the stone.

1. Place bathtub into desired position on floor. Consider position in room and drain location. Also leave proper clearance for faucet, overflow, and any accessories.
 - a. This step is to be done before installing the new floor and roughing in the drain.
2. Mark position of bathtub drain opening on floor and height of bathtub for faucet and overflow placement.
 - a. Move Bathtub to safe location when finished.
3. Rough in the drain and overflow pipe into the sub-floor. Make sure drain is located at the proper height to connect to bathtub drain opening.
 - a. Install floor after this step.
4. Place bathtub back into desired position on floor. Level bathtub using plastic shims.
5. Attach drain and overflow assembly to bathtub to secure (according to manufacturer's instructions).
6. Install faucet and any accessories (according to manufacturer's instructions).
7. Apply a bead of silicone adhesive caulk (not included) around bathtub edge to seal to floor.
8. Remove excess caulking and allow adhesive to properly cure.

DIAGRAM

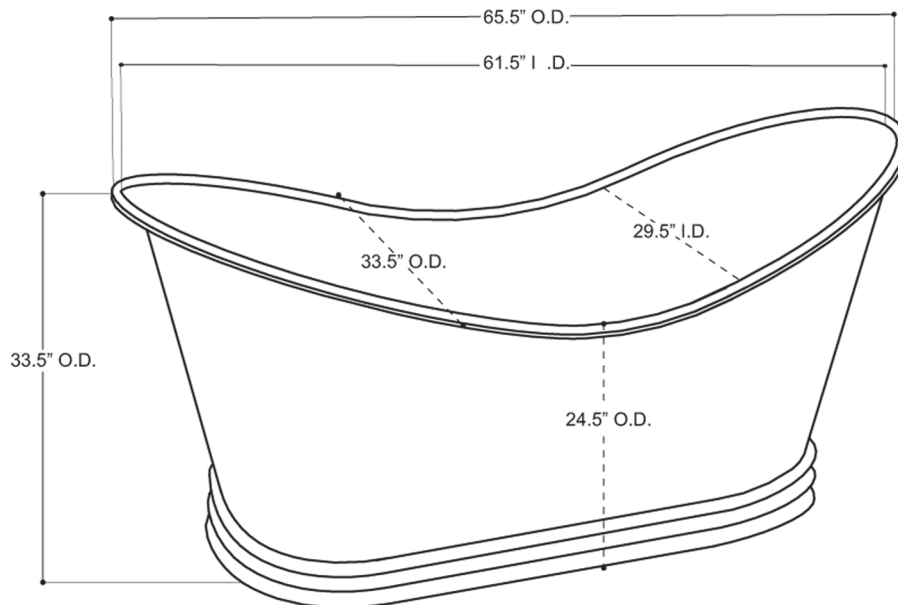

*Sample measurements for placement on floor (CTI used as example)