

GENERAL INSTRUCTIONS


1. Using an experienced installer is recommended when installing RA Magnus sinks.
2. Countertop materials vary and require different cutting methods. Please take this into consideration during installation.
3. Please follow all local plumbing and building codes.
4. Every RA Magnus sink is handmade with slight variations in size. Please use the actual sink when making the installation cutout.
5. Prior to installation, inspect sink for any damage.
6. To protect sink, keep in shipping box until final installation (only remove it to make installation cutout).
7. RA Magnus is not responsible for the sink or countertop if any damage occurs during installation.
8. After installation, clean the sink using a mild cleanser and a soft cloth. Do not use harsh cleaners, abrasive pads, or wire brushes. Please refer to the RA Magnus "Care & Maintenance" instructions for full details.

VANITIES INSTRUCTIONS

NOTE: RA Magnus Vanities with Copper and Stone Tops are freestanding and do not attach to the wall or ground. For Vanities with Stone Tops, make sure floor can support the weight of the stone.

1. Place Vanity into desired position on floor. Consider position in room and drain location. Also leave proper clearance for faucet and any accessories.
2. Mark position of Vanity for drain opening and to determine height of faucet placement
3. Place Vanity back into desired position on floor. Level using plastic shims.
 - a. If Copper or Stone Top comes separately, install once Vanity base is placed.
 - b. Attach Top to Vanity base using silicone adhesive caulk (not included) where the Vanity and Top touch.
4. Install drain and faucet (according to manufacturer's instructions).
5. Apply a bead of silicone adhesive caulk (not included) around Copper or Stone Top edge to seal to wall.
6. Remove excess caulking and allow adhesive to properly cure.

DIAGRAM

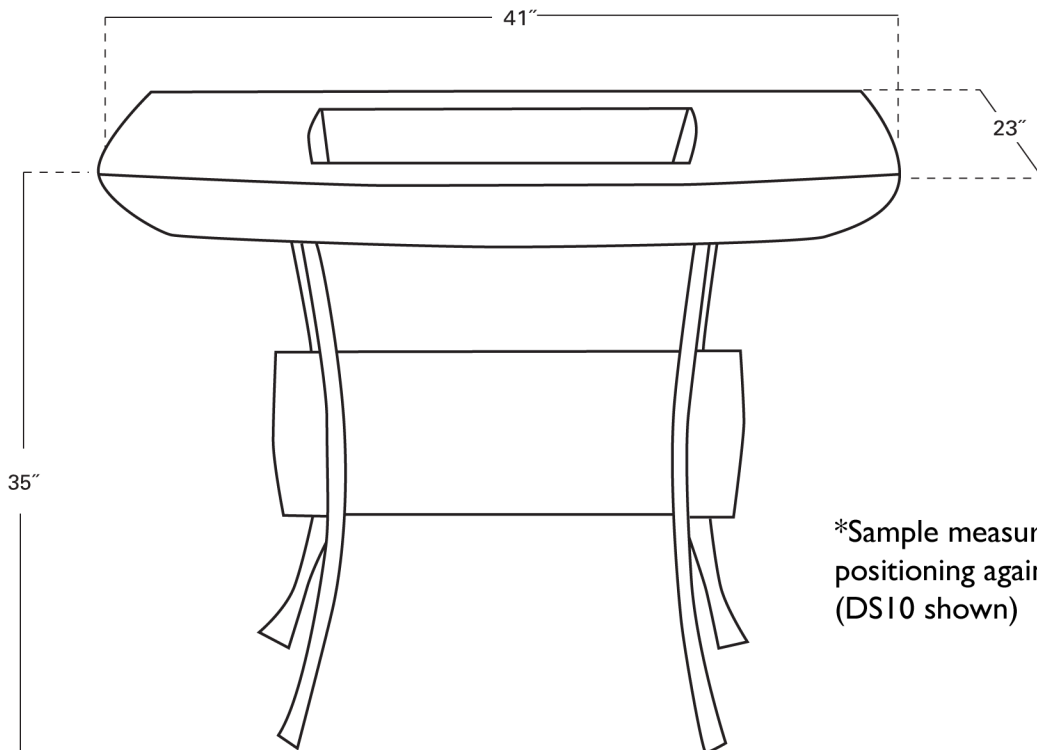

*Sample measurements for positioning against wall (DS10 shown)