
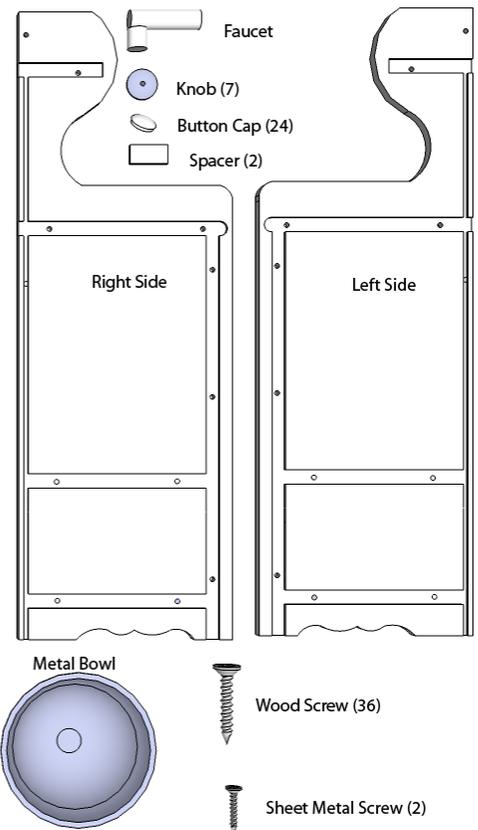
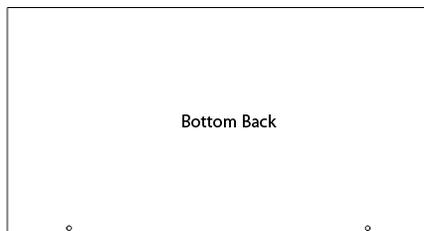
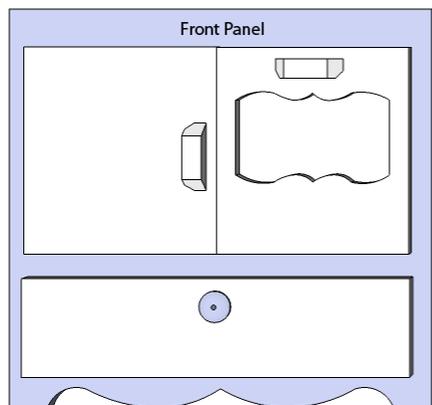



Parts

JK Broiler Kitchen Assembly Instructions

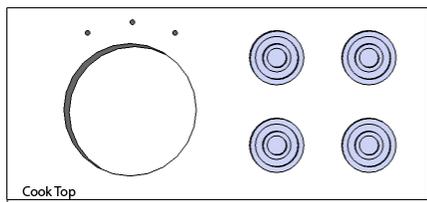


Pre-Assembly Information

- Though it is possible for one person to complete assembly, some steps will be easier if you have a friend to help.
- Start by familiarizing yourself with the parts above. This will make it easier to know how it all fits together.
- You will need a Phillips Head Screwdriver and a few drops of glue for the button caps.
- Locate a flat, level work surface, like a hardwood floor or a large table.
- Pine is a soft wood so do not overtighten screws as you can strip out the material. This is less likely to happen with a screwdriver, so take care when using a drill or screw gun.
- Remember that this product is made of wood, a natural, living material. As such, humidity and dryness in the air can influence the product. Though it has been produced with the greatest care and precision possible you may notice minor variation in fit and finish.
- Read instructions completely before beginning so that you fully understand the process. It's easy and fun to do, but you'll feel more confident if you know what the next step is before you get there.
- If you have any difficulty during assembly, please call us at 877-668-2111 and we'll be happy to help.


Caring for the Kitchen

- Kids like to wash dishes in the sink bowl, so please let them. Just remember to empty it out and wipe up any excess water when play is done.
- The kitchen is made of natural wood that has been finished with Tried & True Danish Oil, a polymerized linseed oil, which is food safe and non-toxic. To maintain the satin finish, we recommend reapplying this oil periodically, as you notice the wood drying out. Please visit <http://www.triedandtruewoodfinish.com> to find a retailer.
- Should the wood become discolored, we recommend cleaning it with Murphy's Oil Soap. If stubborn stains persist, use a fine green scrubbie (such as used on pots and pans) and rub lightly following the grain of the wood. Then apply a thin coat of the Danish Oil according to the instructions provided.
- While it may be fun to take your kitchen outside for an afternoon of play, please bring it inside when you are done. The natural finish is not intended for long-term outdoor exposure.


Assembly

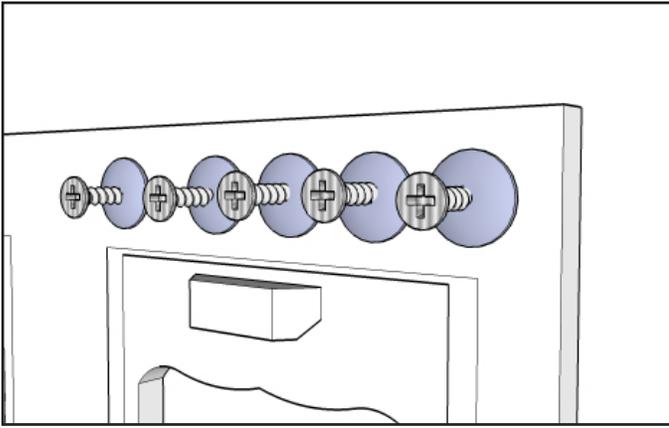


1. Install the Cooktop and Oven Control Knobs by driving Wood Screws through Knobs and into indentations in Front Panel. Tighten fully and then loosen $\frac{1}{4}$ turn until they spin freely.

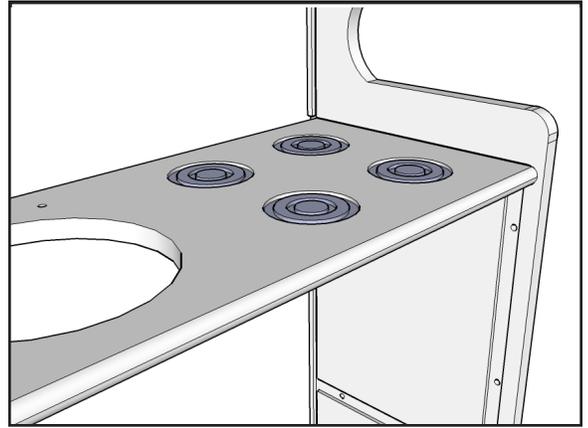


2. Slide Cooktop into slot in Right Side. Ensure that the front rounded edge and top of Cooktop are flush with front and top of slot.

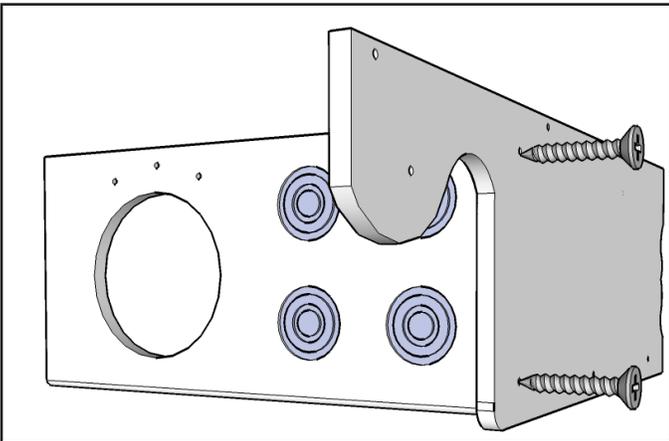


3. Drive two Wood Screws as shown to secure Cooktop.

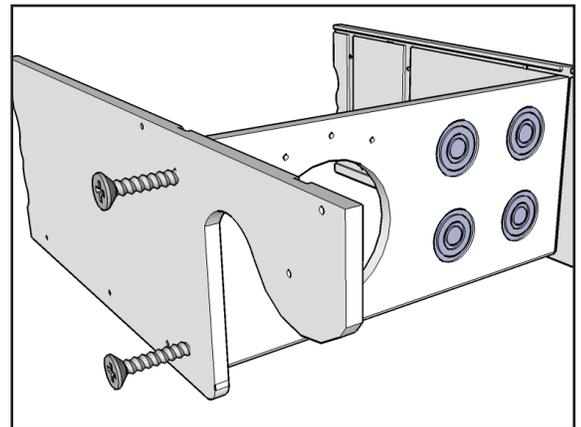


4. Insert Cooktop into Left Side. Ensure front of Cooktop is flush with front and top of slot on Left Side. Drive two Wood Screws into Cooktop.

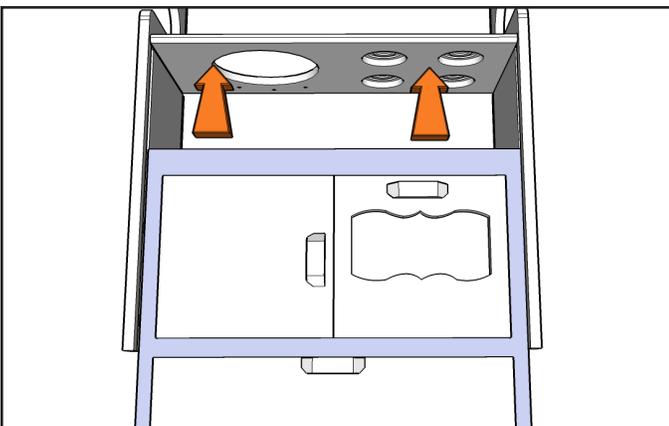


5. Slide Front Panel into front slots as shown. Top of Front Panel should be flush with Cooktop.

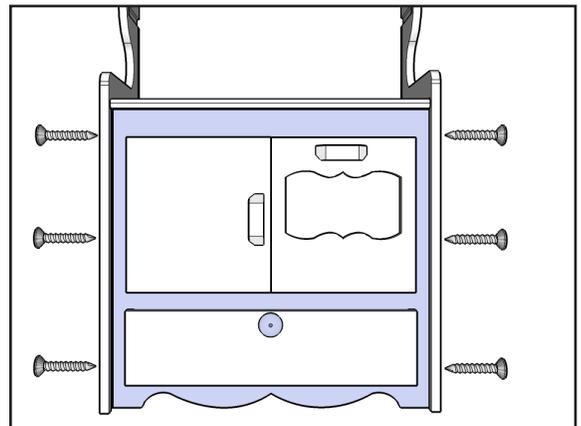


6. Secure Front Panel by driving Wood Screws in order indicated. Hold the Front Panel and Sides together as you drive the screws so that the pieces snug up.

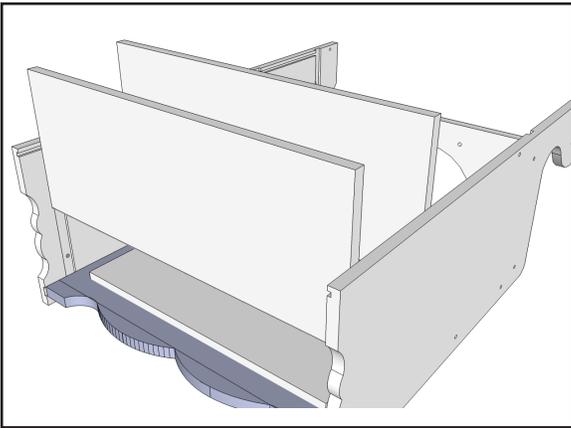


7. Turn kitchen over. Slide Bottom Shelves into slots below with rounded edge toward Front Panel.

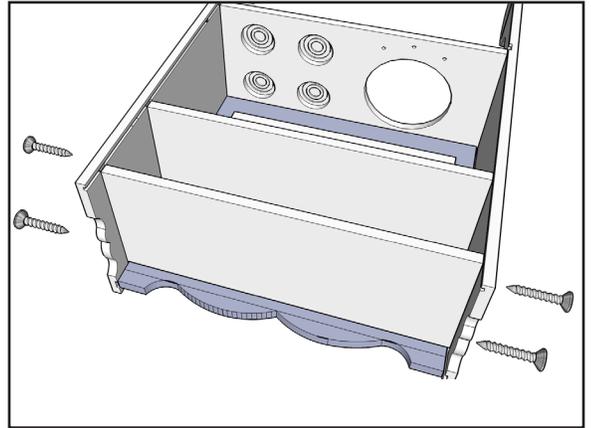


8. Secure Bottom Shelves by driving Wood Screws on either side.

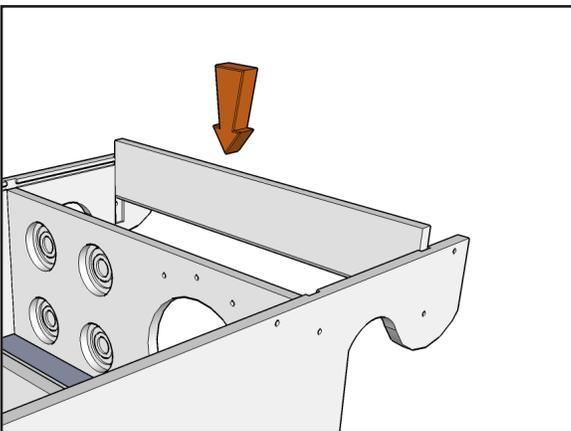


9. Insert Hutch Shelf into slot. Ensure that front and top of Top Shelf are flush with front and top of slot.

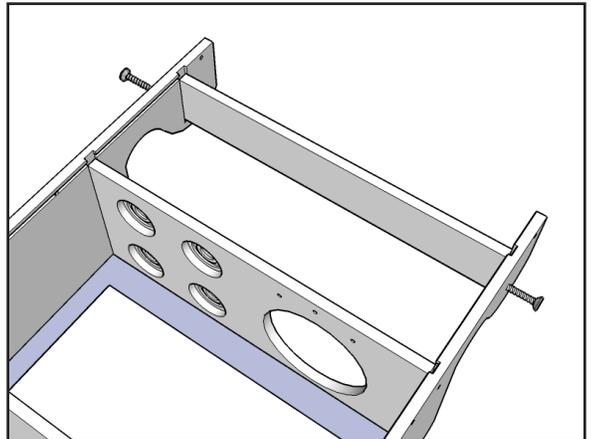


10. Secure Top Shelf by driving Wood Screws on either side.

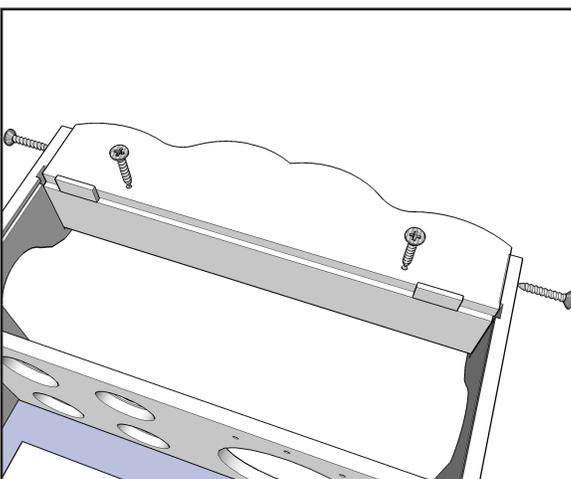


11. Place Spacers on bottom of Top Scroll and align flush with bottom of Top Shelf. Drive Wood Screws in back and on Sides to secure. Remove Spacers. Loosen side screws 1/4 turn. This will allow room for the Top Back Panel.

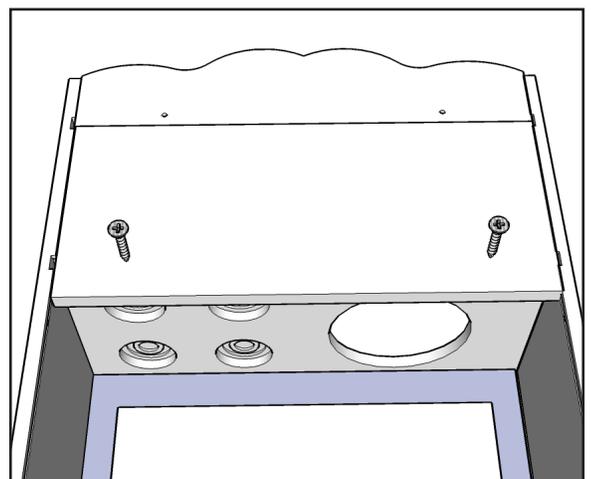


12. Remove Spacers. Place Top Back into place flush against bottom of Top Scroll. Secure with Wood Screws. Tighten side screws on Top Scroll and Cook Top.

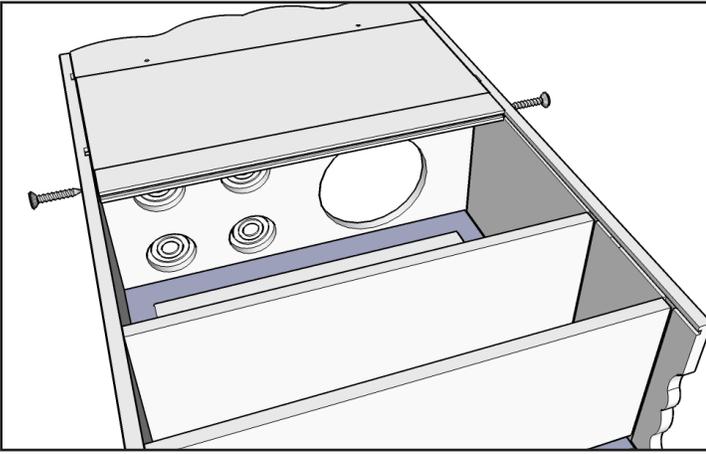


13. Slide Top Backing into Backing Connector. Drive Wood Screws through Backing Connector on both sides so that slot is in line with narrow slots in sides.

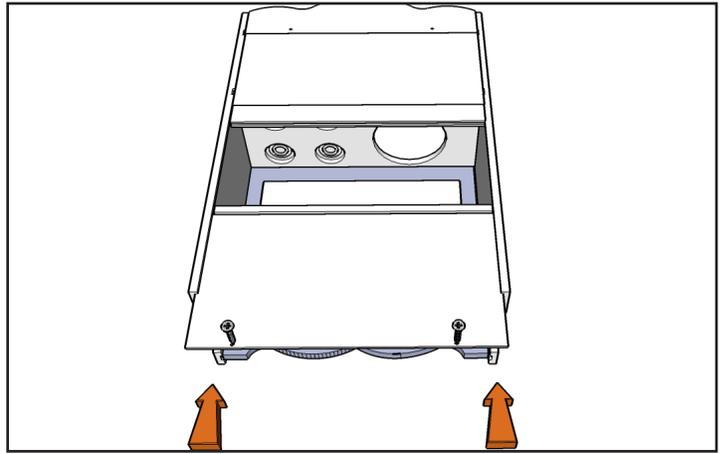


14. Slide Bottom Backing into slots in side of Side Panels and Backing Connector oriented as shown. Secure with two Sheet Metal Screws driven into Bottom Shelf.

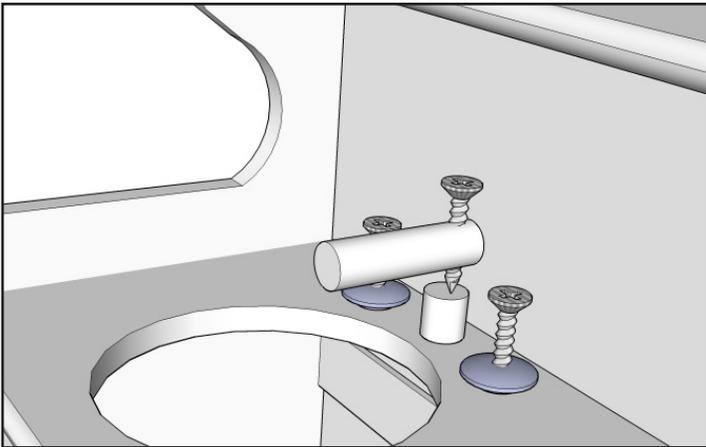

15. Install Knobs and Faucet. Use indentations in Cooktop to orient each part and drive Wood Screws to secure each to Cooktop. Tighten fully and then loosen ¼ turn until they spin freely.

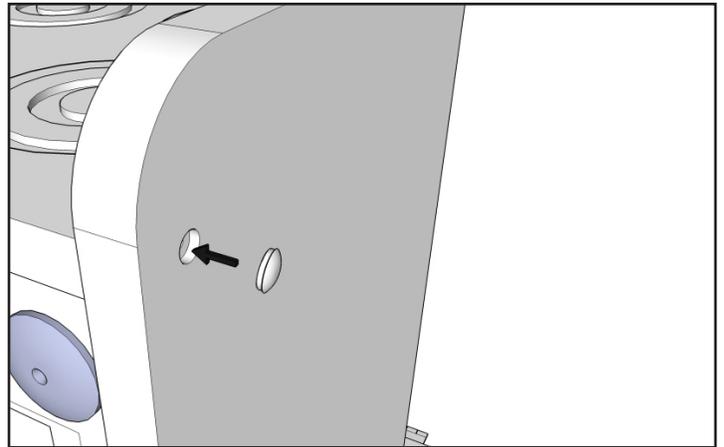

16. Insert Button Caps into screw holes with a drop of white glue. Wipe any excess with a damp cloth as you go. A light tap with a hammer may be needed to completely seat the cap.

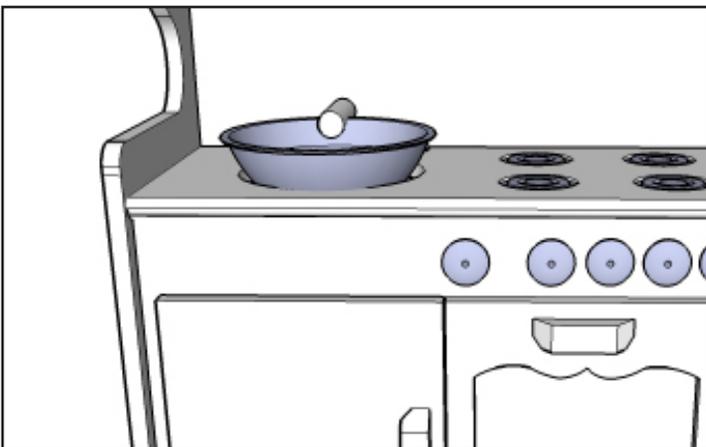

17. Insert Metal Sink Bowl and get cookin'!

