

## CLEANING INSTRUCTIONS

VACUUM OFTEN to keep abrasive dirt particles from damaging mats.

SHAMPOO with carpet shampoo or dishwashing detergent and water. Use a soft brush. Only a small amount of clear water is required for rinsing. Let dry on a flat surface. Vacuum to lift pile.

SPOT CLEAN using a commercial carpet spot remover.

AVOID: Soaking excessively;  
Use of any solvents;  
Washing in a washing machine;  
Drying in a dryer;  
Drying by hanging over a railing or clothes line.


## MAT WARRANTY

Lloyd Mats are warranted against defects in design, workmanship and materials for a period of five years from the date of purchase. Normal wear and the requirement for periodic cleaning are not considered as mat defects. Defective mats will be replaced or repaired at the option of the manufacturer.

To submit mats for warranty evaluation, return mats with proof of purchase date to your dealer.



# MAT FASTENER INSTALLATION INSTRUCTIONS

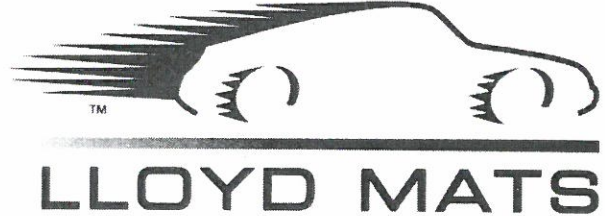


**ATTENTION!** This brochure contains important installation, cleaning and warranty information.

### SAVE FOR FUTURE REFERENCE


These mats are a product of Lloyd Mats. Unless specified on the mats or mat packaging there is no affiliation, license or approval of any automobile manufacturer.

## MAT FASTENER INSTALLATION INSTRUCTIONS



1. Put the mat in the vehicle. Place the mat fastener on the floor of the vehicle carpet with the rounded hook protruding through the mat grommet. The back of the mat fastener should point to the rear of the vehicle.

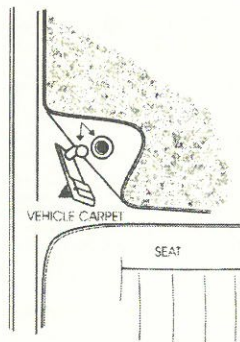

3. Insert a large screwdriver into the fastener's slot. Press straight down on the fastener screw to puncture the vehicle's carpet. Screw the fastener clockwise into the vehicle's carpet. It takes approximately 6 complete round-the-clock cycles before the mat fastener is secure.

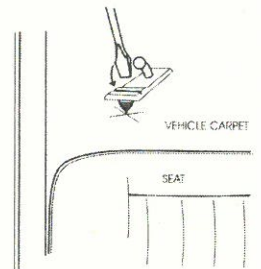

2. On the vehicle carpet mark the position of the mat fastener's screw point. Remove the mat.

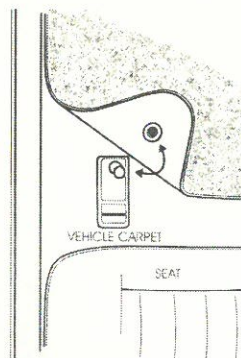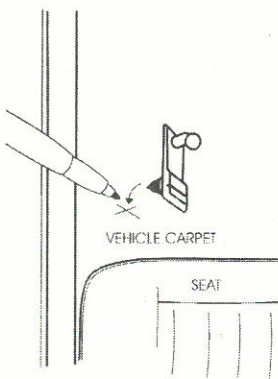

4. Repeat on both sides of the mat. Place the mat in the vehicle with the mat grommets over the rounded hooks.