


Digslider Hybrid Roller Carriage

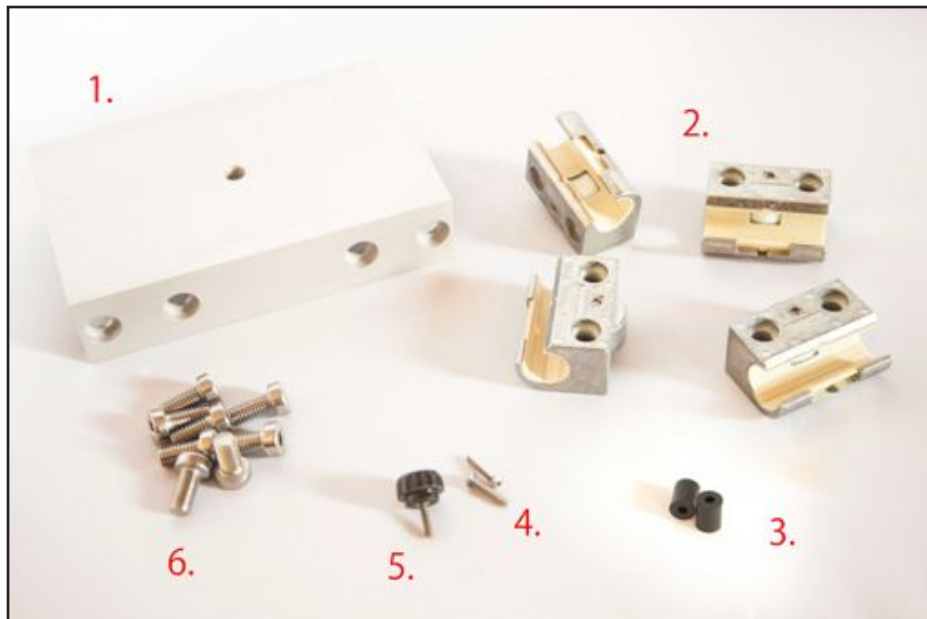


supplied:

1. 1 x Hybrid carriage roof
2. 4 x linear roller guides
3. 2 x spacer
4. 2 x belt screw
5. 2 x spacers
6. 8 x bolts

instructions:

Easy assembly. Use Hex Key Set to fasten bolts.

Assembly Guide

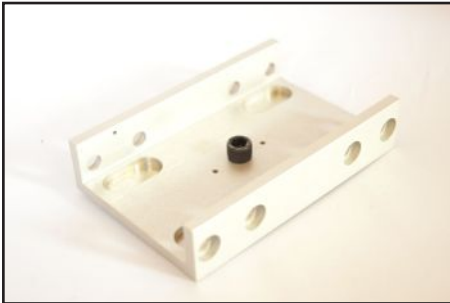

1. Screw Belt Screw Bolt into Carriage Roof(1).




2. Secure tightly.



3. Push 2 x Belt screw (4.) through both belt clip holes.



4. Insert 2 x Spacer (3.) over them.

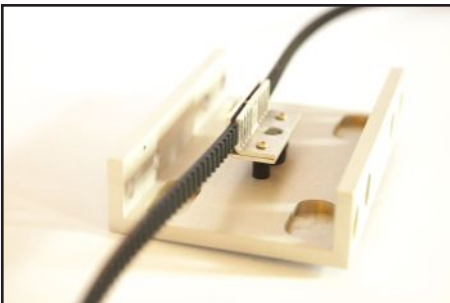

5. Screw into Carriage Roof to secure.



6. Insert 4 x Linear roller guides (2.) onto rail and fasten Carriage.