


#### Dash Disassembly

# Chrysler 300M 1999-2004/Concorde 1998-2004 Chrysler LHS 1999-2001/ Dodge Intrepid 1998-2004

- Remove the ashtray by pressing down on the inner spring clip (Concorde only).
- 2. Unclip gear shifter trim panel and slide trim panel toward the rear of the vehicle.
- 3. Unclip dash trim panel and disconnect the wire to the trim panel.
- 4. Remove (4) Phillips head screws securing the radio. Disconnect and remove the radio.

Continue to kit assembly

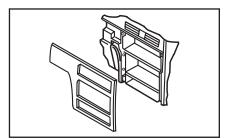


(Figure A)

# Chrysler PT Cruiser 2001-2005

- Unclip power window control panel. Disconnect and remove panel.
- 2. Pull off climate control knobs.
- **3.** Unclip and remove the dash trim panel.
- Remove (4) Phillips head screws securing the radio. Disconnect and remove the radio.

Continue to kit assembly

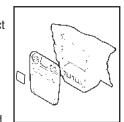


(Figure A)

# Chrysler Sebring/Dodge Stratus 2001-2006

- Remove (2) Phillips head screws from under the climate controls (Coupe only).
- 2. Unclip and remove radio trim panel.
- Remove (4) Phillips head screws securing the radio. Disconnect and remove the radio.

Continue to kit assembly

#### Chrysler Sebring/Dodge Stratus 2001-2006




(Figure A)

# Chrysler Town & Country/ Dodge Caravan 2001-2007

- 1. Open cup holder. Unclip and remove trim above cup holder.
- 2. Remove (2) Phillips head screws from above cup holder.
- **3.** Unclip and remove the dash trim panel.
- 4. Remove (4) Phillips head screws securing the radio. Disconnect and remove the radio.

Continue to kit assembly



(Figure A)




#### Dash Disassembly

## **Dodge Neon 2000-2006** Plymouth Neon 2000-2001

- 1. Pull off climate control knobs.
- 2. Unclip and remove A/C and heater vents.
- 3. Remove (1) Phillips head screw from each vent cavity.
- 4. Unclip and remove dash trim panel.
- Remove (4) Phillips

head screws securing the radio. Disconnect and remove the radio.

Continue to kit assembly




(Figure A)

# Dodge Ram 2002-2005

- 1. Unclip the top edge of the trim panel below the steering column (it is not necessary to completely remove this panel).
- 2. Remove (1) Phillips head screw from below right A/C heater vent.
- 3. Unclip and remove dash trim panel.
- 4. Remove (4) Phillips

head screws securing the radio. Disconnect and remove the radio. Continue to kit assembly



(Figure A)

# **Dodge Viper 2003-2009**

- 1. Using a small flat blade screw driver, pry up on center console trim panel (take care not to scratch the trim panel). (Figure A)
- 2. Loosen the shifter lock nut below center console trim panel (Figure A) and unscrew the shifter knob. (Figure B)
- 3. Unplug electrical connectors and remove center console trim panel. (Figure C)
- 4. Remove (6) Allen screws from radio/climate control trim panel and (1) Phillips screw at the bottom of the panel.
- **5.** Unplug electrical connectors and remove the panel. (Figure D)
- **6.** Remove (4) screws securing the radio. Disconnect and remove the radio.

Continue to kit assembly



(Figure A)



(Figure B)






(Figure C)

(Figure D)

## **Jeep Grand Cherokee** 1999-2004

- 1. Unclip and remove radio trim panel.
- 2. Remove (4) Phillips head screws securing the radio. Disconnect and remove the radio.

Continue to kit assembly

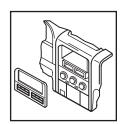

(Figure A)

# Melra

# Dodge Dakota 2001-2004/Durango 2001-2003

- Remove (3) T-20 Torx screws from the bottom edge of the panel below the steering column and unsnap to remove panel.
- 2. Remove (2) Phillips screws from the instrument cluster panel above gauges.
- Remove (3) T-20 Torx screws from the bottom of the steering column shroud and unsnap and remove the top half of the shroud.
- Unsnap and remove entire panel surrounding radio, A/C controls, and instrument cluster.
- 5. Remove (4) Phillips screws securing radio. Disconnect and remove radio. Continue to kit assembly



(Figure A)

#### Jeep Liberty 2002-2007

- 1. Remove ashtray and remove one Phillips screw exposed.
- 2. Unclip and remove radio/ climate control panel.
- 3. Remove (4) Phillips screws securing radio. Disconnect and remove radio. Continue to kit assembly




(Figure A)

## Jeep Wrangler 2003-2006

- 1. Unsnap and remove defroster grille panel near windshield.
- 2. Remove (2) Phillips screws exposed at the top of the center dash panel and unsnap and remove panel.
- Remove glove box door to access one 10mm nut on back of radio.

4. Remove (4) Phillips screws securing radio. Disconnect and remove radio.

Continue to kit assembly



(Figure A)