




- 5** Lie the grow tent on its side and slide the base of the canvas over the bottom of the framework. Close all zips fully and stand the grow tent back up.

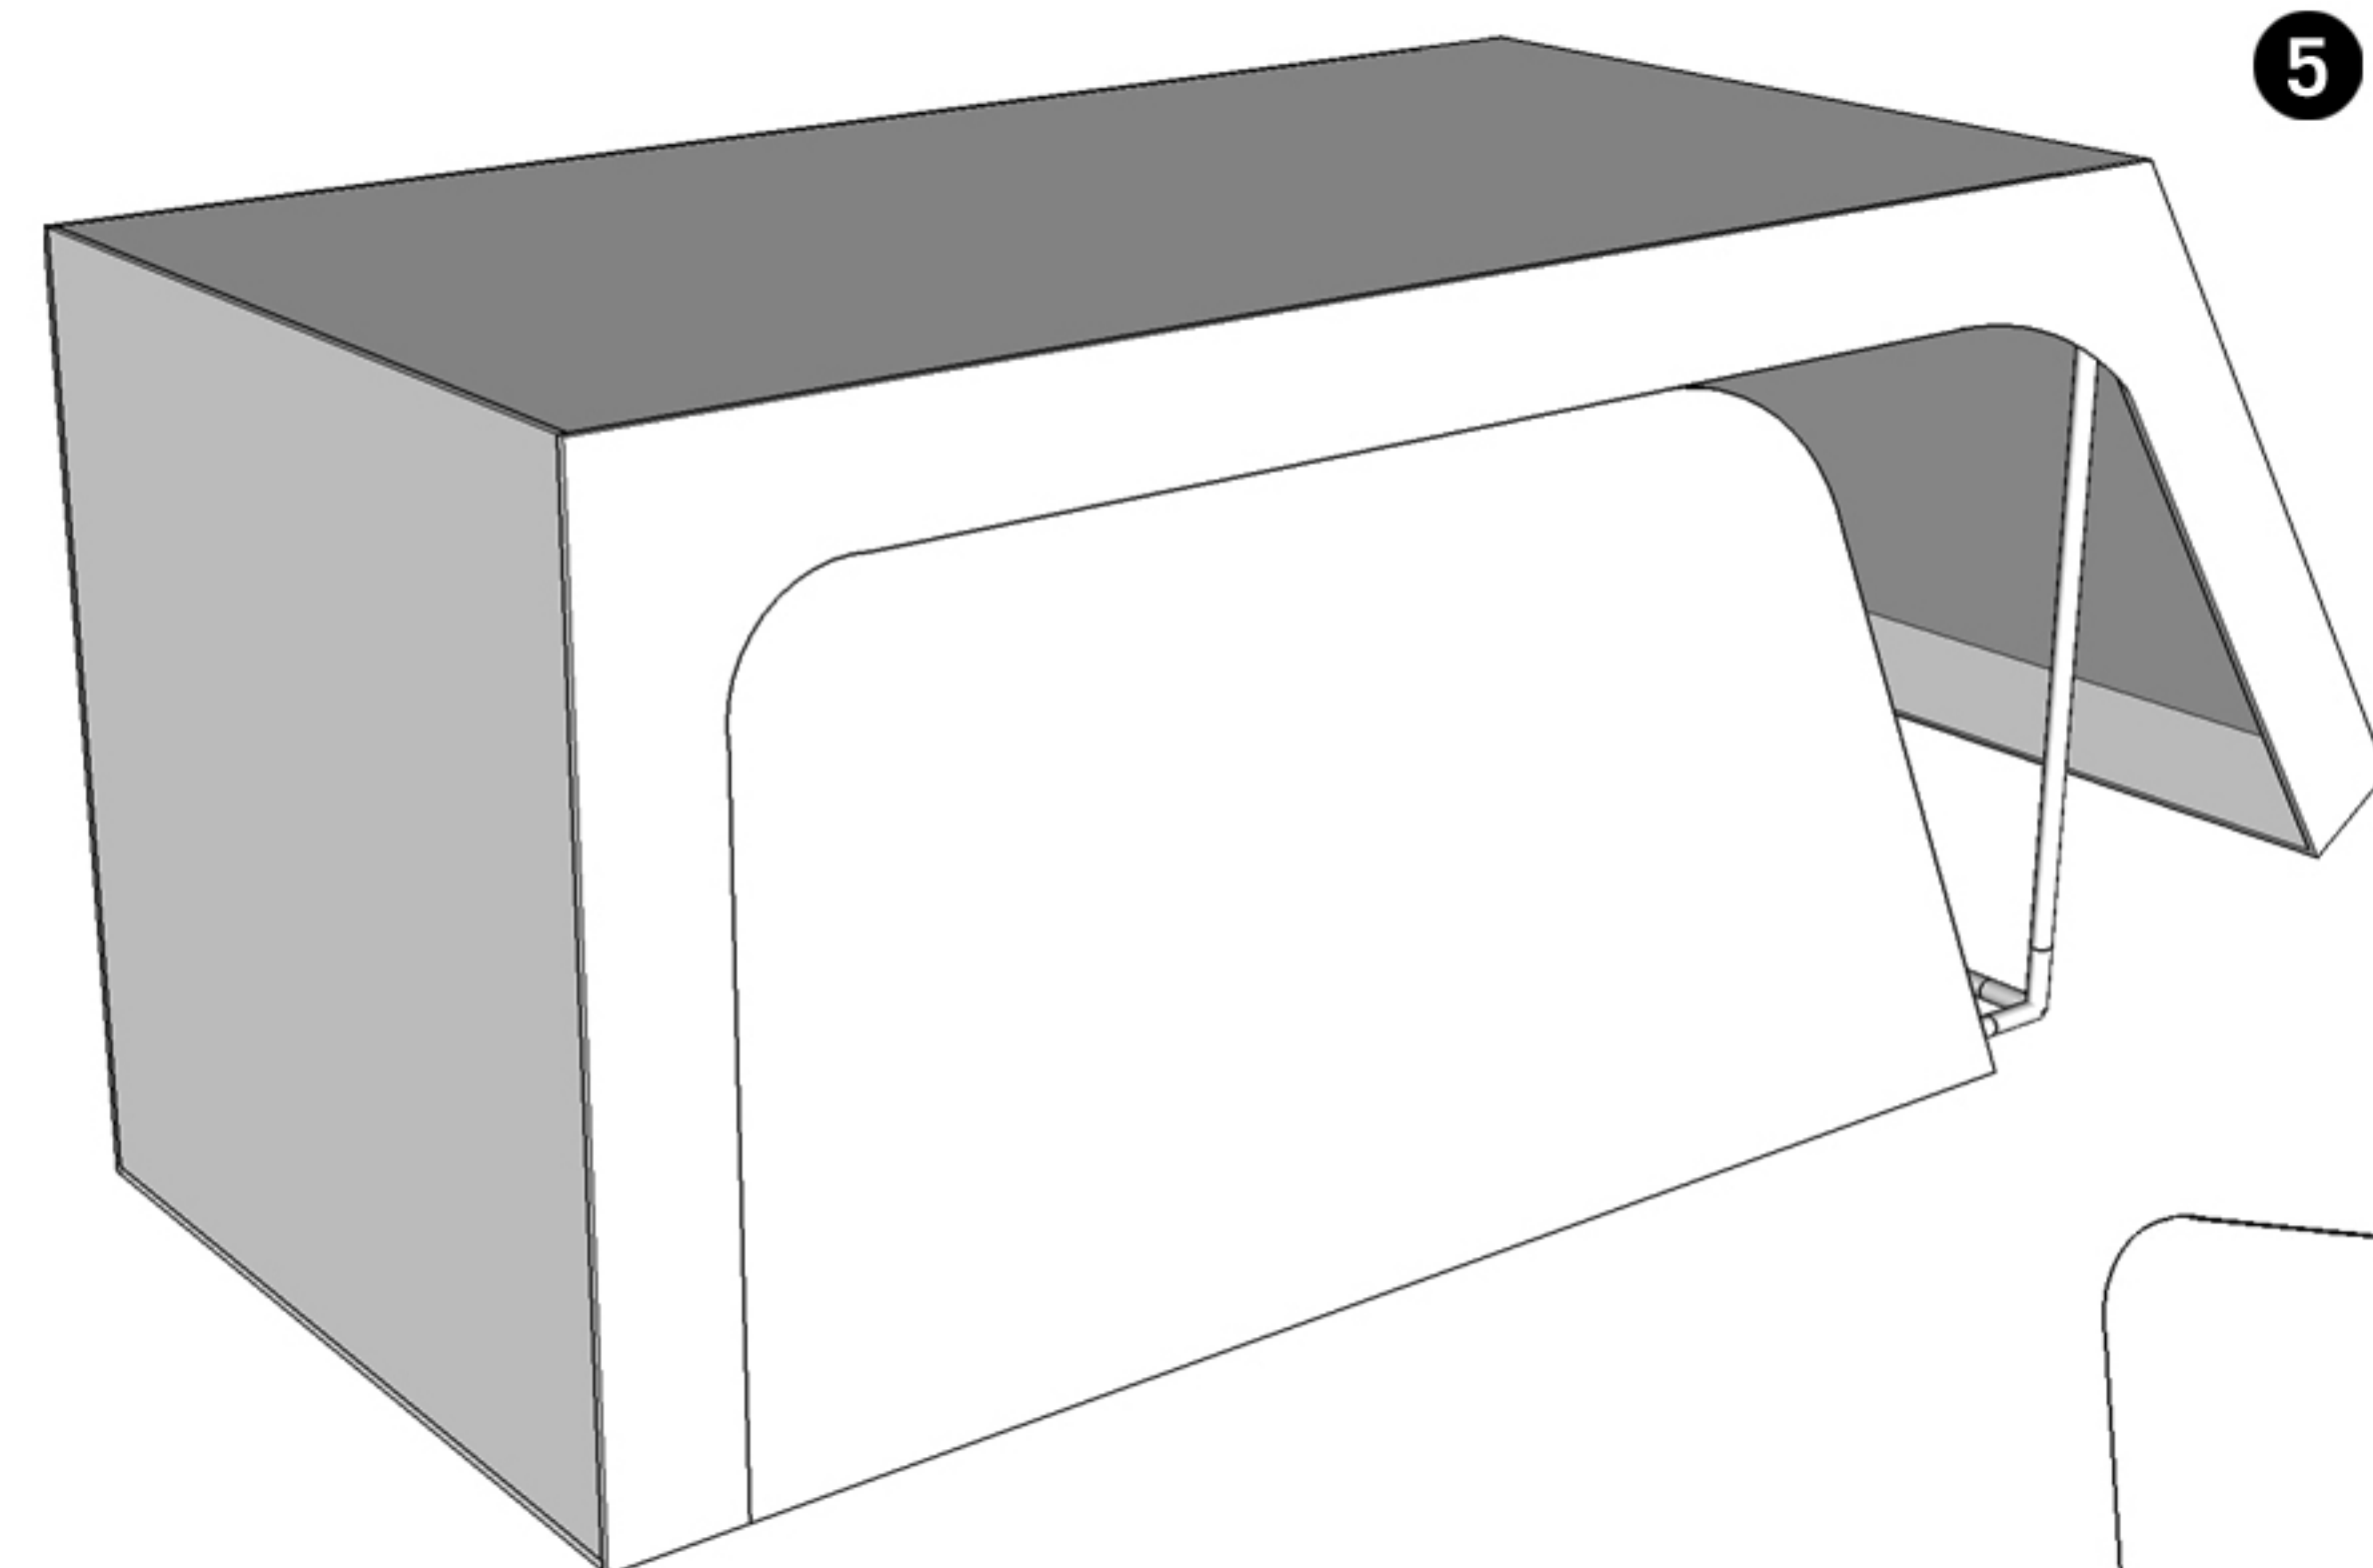

- 6** Unzip the front door and place the fabric spill tray into the bottom of the tent. Locate the velcro tabs around the outside top edge of the tray and fasten them to the tent framework.

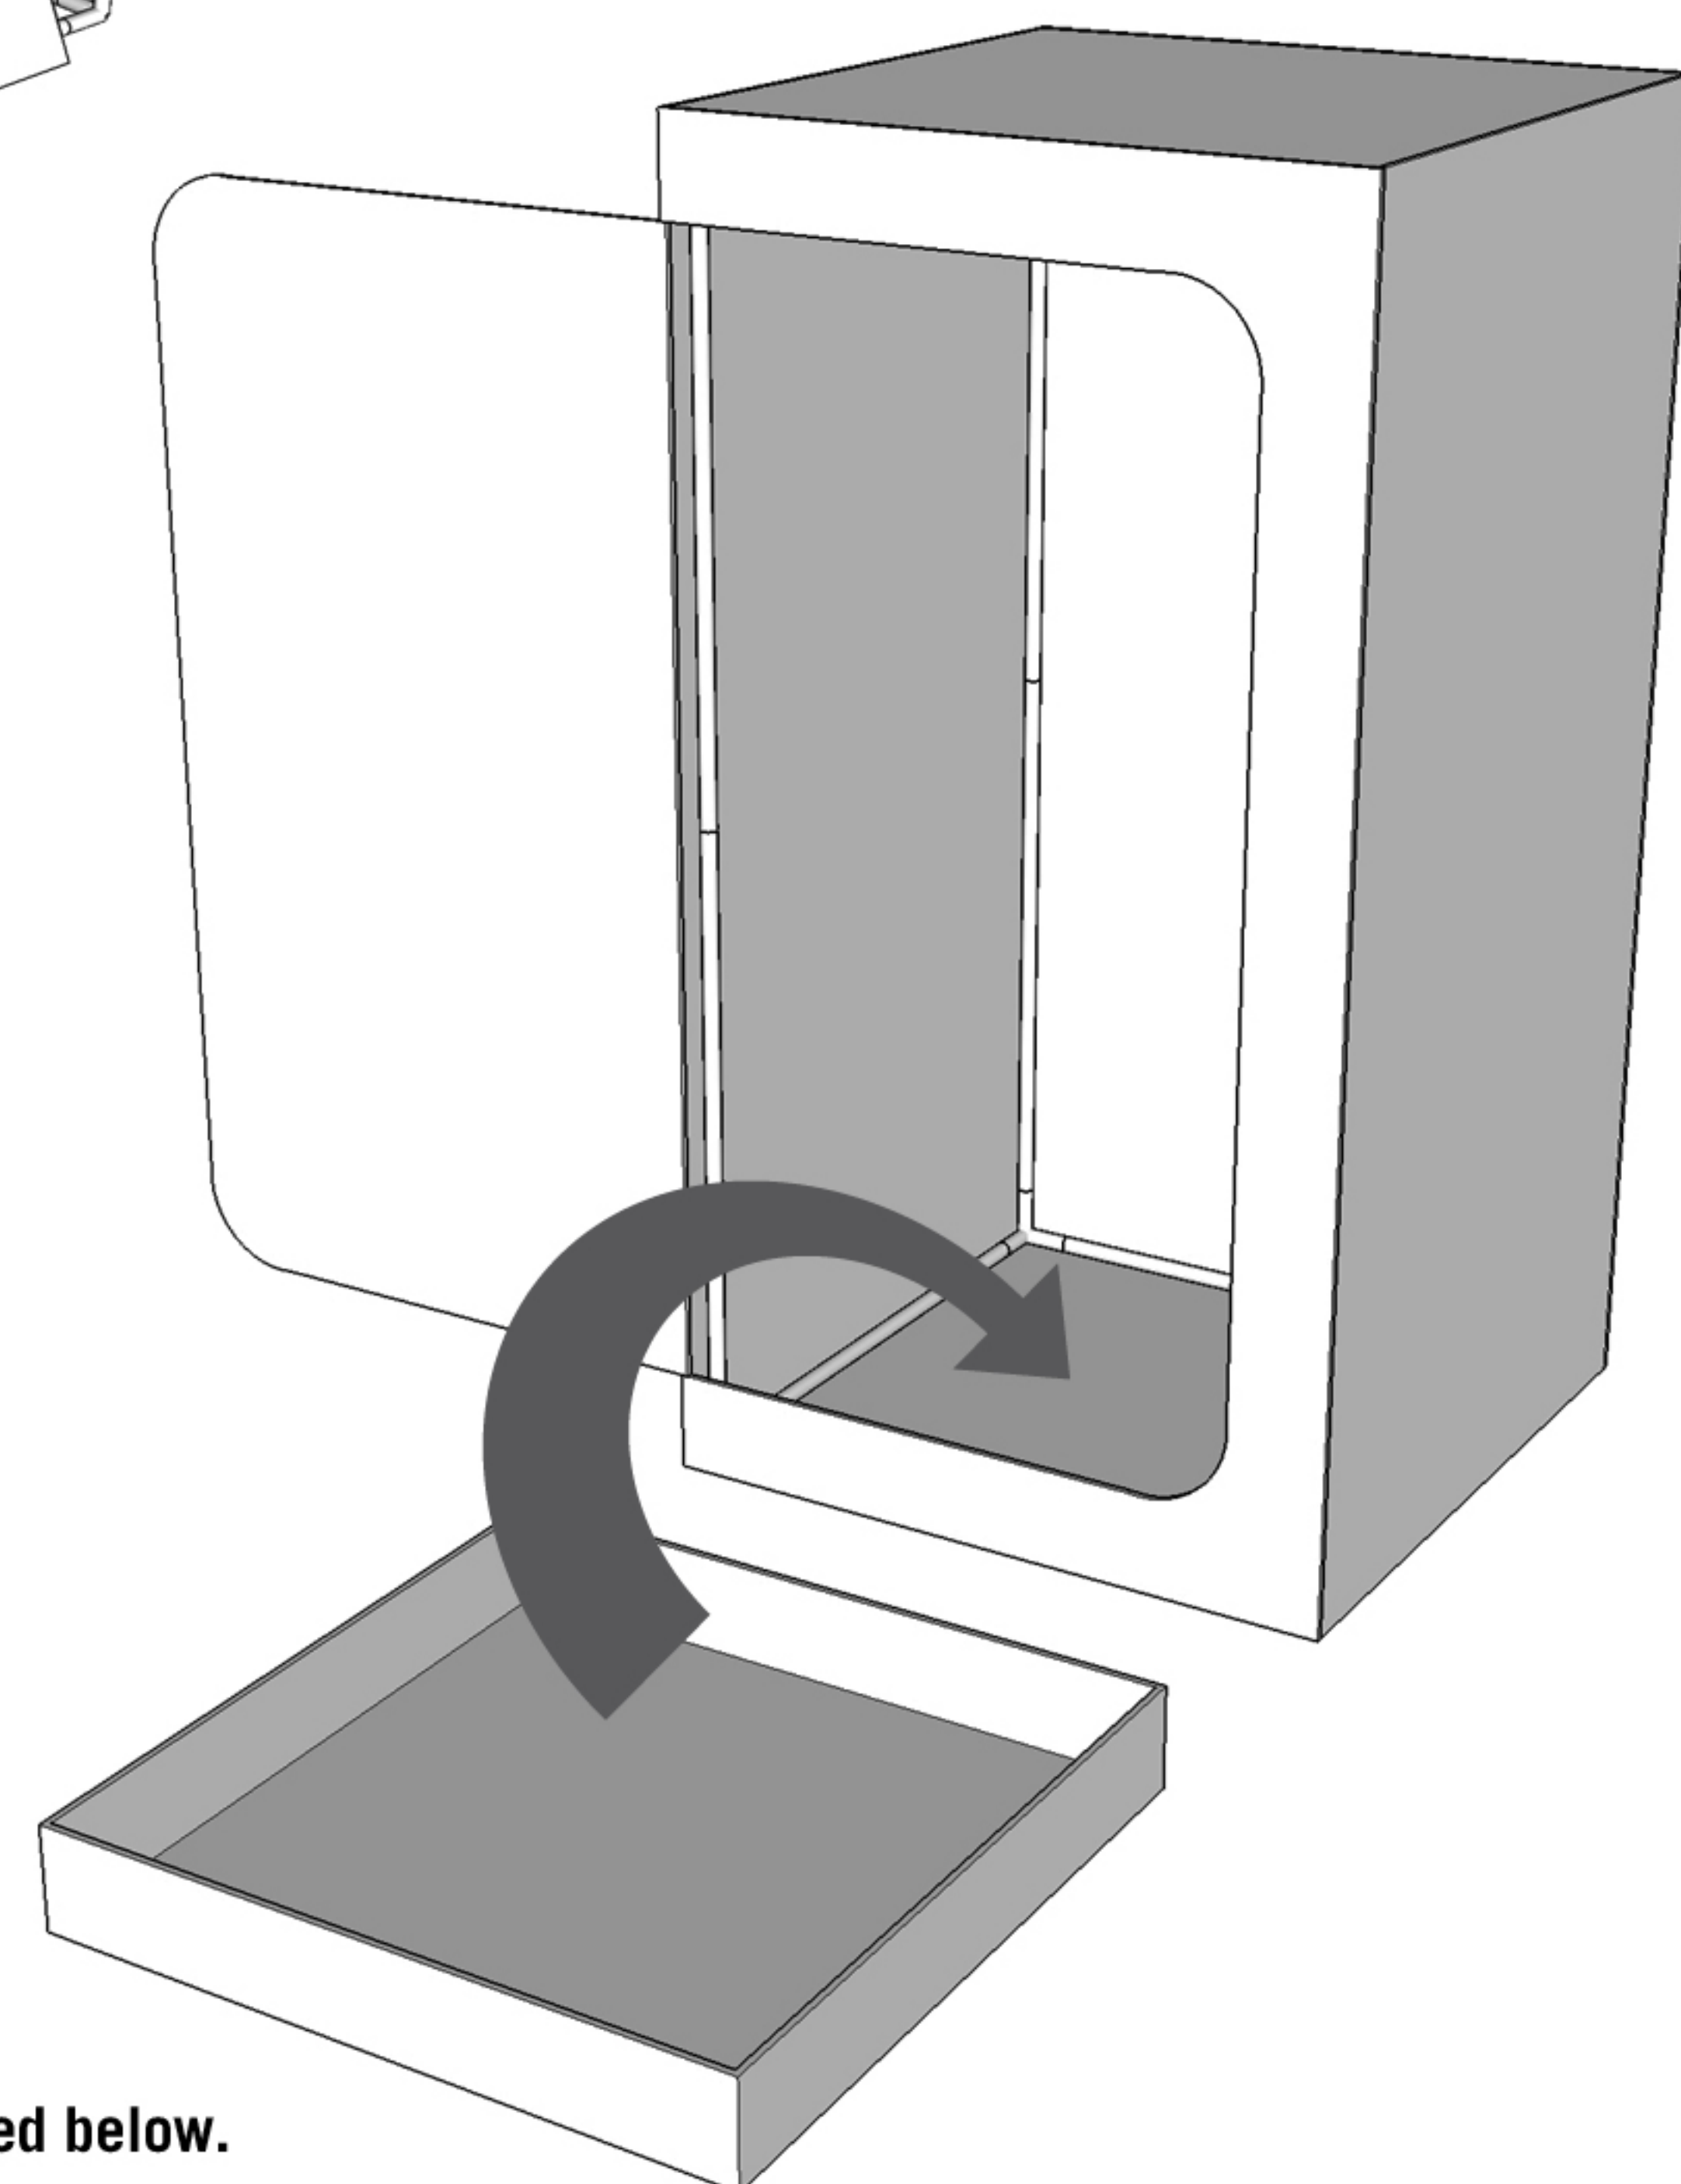

- 7** Fit the ceiling hanging bars inside the tent as pictured below.

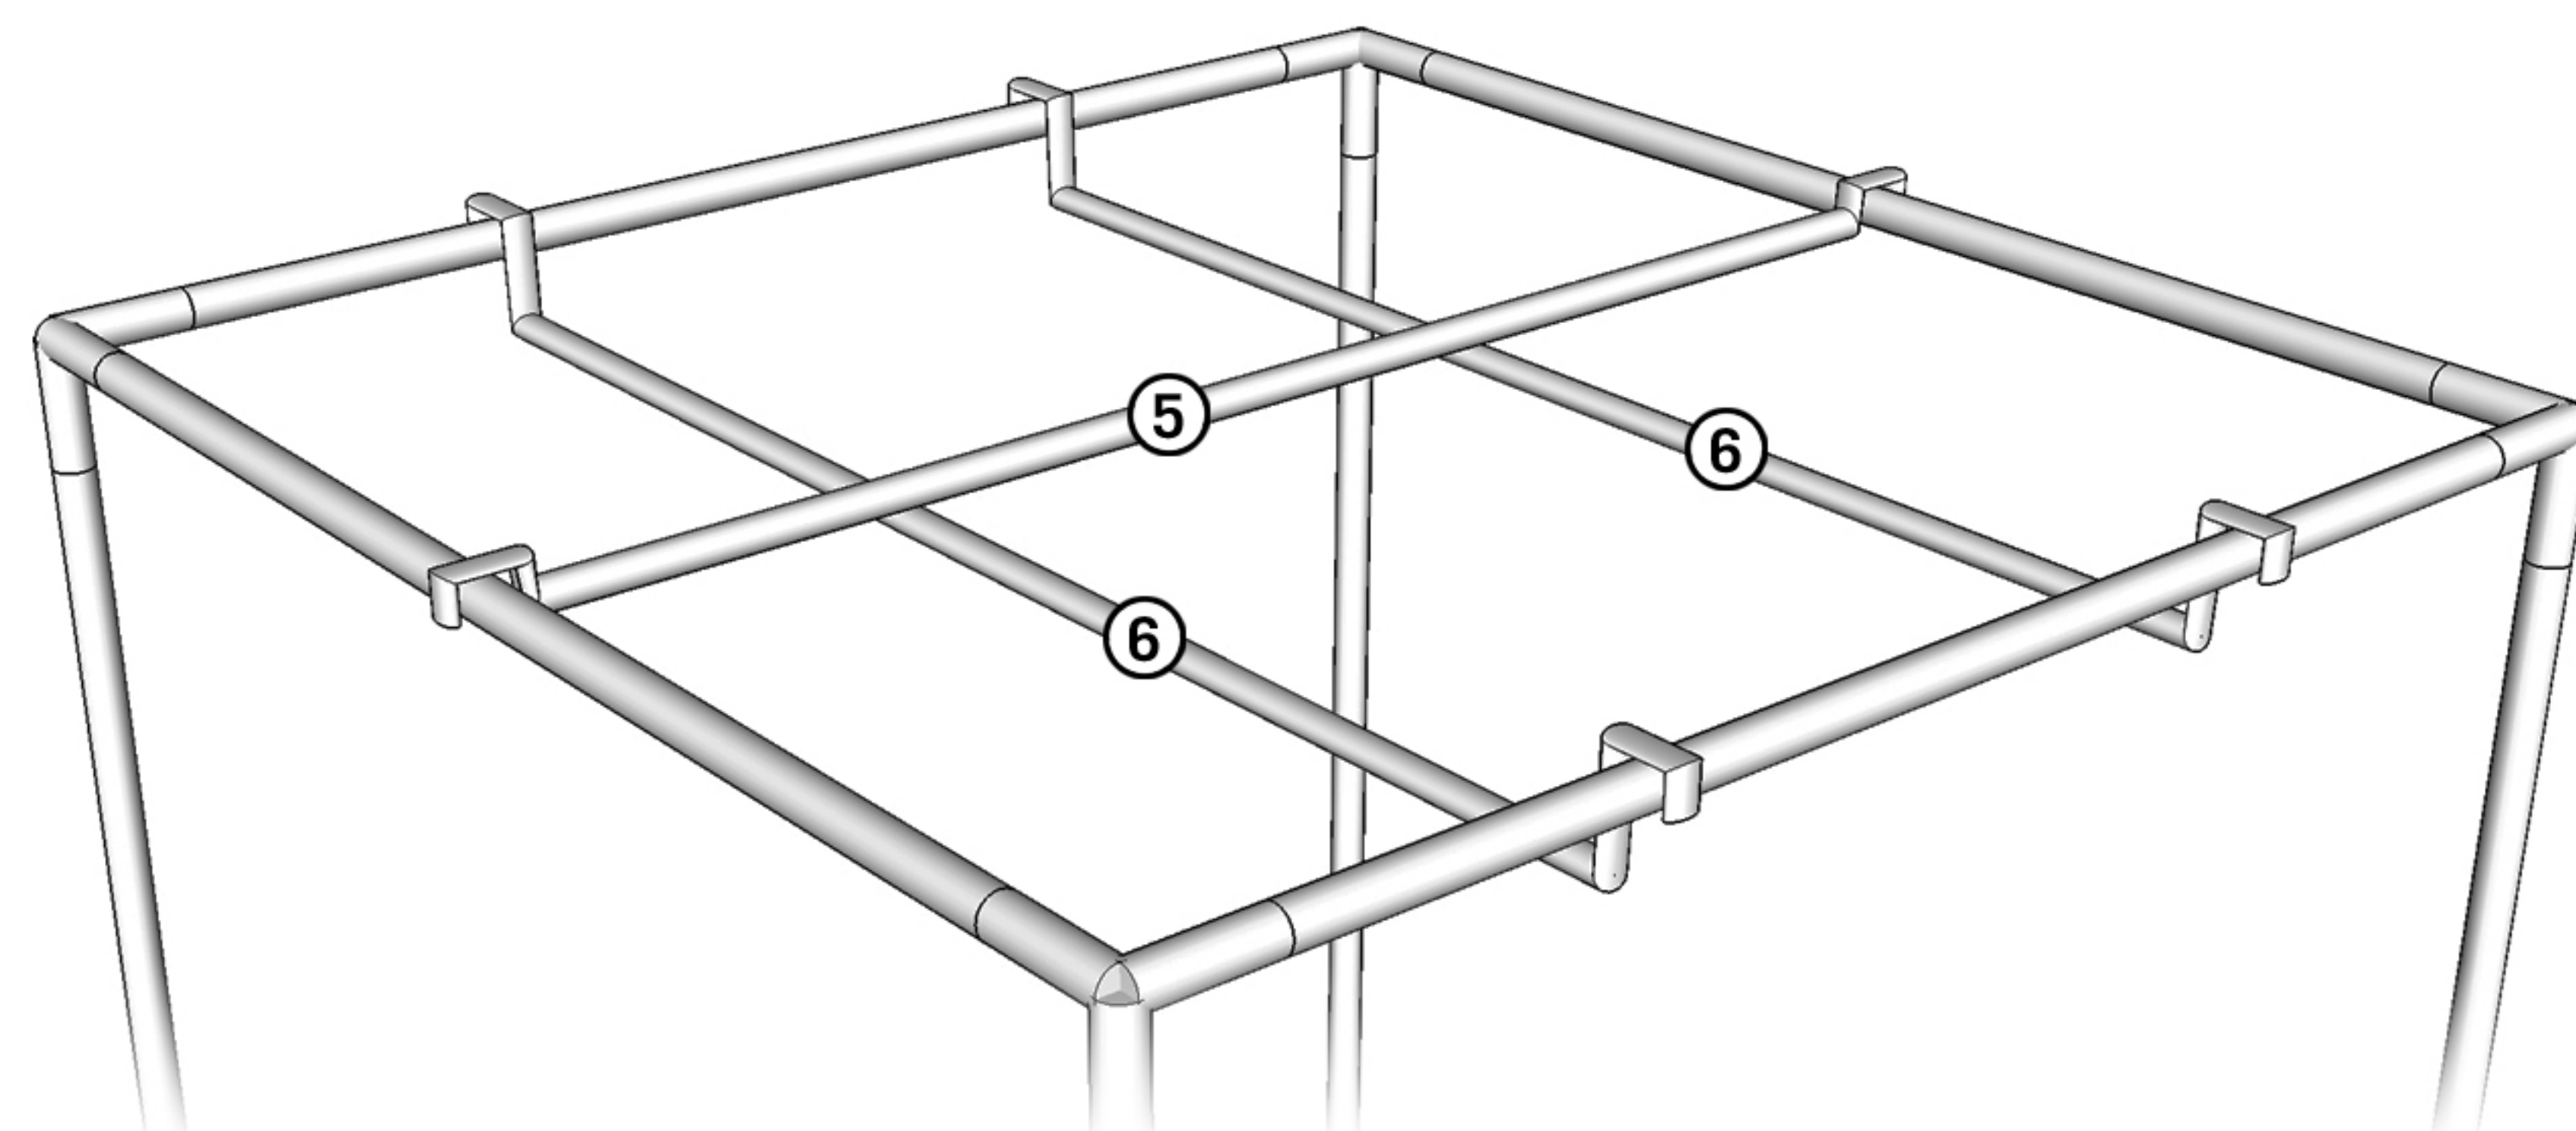

Hydrolab
HIGH PERFORMANCE GROW TENTS


Assembly Instructions

Models:

LAB60, LAB80, LAB100, LAB120,
LAB120-S, LAB120-SX, LAB120-XL
LAB120-XXL, LAB150


PARTS LIST:

①




x 4

②




x 4

③




x 4

④




x 4

⑤




x 1


⑥




x 2

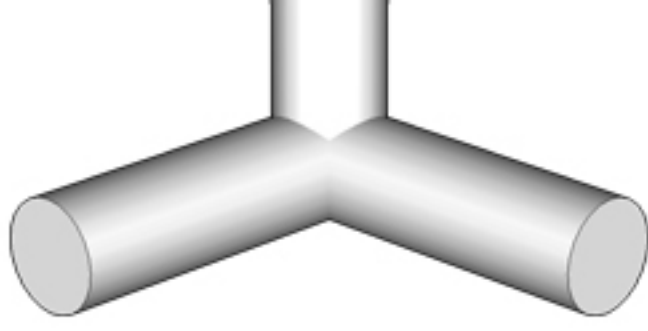


x 8




1 x Tent Outer Canvas



1 x Fabric Spill Tray




4 x Fan / Filter Straps




1 x Carry Bag

ASSEMBLY:


① Connect the grow tent framework ensuring that the poles are seated properly in the corner connectors. It may be necessary to gently twist the poles back and forth until the connection tabs pop-out and lock into place.

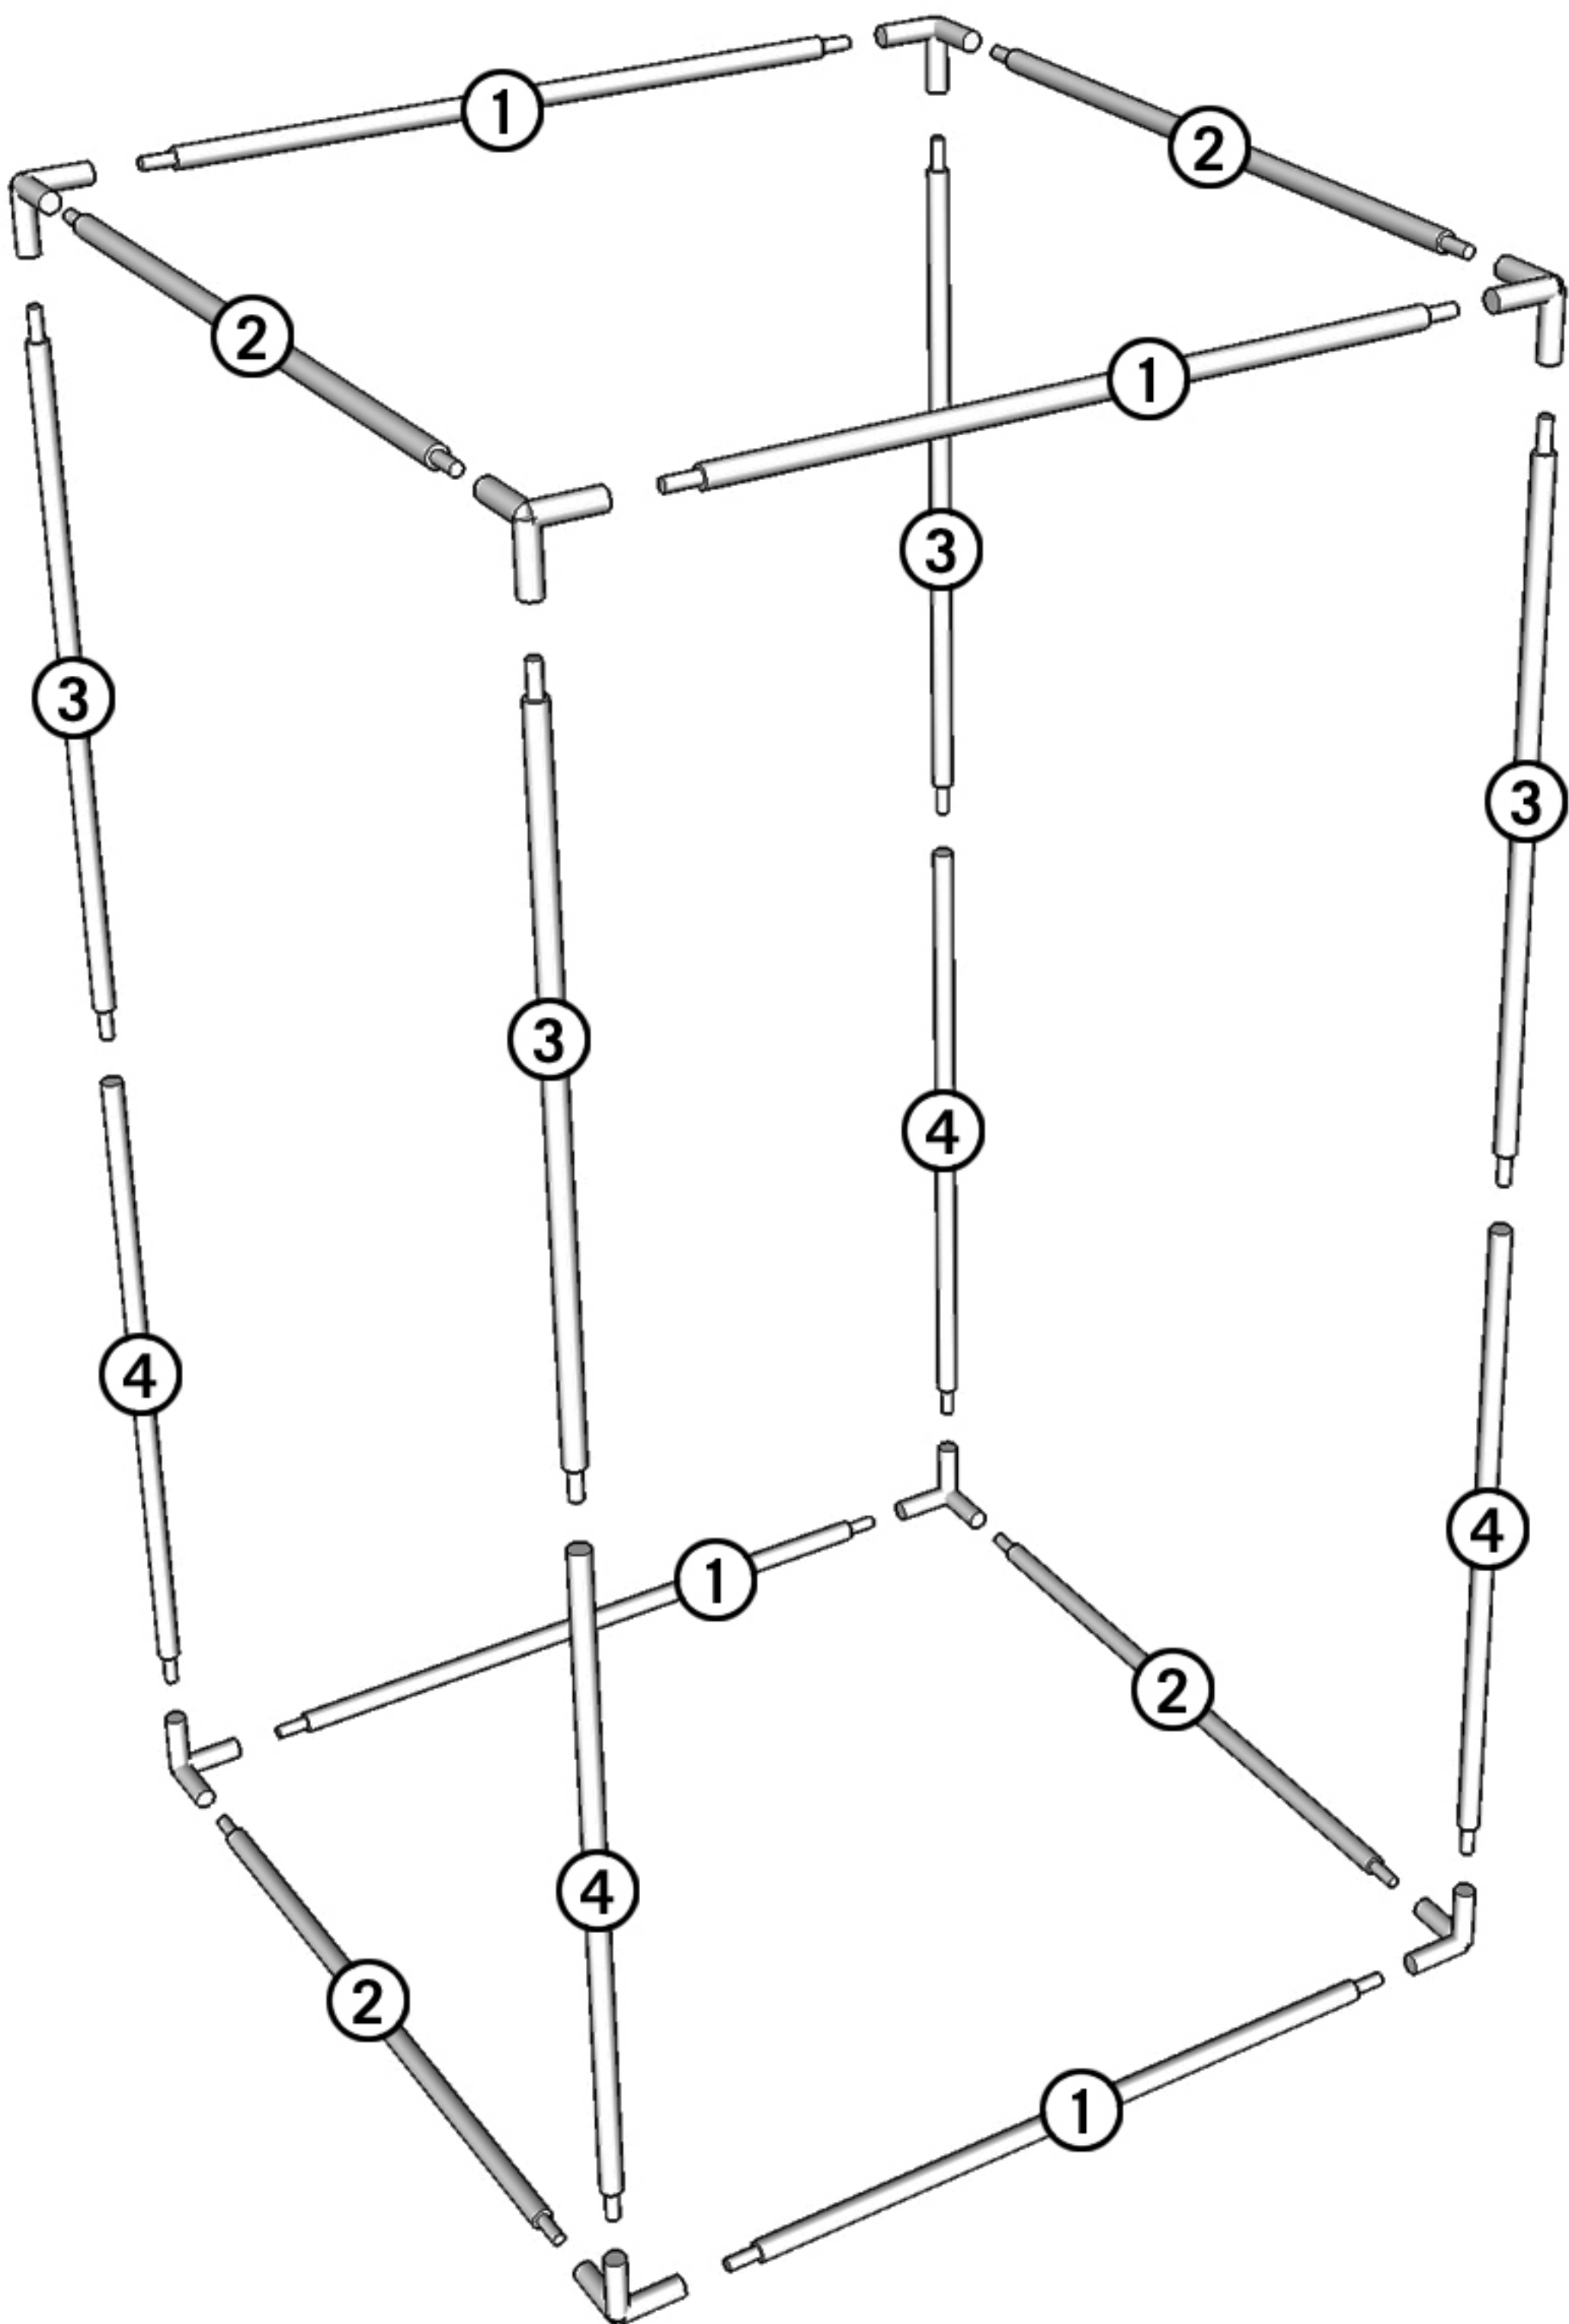

② Lay out the grow tent outer canvas, making sure that all the zips are completely undone.

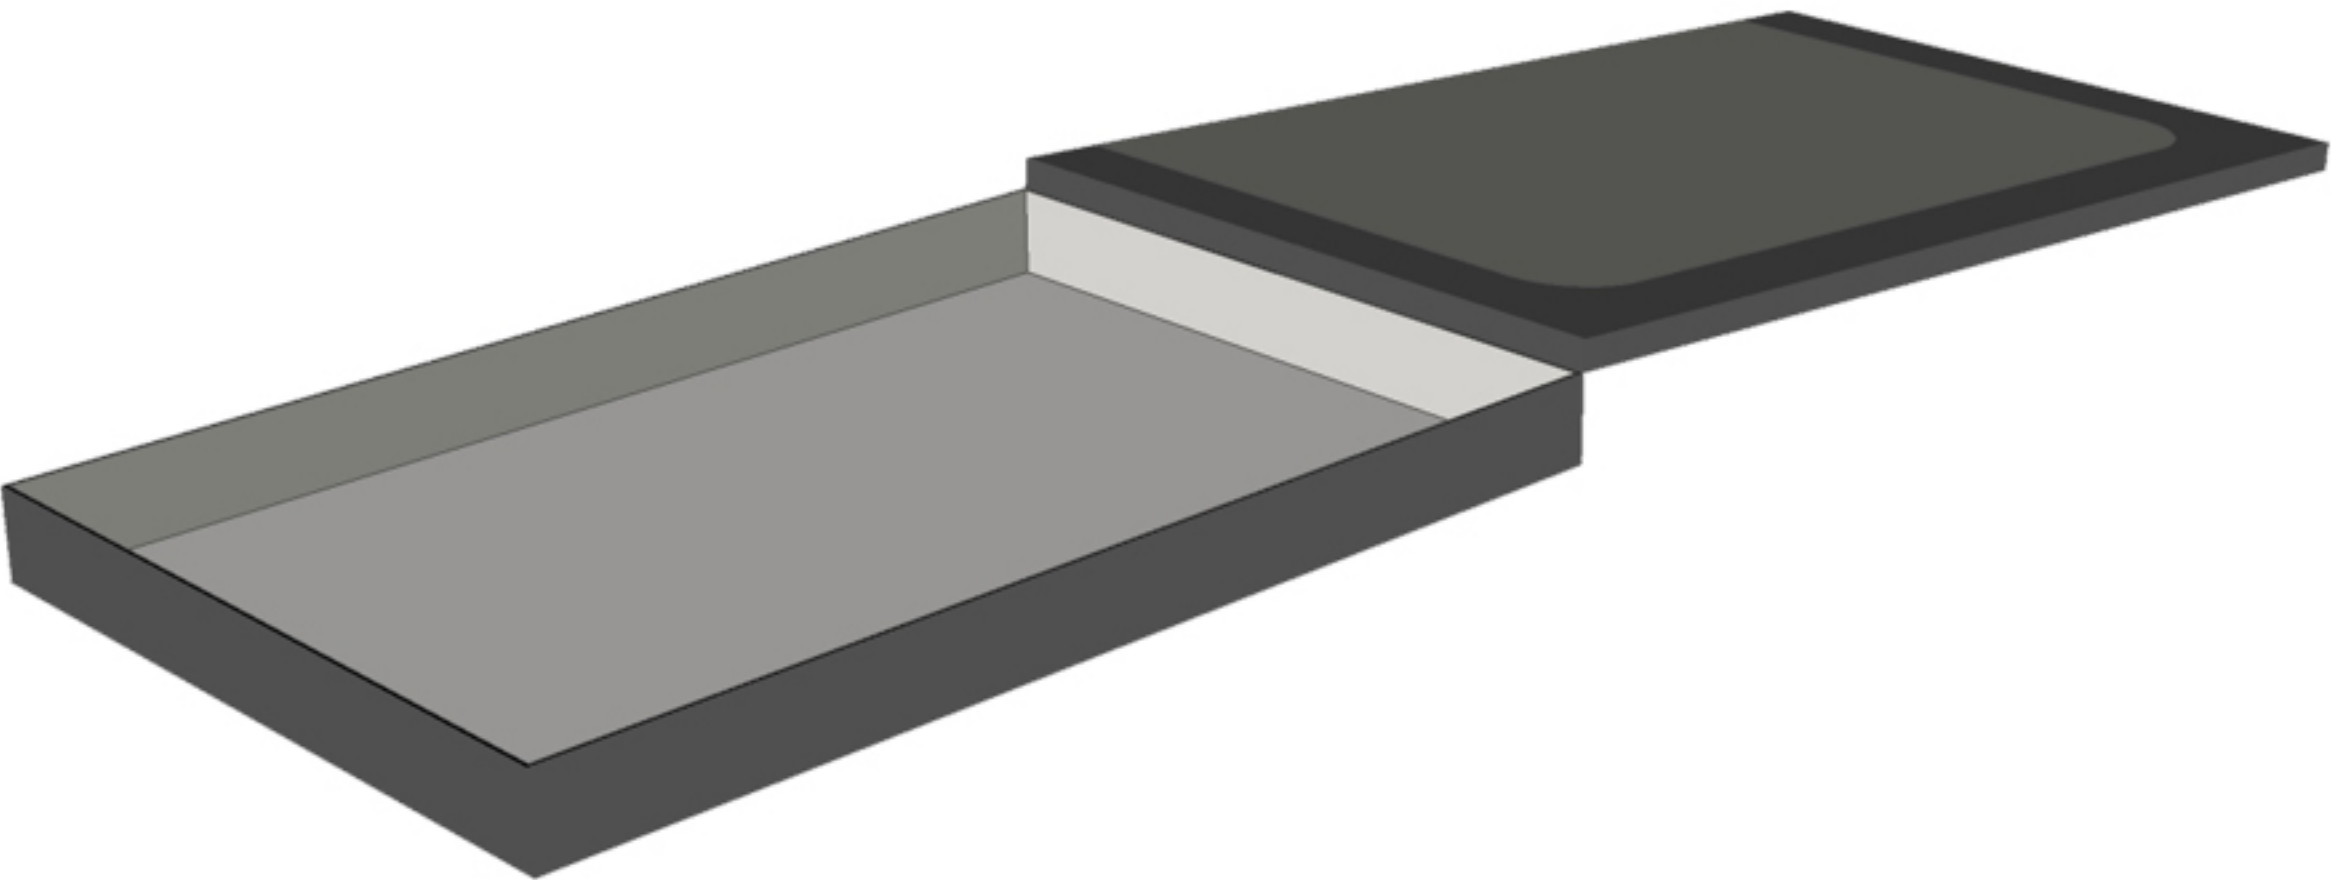

③ Pull the grow tent outer canvas over the constructed framework, ensuring that the tent floor is left to one side as pictured.

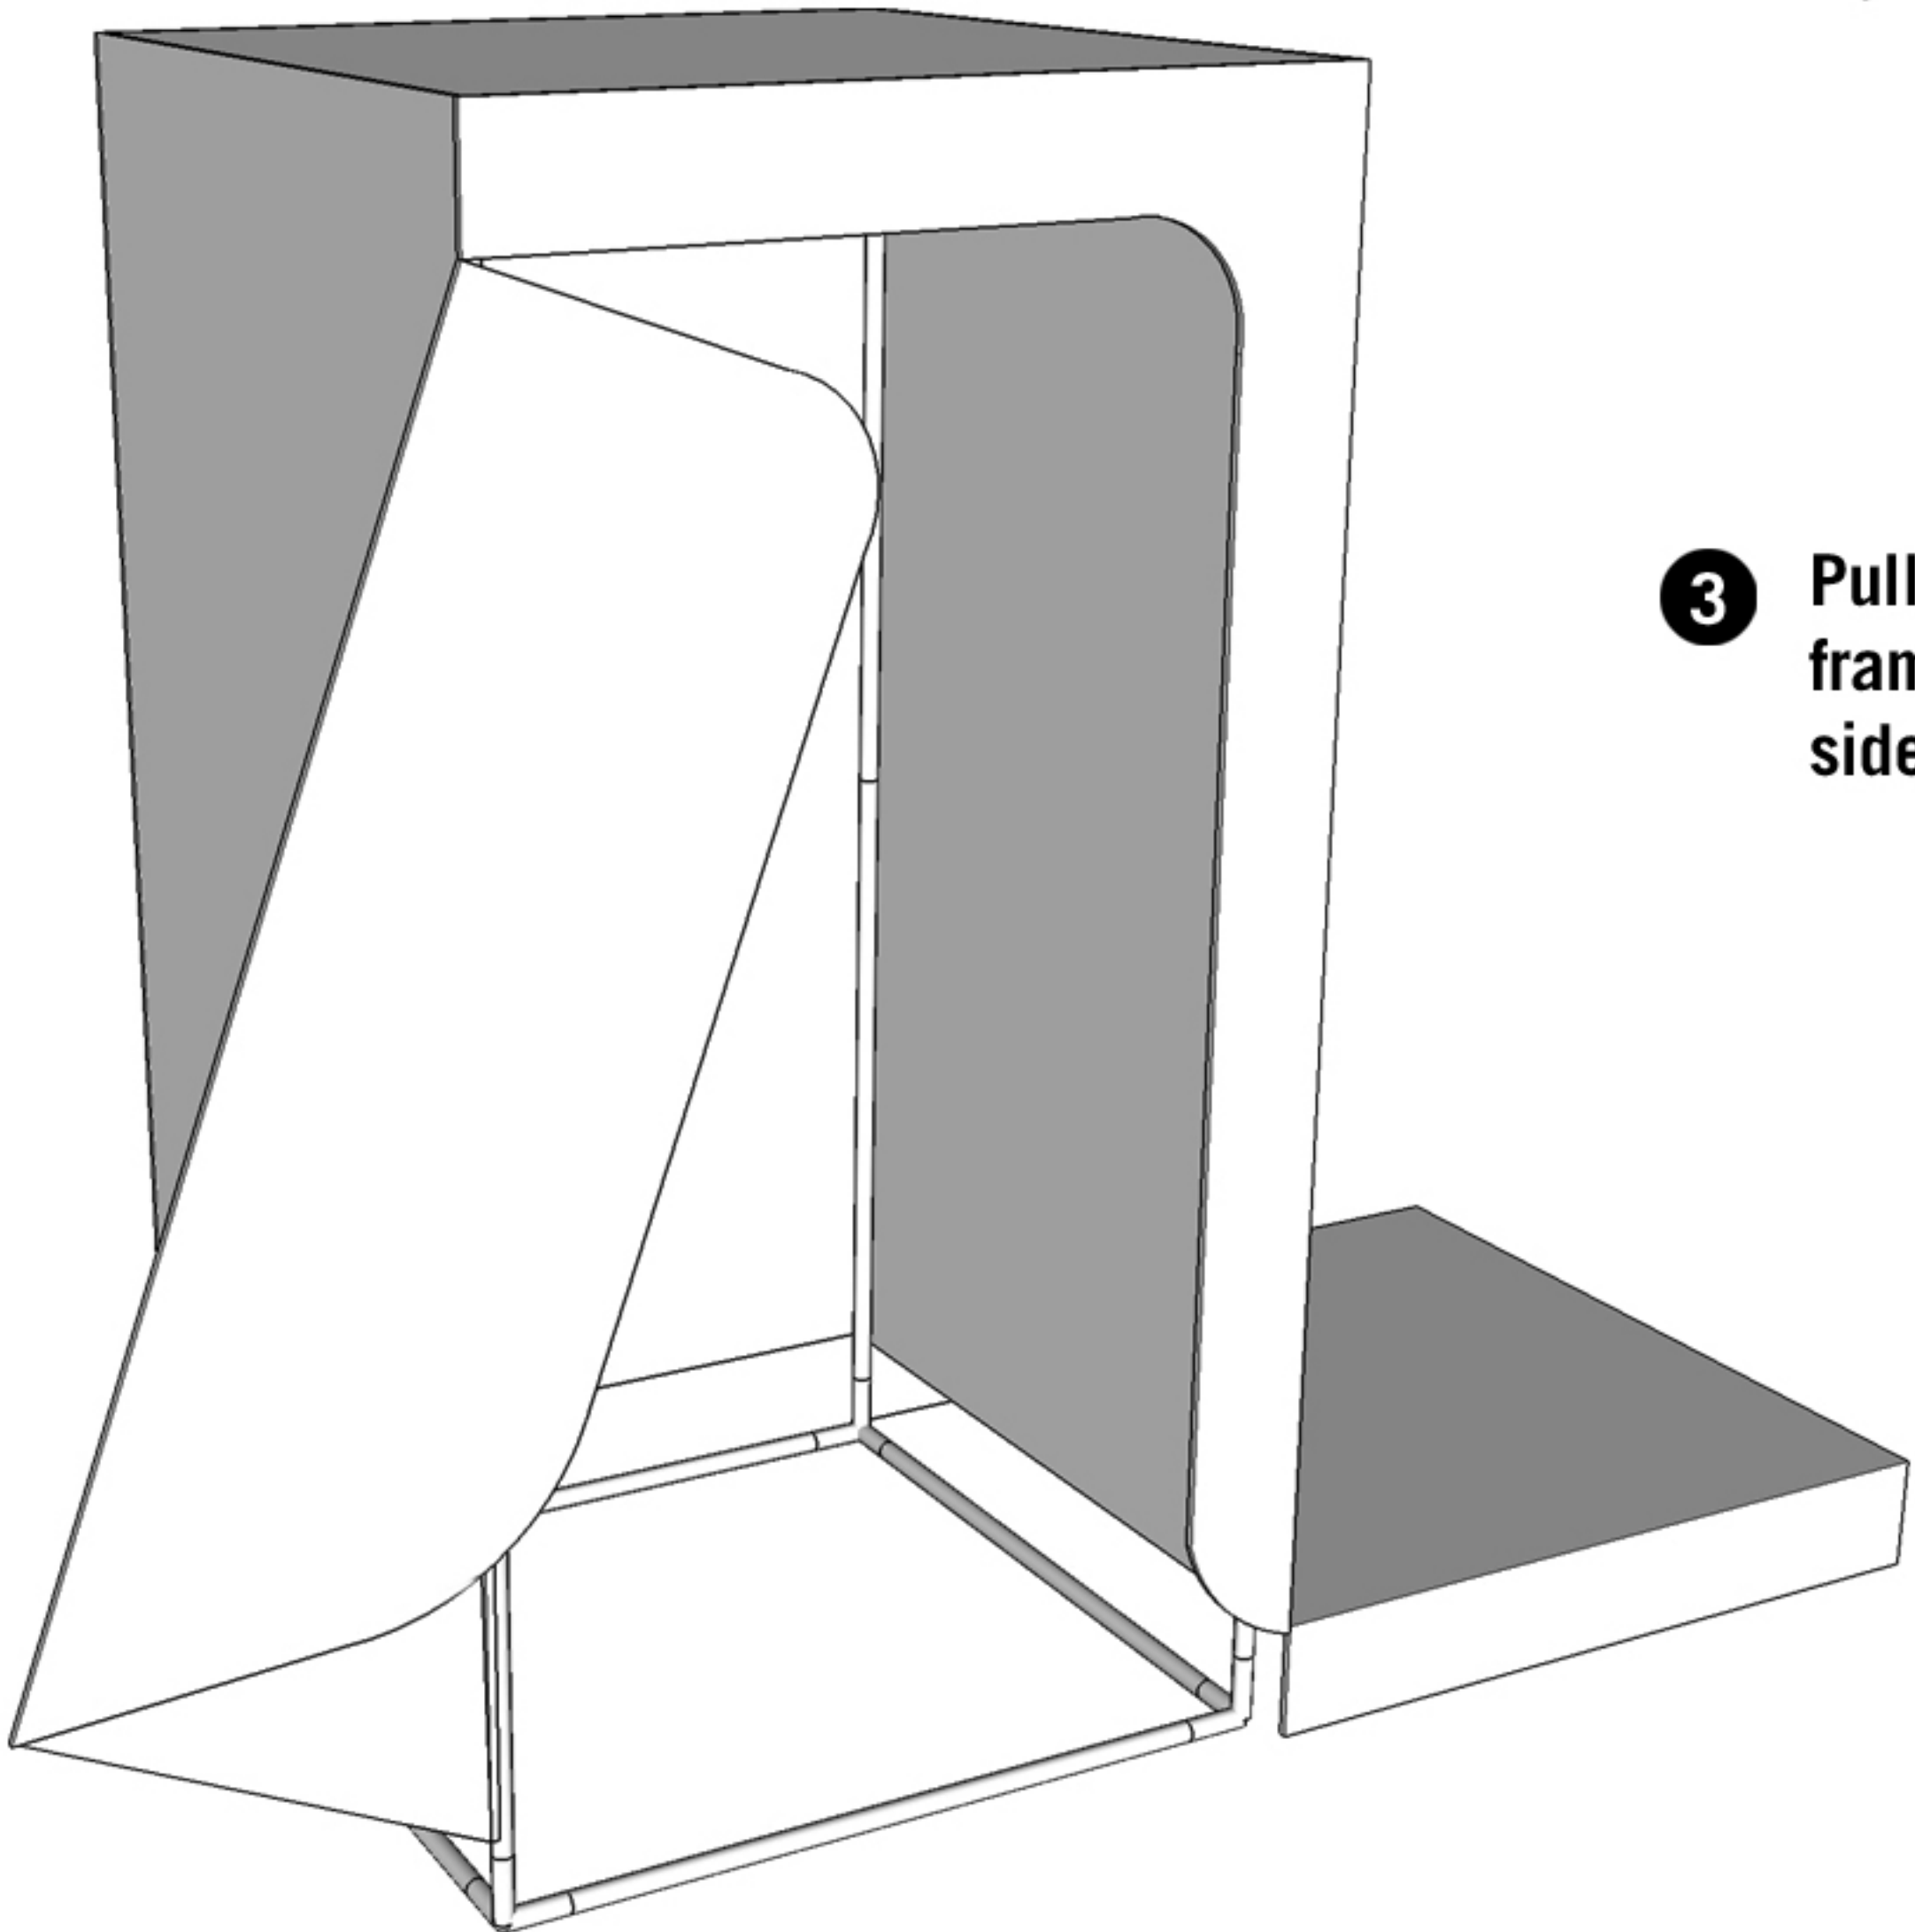

④ Zip up the front of the tent half way as pictured.

