
2008 KLR 650 Mounting

for Explorer, Explorer Lite (shown) and Large Expedition Tank Bag

Installation:

- 1. Make sure your tank and the bottom of the bag are free of dirt, etc.
- 2. **Figure1:** A correctly mounted Explorer Lite.
- 3. **Figure 2:** Front mounting harness assembly. Unclip bag straps from front frame strap.
- 4. **Figure 3:** Wrap front frame strap around frame behind steering head tube. Make sure rubber section is on the bottom of frame tube and 3/4" D-rings are even on both sides.
- 5. **Figure 4:** Front frame strap runs along frame under all cables and wires on both sides. Attach hook and loop as snuggly as possible. Reclip Bag Straps to 3/4" D-rings on either side of frame. (See Figure 3)
- 6. **Figure 5:** Unfasten the two rear straps from the two buckles and webbing keeper. Take the rear straps of webbing (the rear is the handle side of the bag with the buckles under the bag) and feed them around each side of the frame down-tube.
- (**Figure 6**) between the tank and side panel and back throught the rectangle loop buckle. Even the ends of webbing and feed them through the keeper and through the male buckles. (Keeper will sit under the tongue of the seat).
- 7. Tighten straps snug in front and rear.
- 8. To gas up, unclip front two straps and tilt the tank bag bag onto the seat. Fuel. Re-clip and tighten. Enjoy! For technical support call **1-800-535-8131**

Front Frame Strap

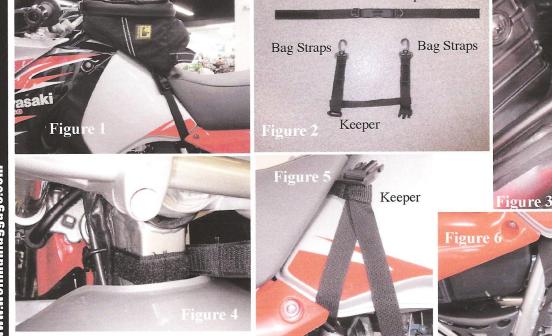

Ay wolfmanlinnane com