

**Mounting instructions for Wolfman  
Yamaha Super Tenere XTZ 1200 Rear Top Rack  
PART # RTR15**

**Read and understand these instructions prior to installation!**

This kit contains the following:

| Quantity | Description  |
|----------|--|
| 1        | Top rack   |
| 2        | 8 x 1.25 x 60mm Flat head bolts  |
| 2        | 8 x 1.25 x 70mm Flat head bolts  |
| 2        | 3/4 x 1.150 Aluminum spacers (for use with factory pillion rack)         |
| 2        | 3/4 x 1.400 Aluminum spacers (for use with factory pillion rack)         |
| 2        | 3/4 x 1.600 Aluminum spacers (for use with Wolfman pillion rack RTRP15)  |
| 2        | 3/4 x 1.850 Aluminum spacers ( for use with Wolfman pillion rack RTRP15) |

**Tools required:**

Blue Loctite or a medium strength thread locker

5mm Hex wrench


6mm Hex wrench

**\*Hardware provided with top rack is intended to be used without OEM plastic spacer installed.** There are eight spacers supplied with this kit, you will only need 4 depending on your mounting configuration.

**Read and understand these instructions prior to installation!**

**Be sure to thread lock all bolts**

**Correctly mounted top rack on a Yamaha Super Tenere 1200**

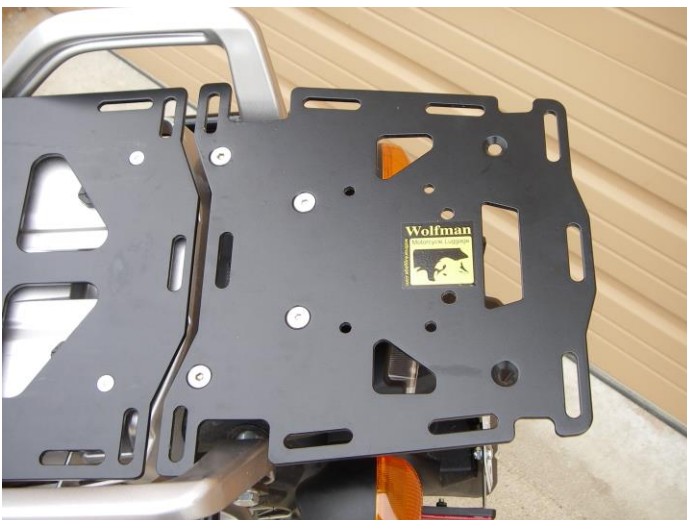

1. Remove factory Rear Top Rack and black riser piece.

**For mounting top rack flat with factory plastic pillion seat rack**

2. Place two 3/4 x 1.400 spacers in the front right and left mounting points & two 3/4 x 1.150 spacers in the back right and left mounting points. **FIG 1**

3. Mount top rack in place using two 8mm x 1.25 x 70mm flat head bolts with thread lock in the front right and left mounting holes and two 8mm x 1.25 x 60mm flat head bolts with thread lock in the back right and left mounting holes.

4. Tighten all bolts.


**For mounting top rack flat with Wolfman Pillion Rack (RTRP15)**

2. Place two 3/4 x 1.850 spacers in the front right and left mounting points & two 3/4 x 1.600 spacers in the back right and left mounting points. **FIG 1**

3. Mount top rack in place using two 8mm x 1.25 x 70mm flat head bolts with thread lock in the front right and left mounting holes and two 8mm x 1.25 x 60mm flat head bolts with thread lock in the back right and left mounting holes.

4. Tighten all bolts.

**FIG 1**

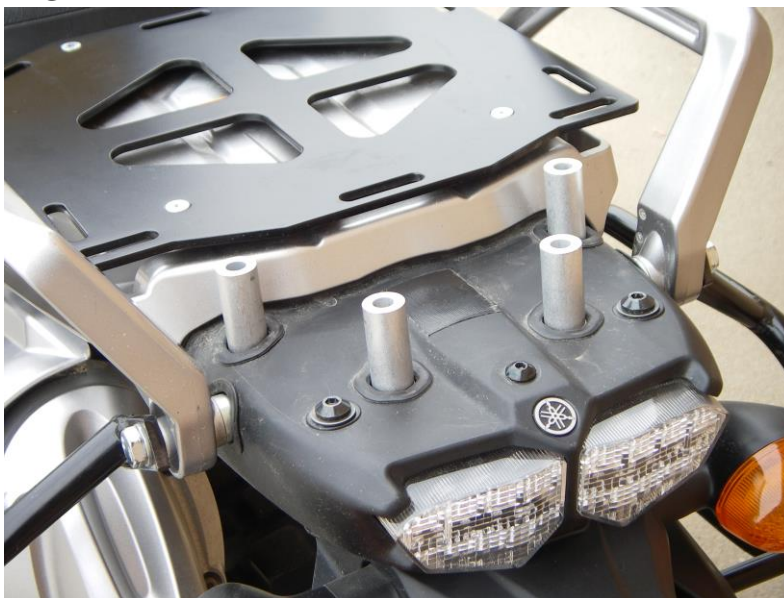

**\*\*Periodically re-check all nuts and bolts to maintain rigidity and structural integrity\*\***

If you have any questions call 800/535-8131 or email [sales@wolfmanluggage.com](mailto:sales@wolfmanluggage.com).  
Enjoy!