



Wolfman Mounting guidelines for the Small, and Medium, and Large Rolie Bag to a FlatTank mount. You can now use your Rolie Bag as Over the Tank Storage.

Rolie Bag Tank Storage on a Flat Tank. Fig.1&Fig.2

Fig.1



Fig.2 With Map Pocket




You will need:

Flat Tank Mount: Keeper

Small Rolie Bag

Medium Rolie Bag

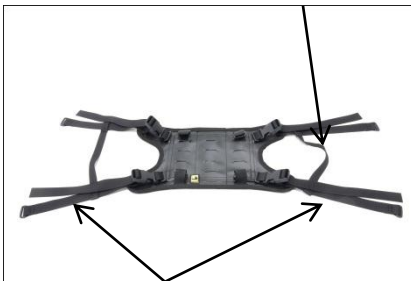

Mounting Straps

Large Rolie Bag

Small Map Pocket

Large Map Pocket



**\*\*\*\*Please read and understand these instructions before touching your bike, rack or wrench.\*\*\*\***

**\*\*\*\*\*Make sure your Gas Tank and Rolie Bag Tank Mount are free of Dirt. \*\*\*\*\***

**1. To Start you will need to "Patch Thread" your Rolie Bag.**

\*\*\*\*\*

**"Patch Thread" Setting up The Small or Medium Rolie bag.**

Tools Needed:

Long Screwdriver, Chop Stick, or long tool.

Your Small or Medium Rolie bag comes with two Seat Straps.  
 These will be "**Patch Threaded**" Fig.a




Fig.a

1. Remove the Flappy strap keepers as they will not be used at all.
2. Insert raw end of the Seat Strap Webbing into the slot on the patch welded to the bag, on the underside of the buckles.

Fig.b Small Rolie



Fig.c Medium Rolie

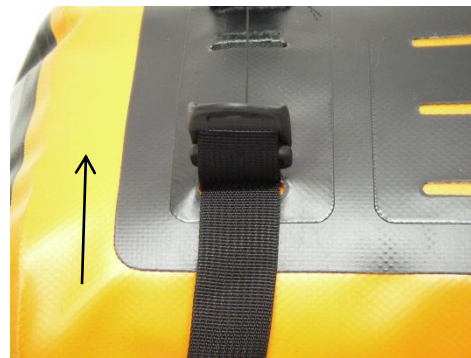

4. The Medium Fig. c
5. Center webbing, the loop will stick out about 1/2" on each side.
6. Your bag is now "**Patch Threaded**".

\*\*\*\*\*

**Mount Guidelines.**

1. Set the Flat Tank Mount on tank with the tabs facing the front and rear of the bike. Fig.1



Fig.2



2. Unfasten the front harness. Separate the buckles from the webbing.
3. Locate a frame tube, radiator, tank mount, etc. near the Steering head Tube. Fig.2

4. Thread the RAW/Cut end of the strap around the Location and through the Rectangle Buckle. Pull tight to secure to the bike. Fig.3

Fig.3



Fig.4



5. Thread the Mounting Straps through the Keeper and through the Male Buckle and Clip to the Flat Tank Mount. Fig.4


6. Repeat for the other side.

7. Using the same Threading method, Mount the rear harness. Usually you will have to remove the seat. Thread the straps around the frame rails, seat bracket, etc. and through the Rectangle Buckle. Pull tight to secure to bike. Make sure not to pinch any hoses or wires. The mounting straps come out between the seat and gas tank. Fig.5

Fig.5



Fig.6

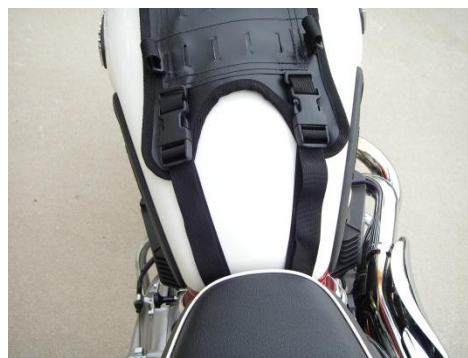

8. Thread the Mounting Straps through the Keeper (if necessary ) and through the Male Buckles. Fig.6  
Fig.6 Clip to the Flat Tank Mount Buckles and tighten straps snug.

### **Attaching a Rolie Bag.**

10. Set the Rolie bag of your choice on the Flat Tank Mount. Fig.7

Fig.7



Fig.8



11. Thread the "Patch Threaded" Webbing through the Rectangle Buckles on the side of the mount.
- Fig.8 Thread the strap from the inside to the outside and through the buckle on top of the Rolie Bag.
12. Repeat for the remainder of straps.
13. Correctly mounted Rolie Tank Storage should look like Fig. 1 & 2.

Hints:

Getting Gas: Simply unclip the two front buckles and tilt the bag and mount on towards the seat, fill reclip, and GO.

**\*\*HINT\*\***\*\*\*\*\*

**For Best Results use the Ratchet Method of Tightening webbing.**

Most of us just grab and pull webbing to tighten it. Well there is an easier way.

1. Pull Up on the loose end of webbing lifting the buckle while pushing on the webbing before the buckle.

Fig.1



Fig.2



2. Bring the loose end down tightening as you go. Fig.2
3. Do this until the bag is very snug.
5. When you are done your bag should look like Fig. 1 on Page 1.

\*\*\*\*\*

If you have any questions or need assistance please call us at: 800/535-8131

Or email us at [info@wolfmanluggage.com](mailto:info@wolfmanluggage.com)

Happy Riding.