



Wolfman Mounting guidelines for the Small, and Medium, Rolie Bag to Saddle Bag mount. You can now use your Rolie bags as Saddle bags. The kit does not need a rack.

Complete Rolie Saddle Bag Kit



You will need:

Saddle Bag Mount:

Small Rolie

Medium Rolie



Small and Medium Rolie Bag of your choice:

You can configure your set up like so (with capacities):

2 Small Rolie Bags= 9 liters or 550 cu.in.

3 Small Rolie Bags= 13.5 liters or 825 cu.in

2 Medium Rolie Bags=17 liters or 1036 cu.in.

3 Medium Rolie Bags=25.5 liters or 1554 cu.in.

2 Small Rolie Bags and one Medium=17.5 liters or 1068 cu.in.

2 Medium Rolie Bags and one Small=21.5 liters or 1311 cu.in.

****Please read and understand these instructions before touching your bike, rack or wrench.****

1. To Start you will need to "Patch Thread" each bag.

"Patch Thread" Setting up The Small and Medium Rolie bag.

Tools Needed:

Long Screwdriver, Chop Stick, or long tool.

Your Small or Medium Rolie bag comes with two Seat Straps.

These will be **"Patch Threaded"** Fig.a




Fig.a

1. Remove the Flappy strap keepers as they will not be used at all.
2. Insert raw end of the Seat Strap Webbing into the slot on the patch welded to the bag, on the underside of the buckles.

Fig.b Small Rolie



Fig.c Medium Rolie

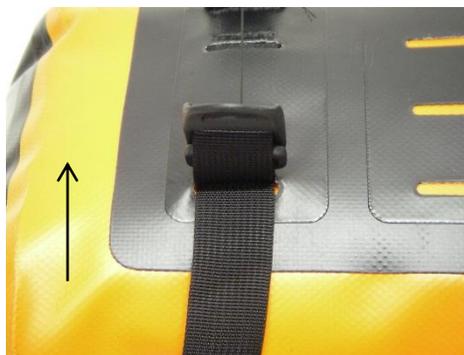

4. The Medium Fig. c
5. Center webbing, the loop will stick out about 1/2" on each side.
6. Your bag is now **"Patch Threaded"**. Fig.a

Installing the Rolie Saddle Bag Mount.

1. Place Saddle Bag Mount across the seat and rear fender of your bike. Center the top patch on the bike. Fig.1

****Make sure the Saddle Bag Mount does not over hang the Side panel, Especially on Exhaust Side****

Fig.1



2. Place the Tension-O-Matic strap on the rear fender. Fig.2

Fig.2



3. Spread the Gutter Hooks of the Tension-O-Matic mounting across the rear fender so the Gutter Hooks catch the bottom lip on each side of the rear fender. (You may have to grind the lip to make the Gutter Hooks fit tight. Fig.3

Fig.3



4. Pull the Tension-O-Matic strap away from the rear fender to tension straps.Fig.4

Fig.4



5. Thread Tension-O-Matic straps through rear buckles. Fig.5

Fig.5



6. The Front mounting straps on the front of each side thread around the sub frame side tubes, below the side panels. Thread the webbing behind the sub frame from the bottom and out on the top. On the Exhaust side **BE Very Careful** (Yes, the webbing can be close to the exhaust header, the pipe can be very Hot.) Also we have designed the front straps so they can be replaced if they get melted or if you cut them too short. Left Side Fig. 6&7 Right Side Fig. 8&9

Left Side

Fig.6



Fig.7



Right Side

Fig. 8



Fig.9




7. Tighten all straps Snug.

Now to Attach the Rolie Bags.

8. There are two rectangle buckles on the top front of the Saddle Bag Mount. You will use the **BOTTOM** Rectangle Buckle to make saddle bags. Fig. 10

Fig. 10

Top Rectangle Buckle (used to mount the Top/Center Rolie Bag)

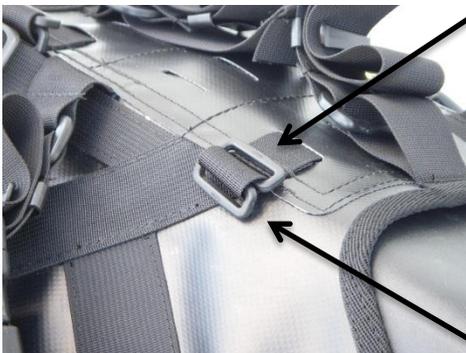

Bottom Rectangle Buckle **USE** This one for Saddle Bag

9. Place bag on the side of the mount, use you Hip to hold it in place while you thread the top webbing through the Rectangle Buckle and back to the buckle on the bag. Fig.11

Fig.11



9. Thread the remainder of the webbing through the buckles on the mount and back to the buckles on the bag. Fig.12

Fig.12



10. Attach the Wide strap across the outside of the Rolie Bag. Thread through the Handle Loop. Secure the excess web to the Flappy Strap Keepers. Fig.13

Fig.13



11. Repeat Steps 8 through 10 for the other side.

12. Attaching the Center Rolie Bag.

13. Thread the Webbing through the rectangle buckles on the Top. Fig.14 & Fig.15

Fig.14 Front



Fig.15 Rear



14. Attach the Wide strap across the Top of the Center Rolie Bag. Thread through the Handle Loop. Secure the excess web to the Flappy Strap Keepers. Fig.16

Fig. 16



16. Tighten All Webbing Securely.

17. All the Excess webbing can get tucked under the bag itself. Fig.17

Fig.17



18. The Correctly Mounted Kit should look like the Complete Rolie Saddle Bag Kit on Page 1.

HINT * For Best Results use the Ratchet Method of Tightening webbing. *******

Most of us just grab and pull webbing to tighten it. Well there is an easier way.

1. Pull Up on the loose end of webbing lifting the buckle while pushing on the webbing before the buckle.

Fig.1

Fig.1



Fig.2



2. Bring the loose end down tightening as you go. Fig.2

3. Do this until the bag is very snug.

5. When you are done your bag should look like Fig. 1 on Page 1.

If you have any questions or need assistance please call us at: 800/535-8131

Or email us at info@wolfmanluggage.com Happy Riding.