



Wolfman Mounting guidelines for the Small, and Medium, and Large Rolie Bag as Tank Panniers

Rolie Bag Tank Panniers.Fig.1

Fig.1



You will need:

2-Tank Mounts



2-Small, Medium, or Large Rolie Bags



Notes:

***If you are using the Large Rolie Bags you will need the Saddle Bag Mounting Kit #H608**

*The Choice of the Rolie bag depends on the size of your Tank

*Also you must use the same size Rolie Bags on Both Sides

******Please read and understand these instructions before touching your bike, rack or wrench.******

*******Make sure your Gas Tank and Rolie Bag Tank Mounts are free of Dirt. *******

1. To Start you will need to "Patch Thread" your Rolie Bags.

"Patch Thread" Setting up The Small, Medium, or Large Rolie bag.

Tools Needed:

Long Screwdriver, Chop Stick, or long tool.

Your Small,Medium Rolie bag comes with two Seat Straps.

These will be "**Patch Threaded**" Fig.a




Fig.a

1. Remove the Flappy strap keepers as they will not be used at all.
2. Insert raw end of the Seat Strap Webbing into the slot on the patch welded to the bag, on the underside of the buckles.

Fig.b Small Rolie



Fig.c Medium Rolie

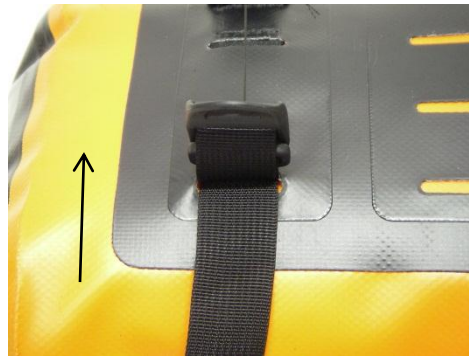

4. The Medium Fig. c

5. Center webbing, the loop will stick out about 1/2" on each side.


6. Your bag is now **"Patch Threaded"**.

1. Remove All straps from the Sloped Tank Pads.
2. Set up the Two Sloped Tank Mounts as Shown. Fig.2

Fig.2

Tank Straps

Frame Straps

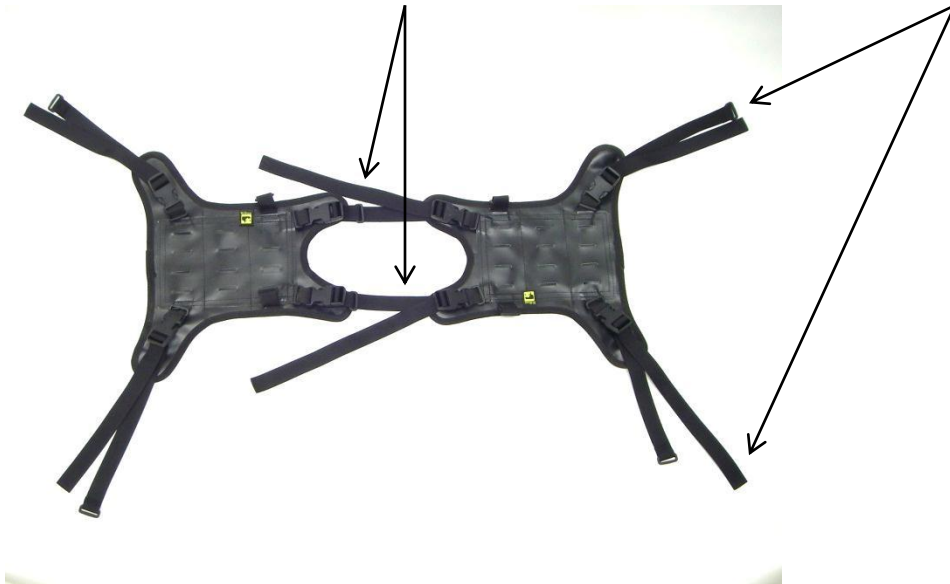

3. Place the Mount on your tank, so it straddles the Gas Cap. Fig.3 & Fig.4

Fig.3



Fig.4



You may have to trim the Tank Straps.

4. Attach the Frame Straps to the Frame in Front and Rear. Thread the RAW/CUT end of the straps around a frame member and through the Rectangle Buckle, pull tight. Fig.5 & Fig.6

Fig.5



Fig.6



****Guideline****Mount The Frame Straps around a frame member at the front of the bike, ie. The Frame, a motor mount, crash guard etc. The Rear Strap can go around the frame down tube, or a crash guard. ****

5. Thread through the male buckles and clip to the mount. Fig.6

6. Repeat for the rest of the Frame Straps.

7. Position the Mounts where you want them, You can adjust the Up/Down and the Front/Back.

Attaching the Rolie Bags to the Mounts.

8.Run the Webbing from the Rolie Bag to the Rectangle on the patch, thread from inside to out side. Fig.7

Top Webbing



Fig.8 Bottom Webbing



****Make sure the bags do not interfere with the steering From Full Left To Right. Adjust the Mounts as necessary.****

Large Rolie Bags. Due to the Size of the Large Rolie Bags you will need to use Straps between the bags to help support the bags.

9. Using the Saddle Bag Seat Straps. Fig.9

Fig.9



Fig.10 (Side view Shown)



10. Attach the Seat Straps to the bags. Take the 1 1/2" Webbing and thread through the 1 1/2" SlipLok.

Fig.10

11. Repeat for the remainder SlipLok Buckles on Both Bags. 4 in total.

12. Place the Large Rolie Bags on the Mounts Adjust the Center straps as needed.

13. Attach the Bags the same way as Step 8. Fig.7 & 8

Tighten All straps snug.

****HINT** For Best Results use the Ratchet Method of Tightening webbing. *******

Most of us just grab and pull webbing to tighten it. Well there is an easier way.

1. Pull Up on the loose end of webbing lifting the buckle while pushing on the webbing before the buckle.

Fig.1



Fig.2



2. Bring the loose end down tightening as you go. Fig.2

3. Do this until the bag is very snug.

5. When you are done your bag should look like Fig. 1 on Page 1.

If you have any questions or need assistance please call us at: 800/535-8131

Or email us at info@wolfmanluggage.com Happy Riding