



Wolfman De-Luxe mounting guidelines for the Small and Medium Rolie Bag to the rear of a seat.

The De-Luxe Kit is used when more seat space is needed.

Rolie Bag mounted correctly to rear of seat and fender using the De-Luxe Kit. Fig. 1



**The De-Luxe kit contains:**

2-Seat Adjustable Straps

1-Tension-O-Matic rear mounting strap. Fig. 2



**\*\*\*Please read and understand these instructions before touching your bike, rack or wrench.\*\*\***

\*\*\*\*\*

**"Patch Thread" Setting up The Small or Medium Rolie bag.**

Tools Needed:

Long Screwdriver, Chop Stick, or long tool.

Your Small or Medium Rolie bag comes with two Seat Straps.

These will be **"Patch Threaded"** Fig.1




Fig.1

1. Remove the Flappy strap keepers as they will not be used at all.
2. Insert raw end of the Seat Strap Webbing into the slot on the patch welded to the bag, on the underside of the buckles.

Fig.2 Small Rolie



Fig.3 Medium Rolie

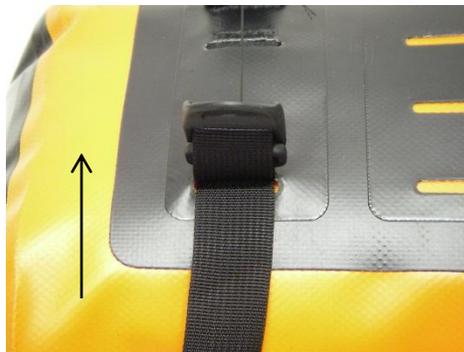

4. The Medium Fig. 3
5. Center webbing, the loop will stick out about 1/2" on each side.
6. Your bag is now **"Patch Threaded"**.

\*\*\*\*\*

## **Seat Mounting.**

1. Remove Seat or passenger section of seat. Make sure the underside or Pan is clean, free of dirt and grease for best results. Consult your owners/shop manual for this procedure.
2. Turn seat over. For an Enduro bike use one Adjustable Seat Strap, (for a Street bike or bike with separate passenger/pillion seat use Both Seat Straps.) Set the straps on the underside of the seat pan in front of the Seat Tabs. Fig. 3

Fig. 3



Fig. 4



3. Adjust width of strap so the Rectangle Buckles are just over the lip of the Seat. Fig.4
4. Replace seat.
5. Place the Tension-O-Matic strap on the rear fender. Fig. 5

Fig.5



6. Spread the Gutter Hooks of the Tension-O-Matic mounting across the rear fender so the Gutter Hooks catch the bottom lip on each side of the rear fender. (You may have to grind the lip to make the Gutter Hooks fit tight.) Fig.6

Fig.6



7. Pull each Tension-O-Matic strap away from the rear fender to tension and secure straps. Fig.7

Fig.7



8. Place Rolie Bag roughly Half on the Seat Half on the rear fender with the loop handle towards the rear of the bike. Fig.8

Fig.8



9. Thread webbing from bag through the Rectangle Buckles under the seat and back to the bag. Thread the Tension-O-Matic straps through the buckles on the bag. Fig.9

Fig.9



Tighten All straps snug.

**\*\*HINT\*\***\*\*\*\*\*

**For Best Results use the Ratchet Method of Tightening webbing.**

Most of us just grab and pull webbing to tighten it. Well there is an easier way.

1. Pull Up on the loose end of webbing lifting the buckle while pushing on the webbing before the buckle.

Fig.1

Fig.1



Fig.2



2. Bring the loose end down tightening as you go. Fig.2

3. Do this until the bag is very snug.

5. When you are done your bag should look like Fig. 1 on Page 1.

\*\*\*\*\*

If you have any questions or need assistance please call us at: 800/535-8131

Or email us at [info@wolfmanluggage.com](mailto:info@wolfmanluggage.com)

Happy Riding.