



Assembly Guide

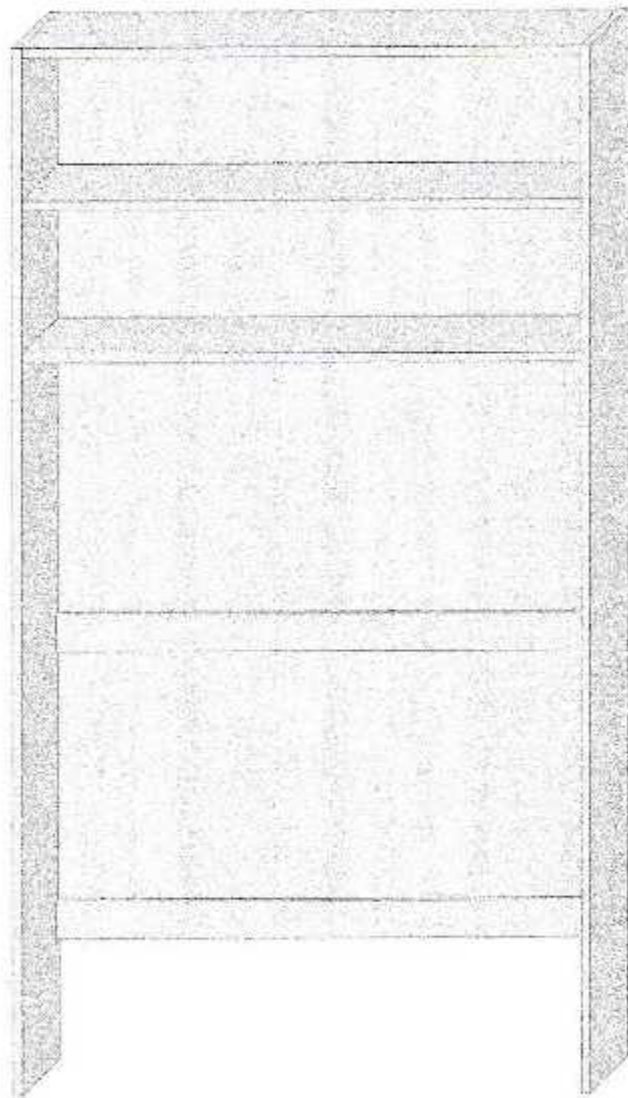

Step 1

Insert 10 cam screws
in pre-drilled holes
in End Panel.

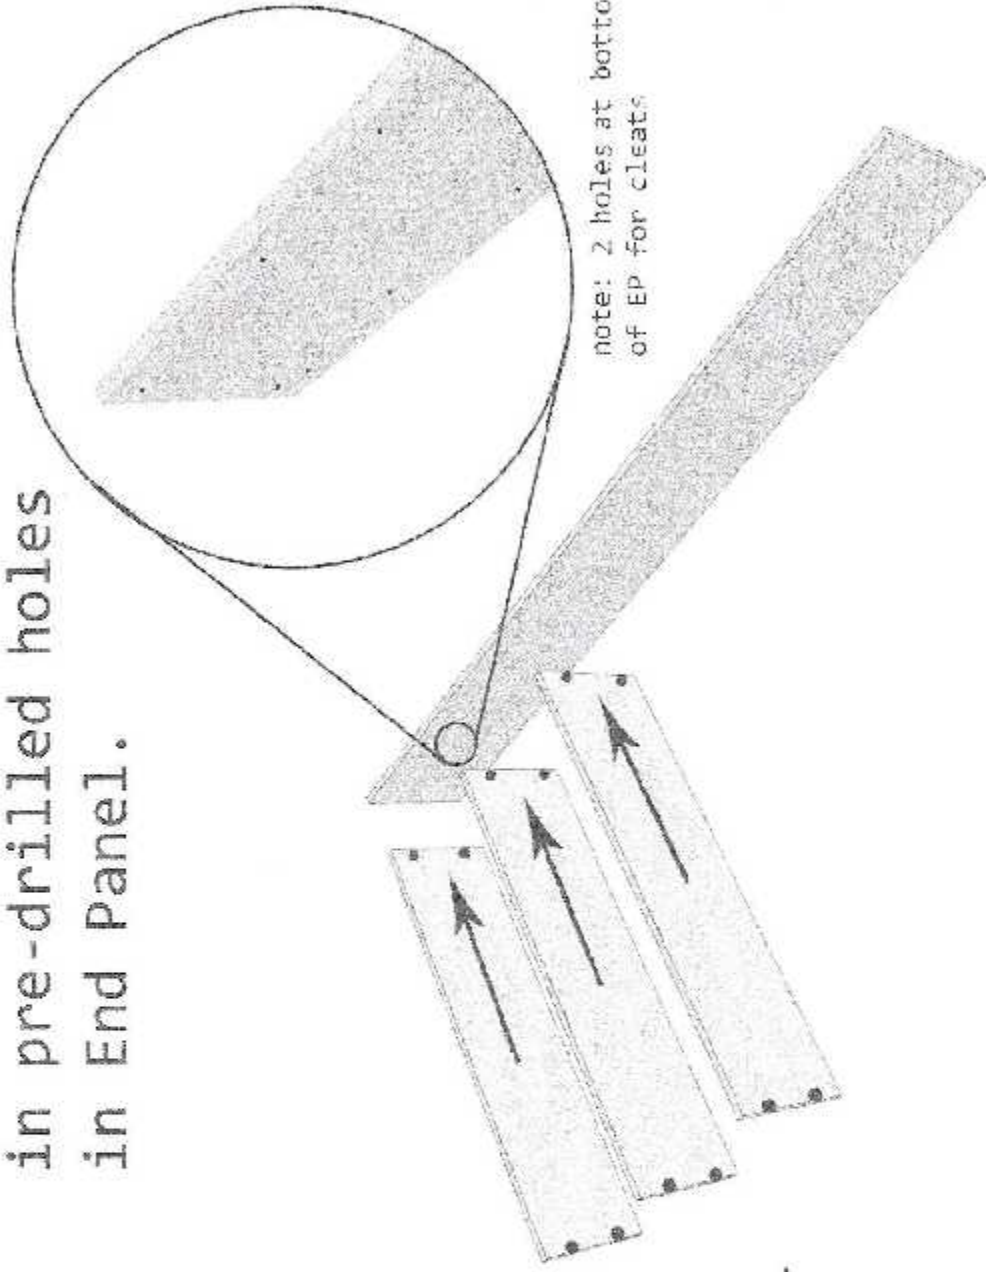


Step 2

Align cams
with cam
screws and
attach to
End Panel.
Tighten cam
using screw-
driver


Step 3

Insert 10 cam screws
in second End Panel
and Attach to T&B's

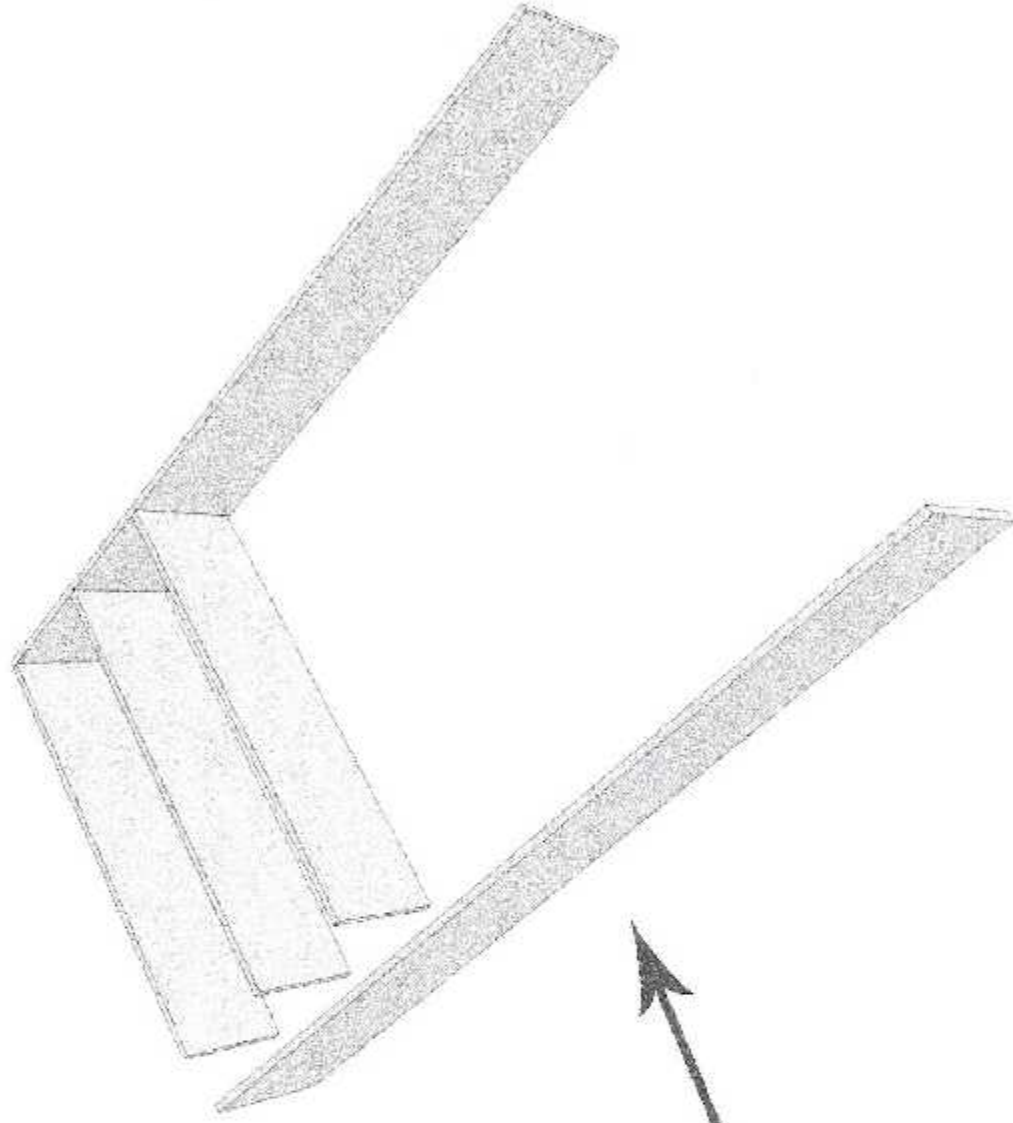

Step 5

Attach 3 backs to unit using screws in pre-drilled holes.

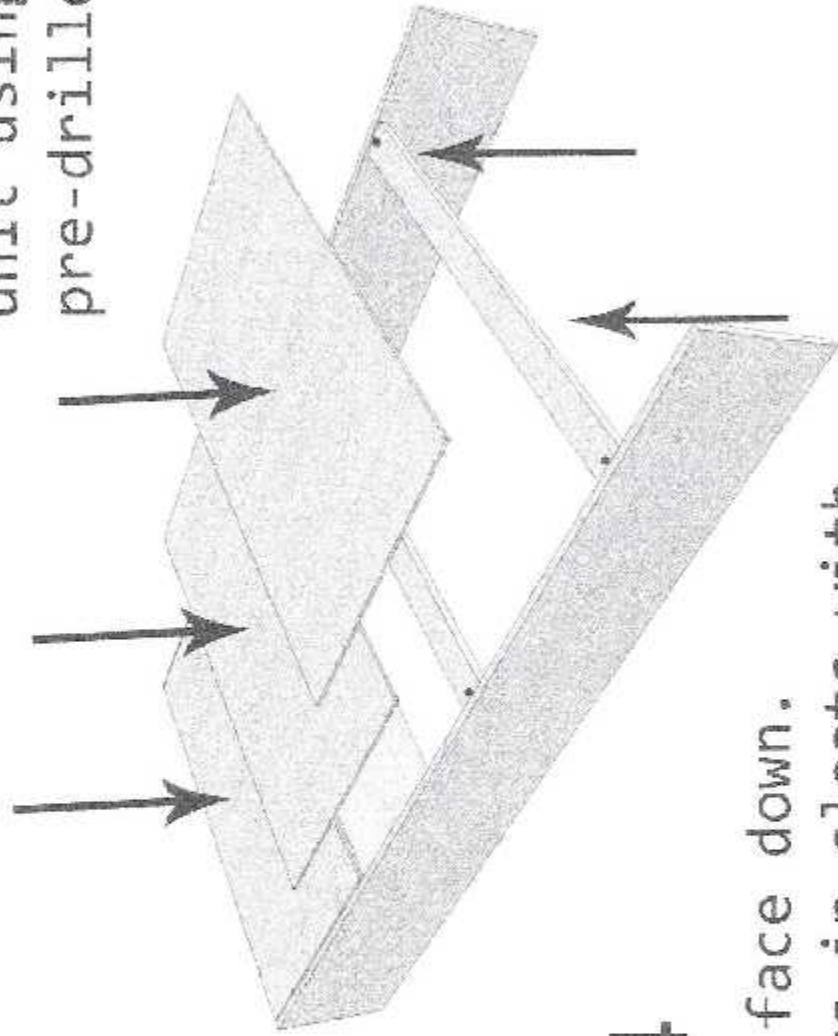

Step 4

Flip unit face down.
Align cams in cleats with lower cam bolts. Tighten cams with screw driver.

Parts Included

- 1 End Panel (L)
- 1 End Panel (R)
- 3 T&B
- 2 Cleats
- 3 Pre-Drilled Back

