


Assembly Instructions

16 Inch Wide Shelving



Step 1

Fully insert 6 Inch Legs into sockets on the bottom of the Panel

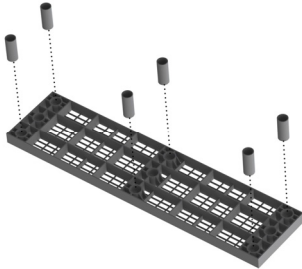


Step 2

Insert Internal Leg Connectors into sockets on top of the Panel




Step 3

Fully insert 24 Inch Legs into sockets on the bottom of additional Panel

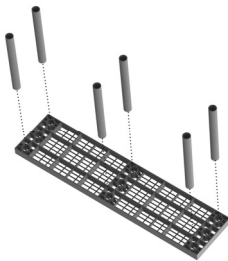


Step 4

Place second level over first level, inserting Internal Leg Connectors into legs

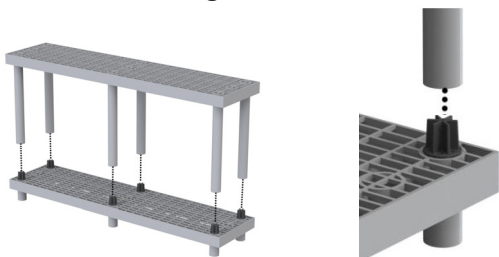

Exploded View

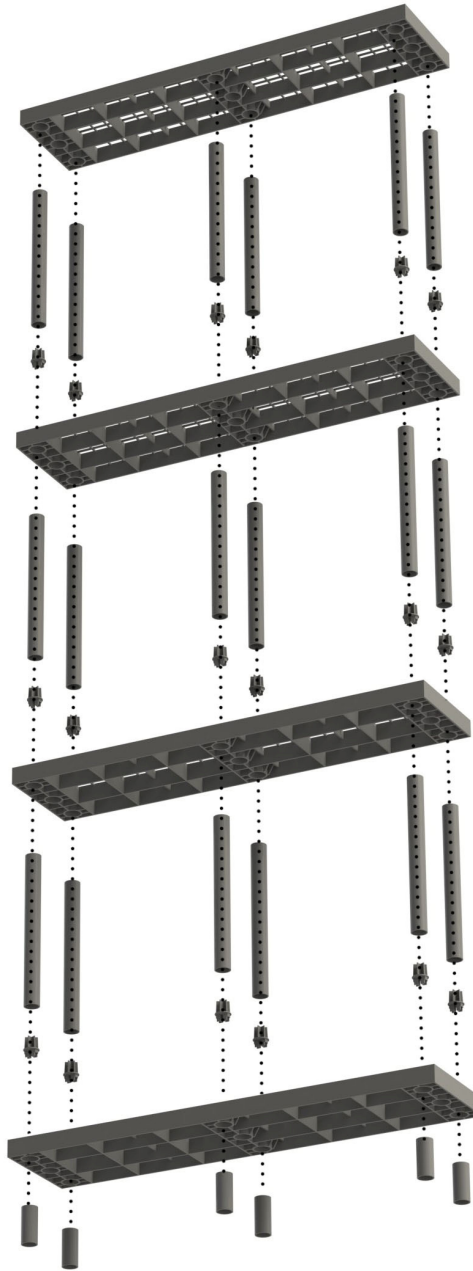

Items List




Internal Leg Connector



6 Inch Leg



24 Inch Leg



Panel

Step 5

Repeat

Repeat Steps 2 through 4 for each additional shelf level
(Available for TOP613 or TOP614 only)

Complete