

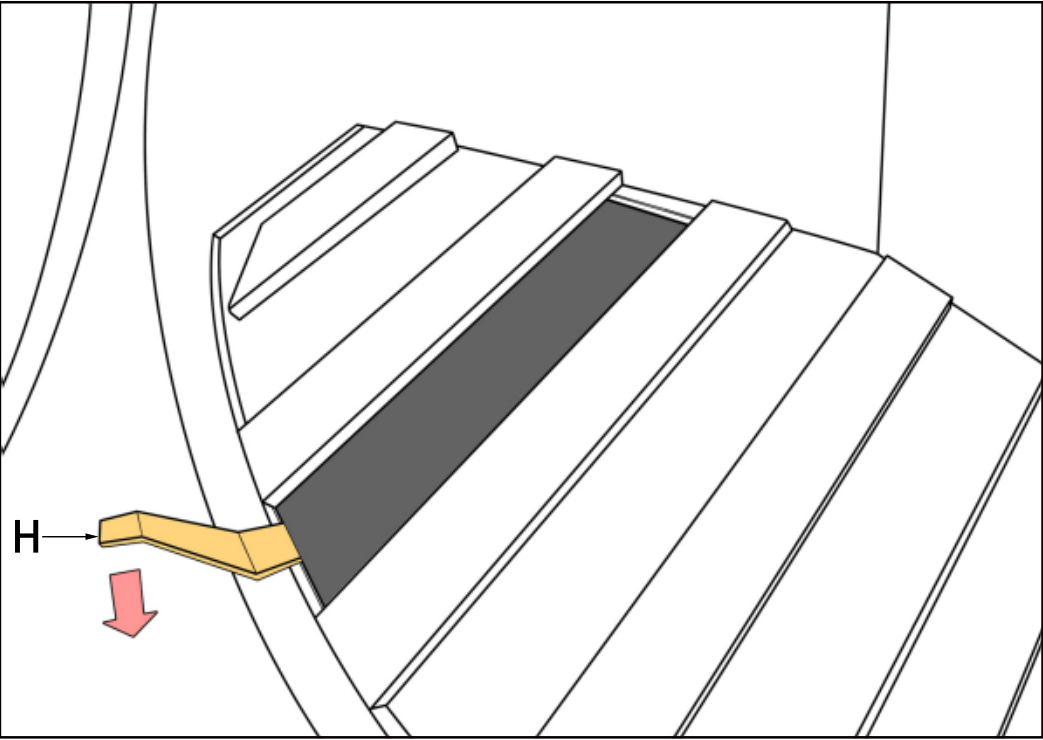


Front Trunk L-Track + Cargo Net


Installation Instructions

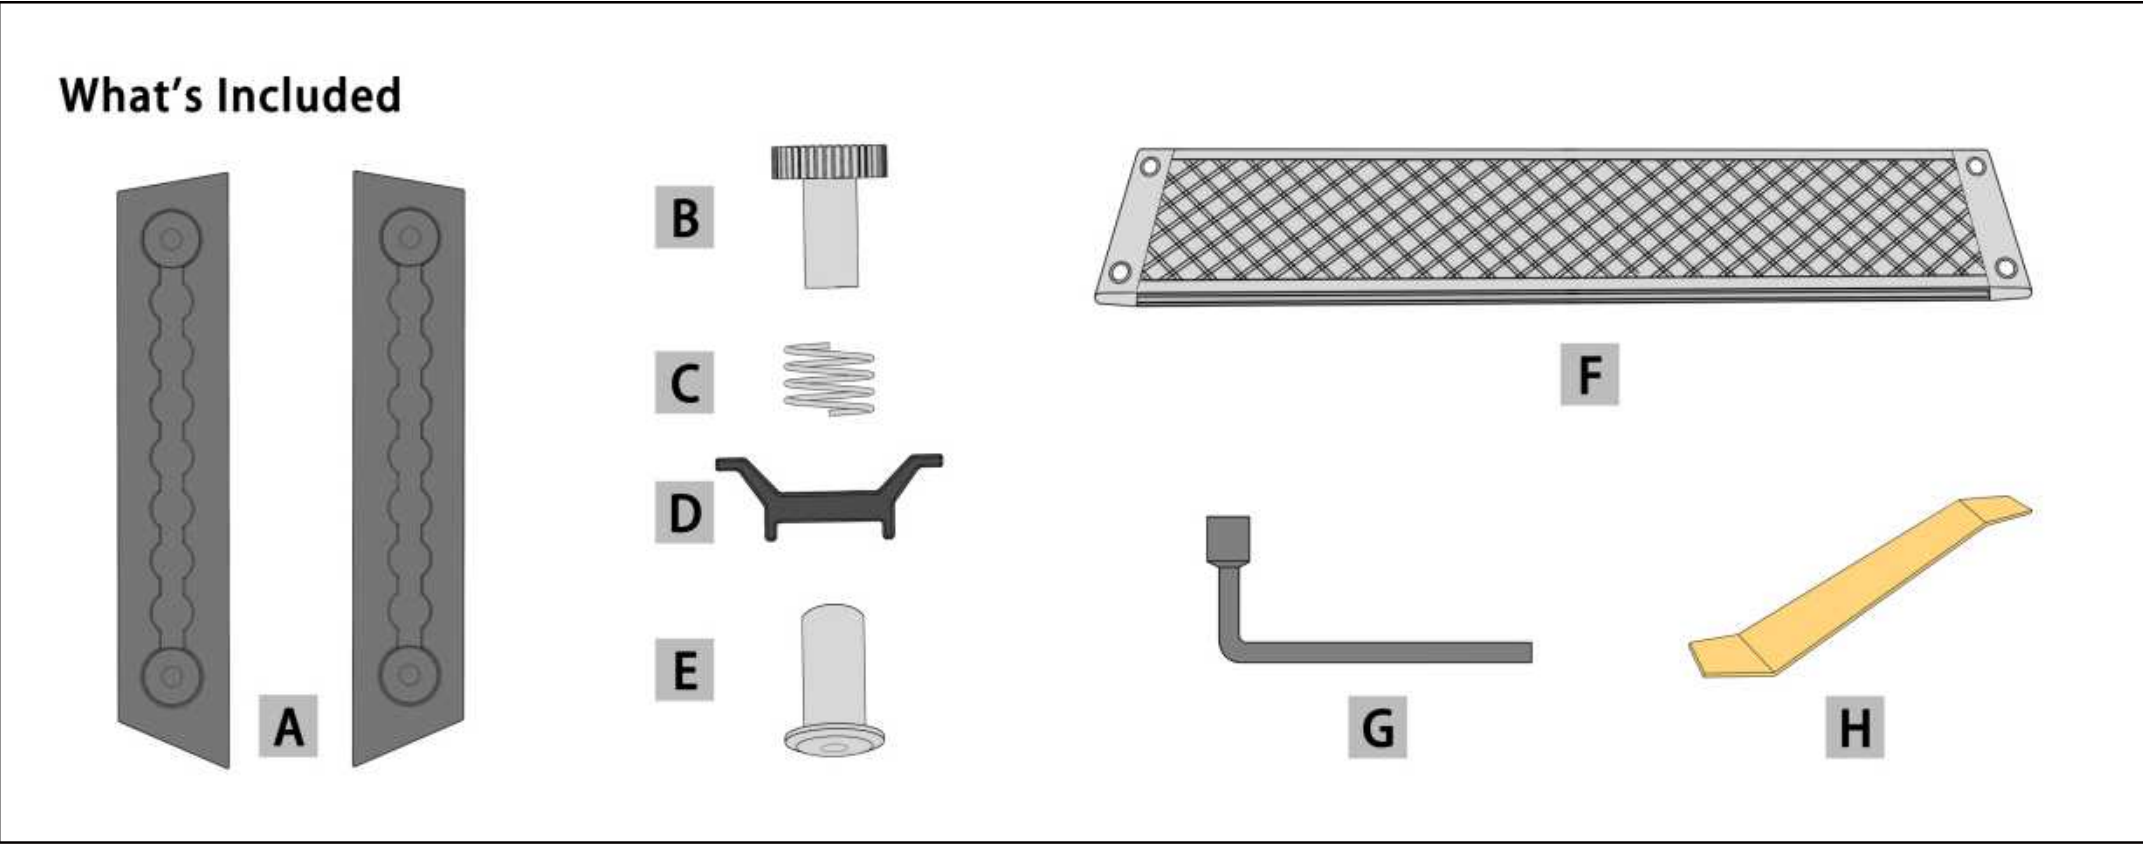


1. Use the plastic pry bar to remove the plastic bolt covers (2x).

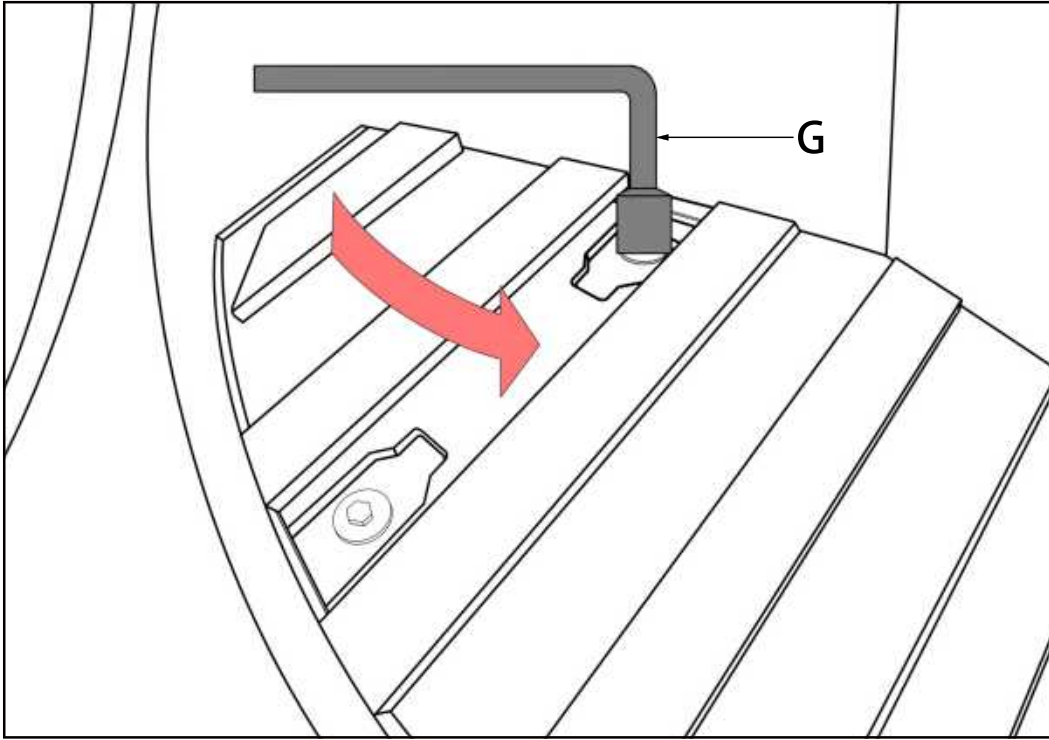


2. Use the socket wrench to remove the exposed bolts (x4).

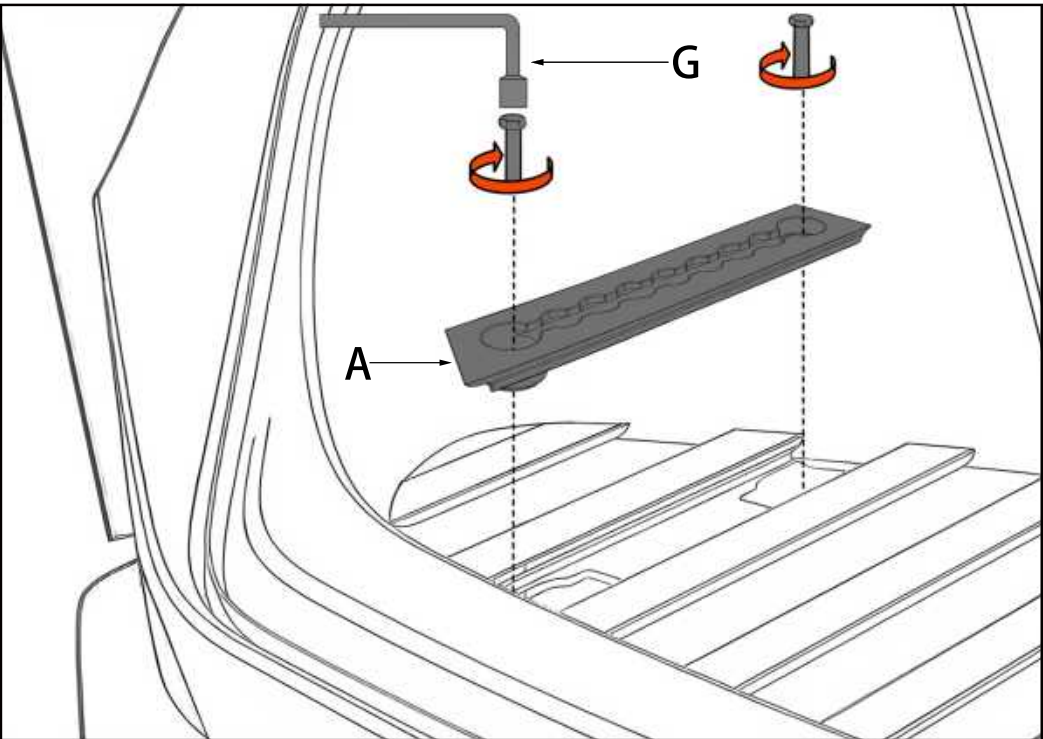


3. Use the socket wrench and the original vehicle screws to install the track.

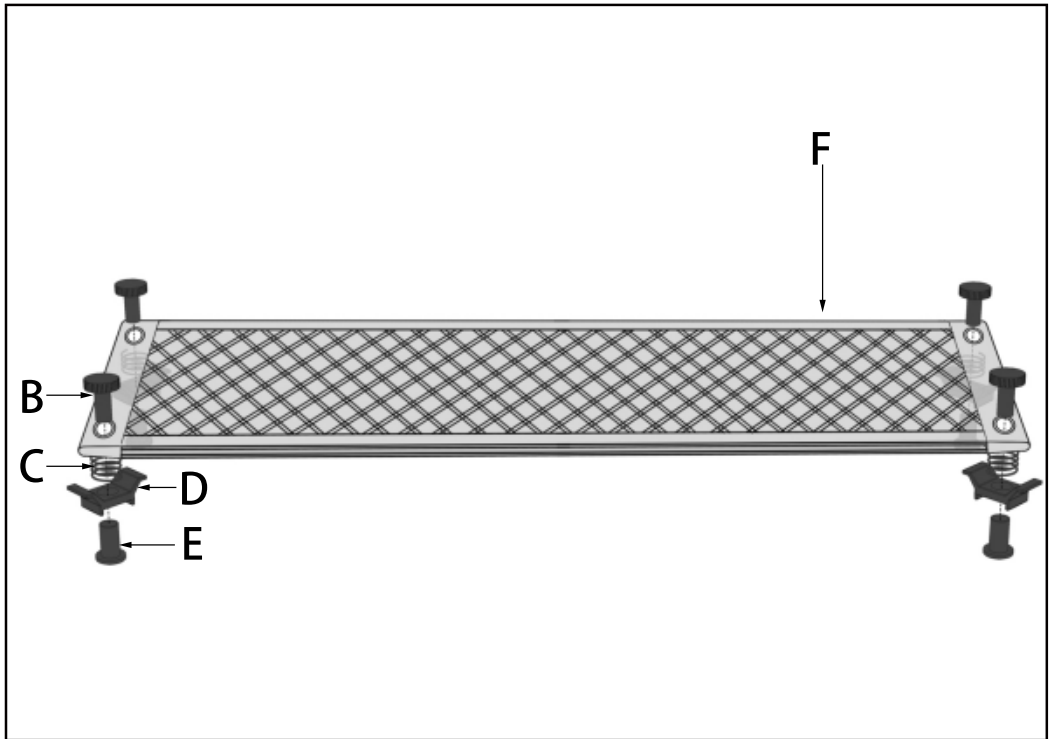

4. Assemble the mesh bag and accessories: Assemble the mesh bag and accessories, making sure not to tighten the screws too much.

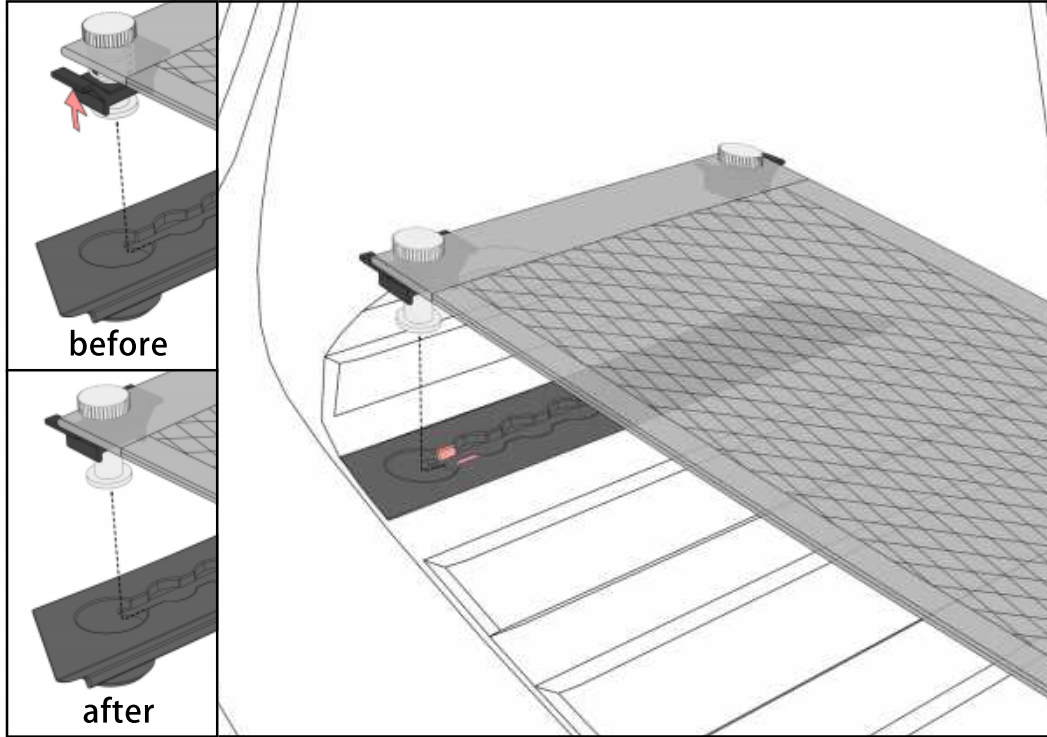

5. Install the mesh bag: Press the buckle to snap the mesh bag into the designated position on the track, then tighten the screws to ensure a secure fit.

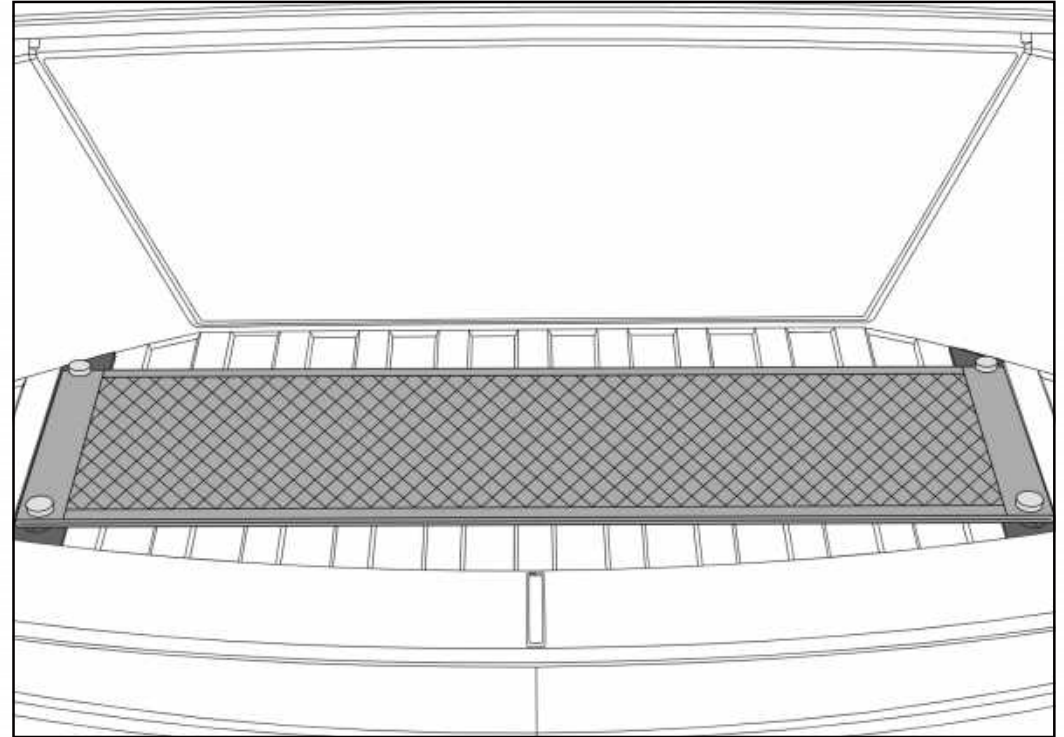

6. Complete all installation steps.