

DOOR CHECK




FOR WOODEN DOORS

Fitting instructions

Note: The door check cannot be fitted where the distance from the edge of the frame to a projecting wall is less than 44mm (1 3/4").

Also only suitable where frame is a flush fit with door.

- Place the template provided as shown (Fig 1) in the required position and mark screw centres (careful positioning is essential). For softwood drill pilot holes 2mm (3/32") diameter x 35mm (1 3/8") deep. For hardwood drill pilot holes 3mm (1/8") diameter x 35mm (1 3/8") deep.
- Fit the plastic button into recess and hole on the rear of the bracket and screw bracket to door (Fig 2) with the countersunk screws provided. Note: Correct position with two even lugs towards the frame.
- Screw slider assembly to frame with the round head screws provided. Insert slider into bracket; unit is now ready for door check use. To lock, push slider towards frame when door is shut. (Fig 3)

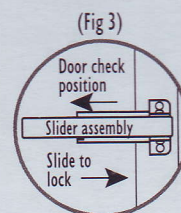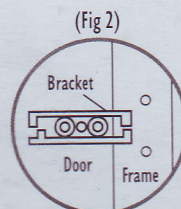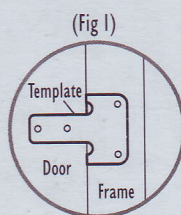

Tools required

- Posidrive screwdriver
- Drill
- 2mm (3/32") or 3mm (1/8") drill bit
- Pencil

DSC2S

Issue 1



Ingersoll Security
Wood Street, Willenhall,
West Midlands WV13 1LA, England
Tel: +44 (0) 1902 364 627
Fax: +44 (0) 1902 364 626

Minimum 65% Recycled Board Fibres



Ingersoll Security is an ASSA ABLOY Group Brand

ASSA ABLOY