


P-Series Heat Shield - Installation Instructions

Tools Needed

3/8" Socket Wrench or Open End Wrench

1. Using a 3/8" wrench, loosen the bolt installed at the factory between the body hopper as shown below.
2. Slide the key-hole slot in the heat shield over the bolt head.
3. Adjust the heat shield to be level and evenly spaced on the side of the unit and tighten the bolt.

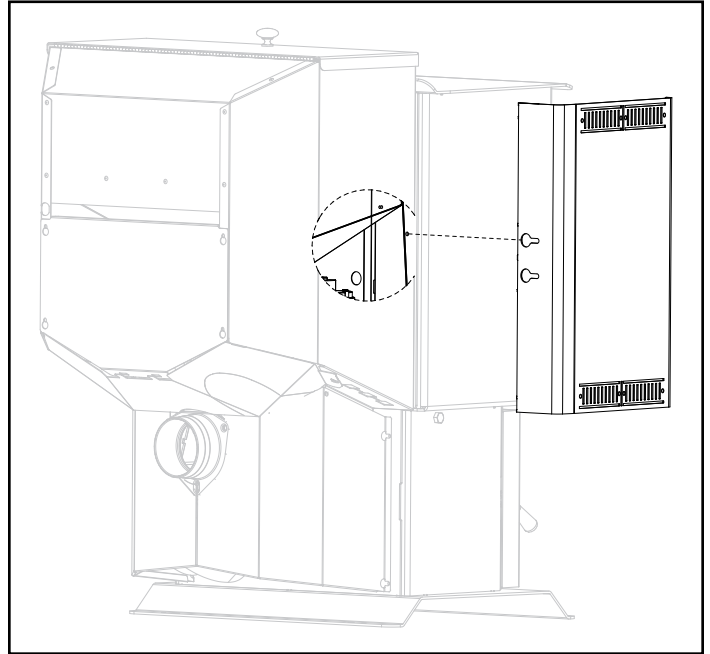

Side heat shields are available to reduce the clearance to combustible materials.