

- 1 yd. Eyelet - dress
- 3 yds. 2" Flat Eyelet Lace - dress, panties, collar
- 1 1/4 yds. 5/8" Flat Eyelet Lace - skirt lining
- 3/4 yd. White Batiste - panties, collar, skirt lining
- 1/3 yd. 1/4" Braided Elastic - panties
- 2/3 yd. 1/8" Braided Elastic - sleeves, panties
- 3 Small Snaps - dress
- 2 Small Buttons - collar
- 1 yd. 2" wide Satin Ribbon - sash

READ ALL INSTRUCTIONS BEFORE CUTTING FABRIC AND NOTIONS.

- NOTE: 1. All seams are 1/4" unless otherwise indicated.
2. Finish all seams with a serge or zigzag edge.
3. WRST, indicates With Right Sides Together.

DRESS CONSTRUCTION:

1. WRST, sew the shoulder seams. Repeat same procedure for the bodice lining.
2. WRST, sew bodice backs and neck edges. Trim seam to 1/8", turn and press.
3. WRST, serge 16" of the 2" flat lace to the lower edge of sleeve. Press seam up to the casing line. Machine stitch 1/4" from finished edge forming a casing. Insert 4" of 1/8" elastic. Anchor ends.
4. Sew two rows of gathering stitches across the sleeve cap. WRST, sew the sleeves to the bodice, matching center of sleeve to the shoulder seams.
5. WRST, sew side and underarm seams together, making sure to catch elastic in the seam.
6. WRST, sew center back seam leaving 3" open on upper edge. Repeat same procedure for the lining.
7. Treat the skirt and lining as one piece. Sew two rows of gathering threads across the top of the skirt. Pull up gathering threads to fit the bodice.
8. WRST, sew the bodice to the skirt.
9. Turn up hem on dress. WRST, sew the 2" flat eyelet lace to the hem edge of skirt. Fold up skirt hem, leaving the eyelet lace hanging free. Sew the hem on the skirt.
10. Serge the 5/8" flat eyelet lace to the hem edge of skirt lining.
11. Sew three snaps to the back edge of bodice.

COLLAR CONSTRUCTION:

12. Gather 60" of the 2" flat lace to fit the collar. I pinned the lace around the entire collar, then remove the lace keeping a pin at either end to anchor the gathering threads.
13. WRST, sew the entredeux to the gathered lace. First stitching in the ditch of the entredeux, then with a small zigzag.
14. WRST, sew the entredeux to the collar, clipping the entredeux at the corners. I stop sewing with the needle in the down position, clip and pivot at each corner point.
15. With a small zigzag, stitch close to the previous stitching. You may use Fray Check® on the seam. Trim the seam close to the zigzag.
16. WRST, sew the collar to the collar lining, starting at the back, around the neck edge and finishing up on the opposite back. Remember that the neck edge is sewn in a 1/8" seam.
17. Trim seam to 1/8", clip curves. Press.
18. Turn under the collar lining 1/4" and whip stitch to the collar.
19. Sew two small buttons on the left back. I used thread loops for my closure, you can also use snaps behind the buttons.

PANTIES CONSTRUCTION: (Waist Elastic 1 1/2") (Leg Elastic 6")

14. WRST, sew the center front and the center back seams.
14. Turn down the waist casing and sew, leaving an opening for inserting elastic. Insert the 1/4" elastic. Lap ends and stitch. Machine stitch the opening closed.
15. WRST, serge 13" of the 2" lace to each of the lower edges of the legs. Press seam up to the casing line. Machine stitch close to the edge forming a casing. Insert the leg elastic anchoring the ends.
16. WRST, sew the crotch/inseam making sure to catch in the elastic ends.

THE
DOLL
INC
ARTWORKS
RT. 9 BOX 119
HWY 274

SEVEN POINTS, TX 75143
TEL 903-432-9426
FAX 903-432-9502
ORDERS ONLY
800-886-3655

- 1 yd. Eyelet - dress
- 3 yds. 2" Flat Eyelet Lace - dress, panties, collar
- 1 1/4 yds. 5/8" Flat Eyelet Lace - skirt lining
- 3/4 yd. White Batiste - panties, collar, skirt lining
- 1/3 yd. 1/4" Braided Elastic - panties
- 2/3 yd. 1/8" Braided Elastic - sleeves, panties
- 3 Small Snaps - dress
- 2 Small Buttons - collar
- 1 yd. 2" wide Satin Ribbon - sash

READ ALL INSTRUCTIONS BEFORE CUTTING FABRIC AND NOTIONS.

- NOTE: 1. All seams are 1/4" unless otherwise indicated.
2. Finish all seams with a serge or zigzag edge.
3. WRST, indicates With Right Sides Together.

DRESS CONSTRUCTION:

1. WRST, sew the shoulder seams. Repeat same procedure for the bodice lining.
2. WRST, sew bodice backs and neck edges. Trim seam to 1/8", turn and press.
3. WRST, serge 16" of the 2" flat lace to the lower edge of sleeve. Press seam up to the casing line. Machine stitch 1/4" from finished edge forming a casing. Insert 4" of 1/8" elastic. Anchor ends.
4. Sew two rows of gathering stitches across the sleeve cap. WRST, sew the sleeves to the bodice, matching center of sleeve to the shoulder seams.
5. WRST, sew side and underarm seams together, making sure to catch elastic in the seam.
6. WRST, sew center back seam leaving 3" open on upper edge. Repeat same procedure for the lining.
7. Treat the skirt and lining as one piece. Sew two rows of gathering threads across the top of the skirt. Pull up gathering threads to fit the bodice.
8. WRST, sew the bodice to the skirt.
9. Turn up hem on dress. WRST, sew the 2" flat eyelet lace to the hem edge of skirt. Fold up skirt hem, leaving the eyelet lace hanging free. Sew the hem on the skirt.
10. Serge the 5/8" flat eyelet lace to the hem edge of skirt lining.
11. Sew three snaps to the back edge of bodice.

COLLAR CONSTRUCTION:

12. Gather 60" of the 2" flat lace to fit the collar. I pinned the lace around the entire collar, then remove the lace keeping a pin at either end to anchor the gathering threads.
13. WRST, sew the entredeux to the gathered lace. First stitching in the ditch of the entredeux, then with a small zigzag.
14. WRST, sew the entredeux to the collar, clipping the entredeux at the corners. I stop sewing with the needle in the down position, clip and pivot at each corner point.
15. With a small zigzag, stitch close to the previous stitching. You may use Fray Check® on the seam. Trim the seam close to the zigzag.
16. WRST, sew the collar to the collar lining, starting at the back, around the neck edge and finishing up on the opposite back. Remember that the neck edge is sewn in a 1/8" seam.
17. Trim seam to 1/8", clip curves. Press.
18. Turn under the collar lining 1/4" and whip stitch to the collar.
19. Sew two small buttons on the left back. I used thread loops for my closure, you can also use snaps behind the buttons.

PANTIES CONSTRUCTION: (Waist Elastic 1 1/2") (Leg Elastic 6")

14. WRST, sew the center front and the center back seams.
14. Turn down the waist casing and sew, leaving an opening for inserting elastic. Insert the 1/4" elastic. Lap ends and stitch. Machine stitch the opening closed.
15. WRST, serge 13" of the 2" lace to each of the lower edges of the legs. Press seam up to the casing line. Machine stitch close to the edge forming a casing. Insert the leg elastic anchoring the ends.
16. WRST, sew the crotch/inseam making sure to catch in the elastic ends.

THE
DOLL
INC
ARTWORKS
RT. 9 BOX 119
HWY 274


SEVEN POINTS, TX 75143
TEL 903-432-9426
FAX 903-432-9502
ORDERS ONLY
800-886-3655



DA 1231 ©1995
 28" CHANTAL
 COLLAR
 CUT 2 - BATISTE
 ON FOLD



DA 1231 ©1995
 28" CHANTAL
 BODICE BACK
 CUT 2 - EYELET
 CUT 2 - BATISTE

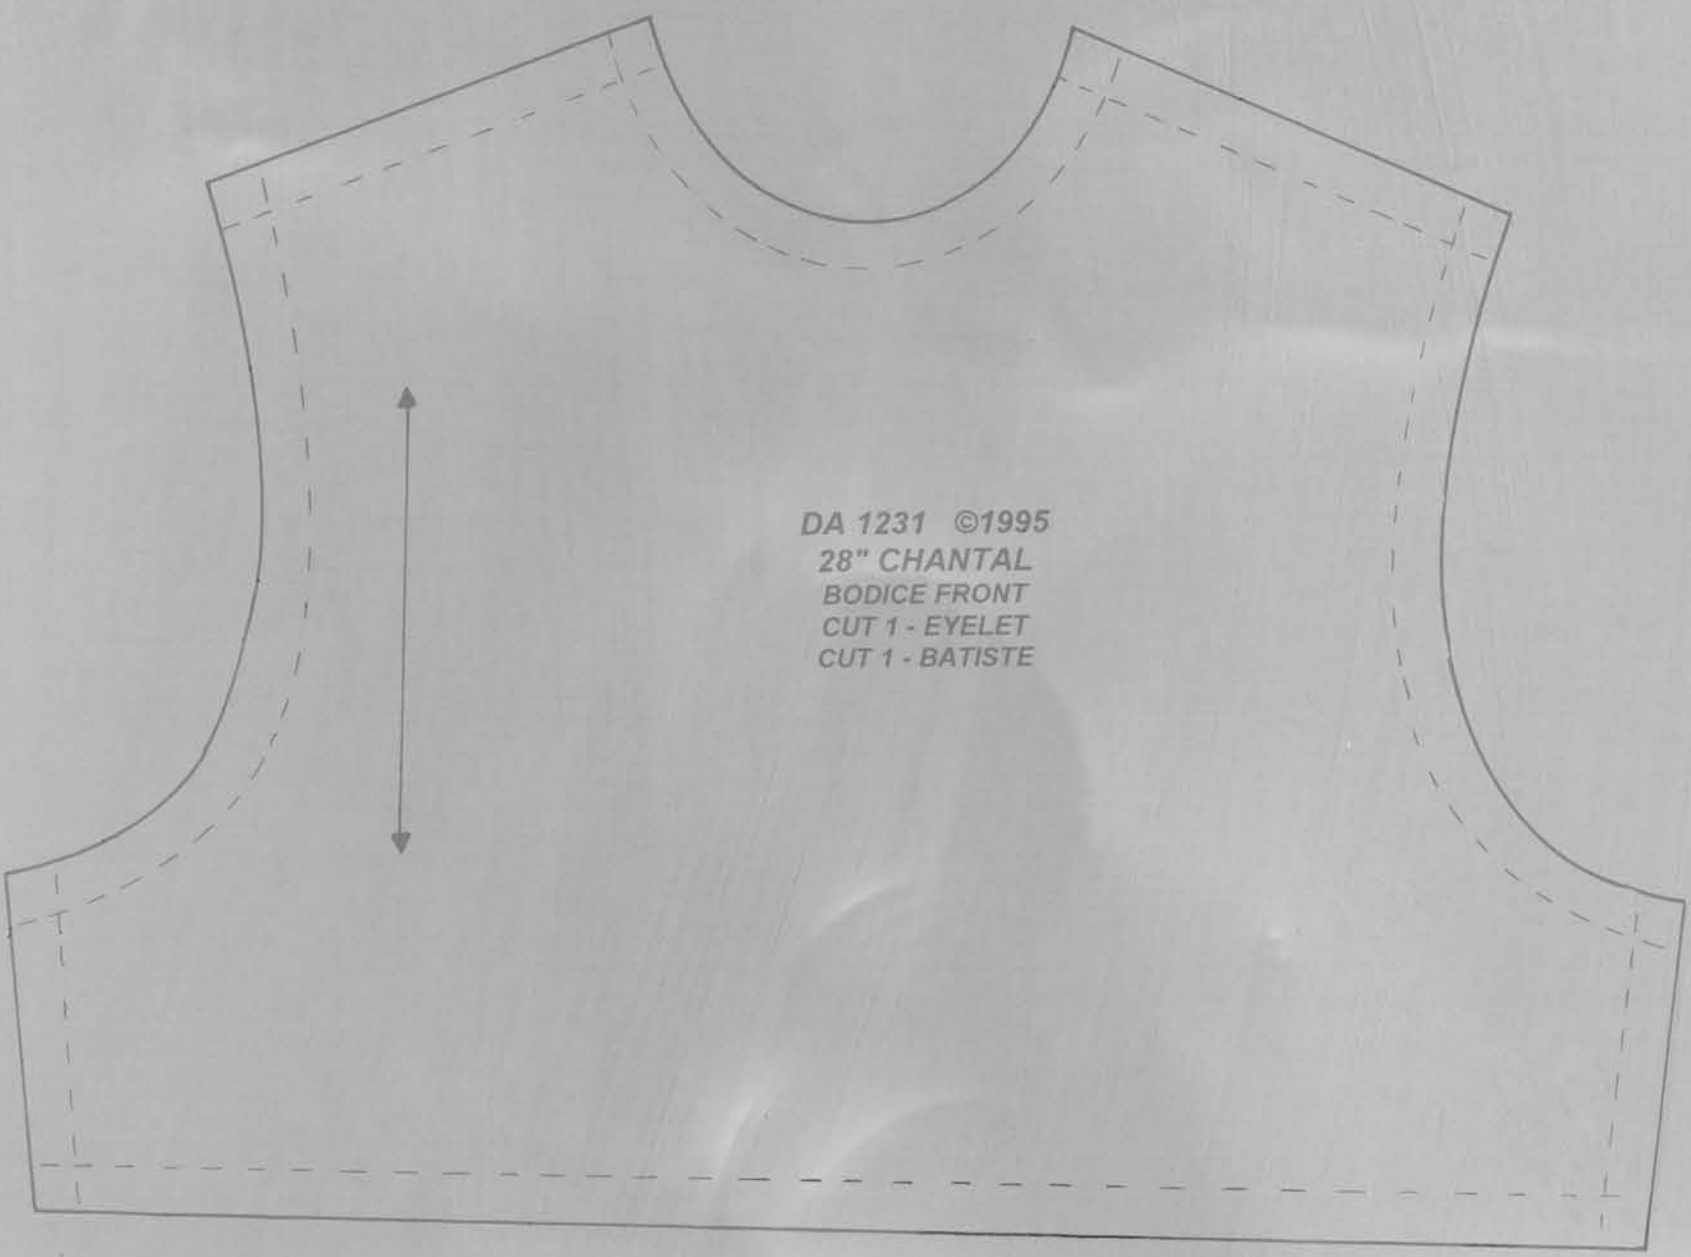

DA 1231 ©1995
 28" CHANTAL
 BODICE FRONT
 CUT 1 - EYELET
 CUT 1 - BATISTE

DA 1231 ©1995
28" CHANTAL
DRESS SKIRT LINING
CUT 2
13" LONG x 45" WIDE

LEAVE 3" OPEN


SEW LACE TO THIS EDGE

GATHER

DA 1231 ©1995
28" CHANTAL
DRESS SKIRT FRONT/BACK
CUT 2
13" LONG x 45" WIDE

LEAVE 3" OPEN

1 1/4" HEM ALLOWANCE
SEW LACE HERE

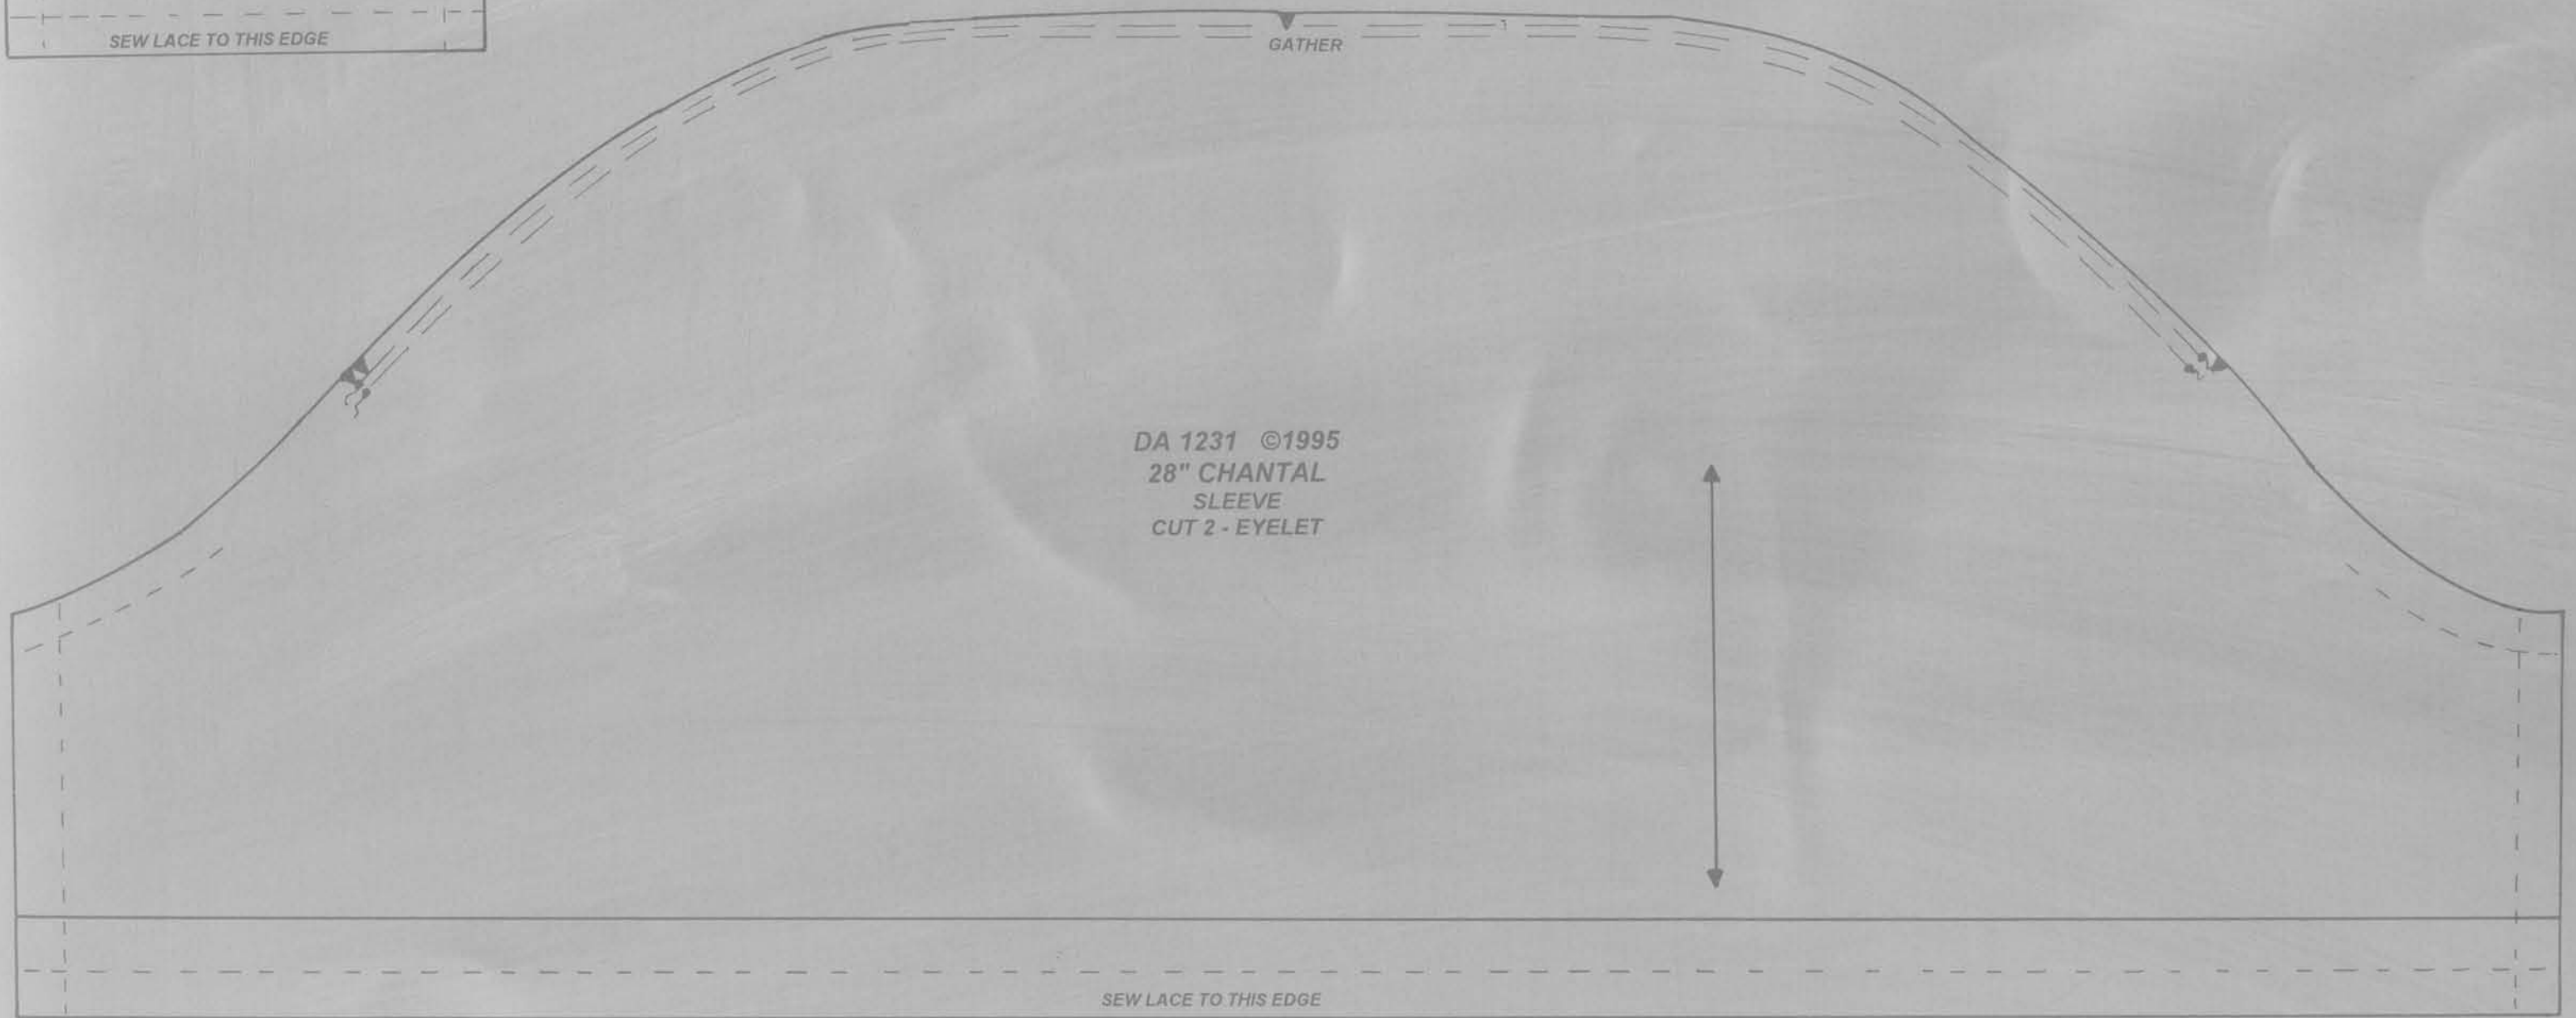

DA 1231 ©1995
28" CHANTAL
PANTIES FRONT and BACK
CUT 2

CENTER BACK

CENTER FRONT

CASING

SEW EYELET LACE HERE

