



DIMENSIONS

Panel Size:

2400mm or 3000mm (H) x 600mm (W) x 21mm (D)


Slats:

27mm (W) x 12mm (D)

PET Felt Backing:

9mm (D)

INSTALLATION WITH SCREWS

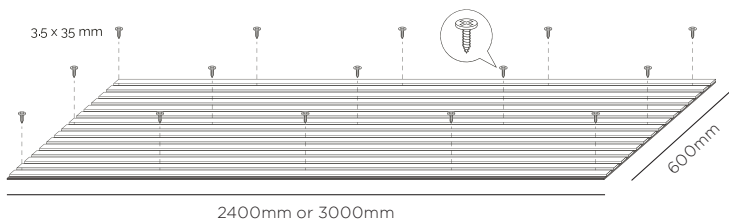

INSTALLATION WITH SCREWS

- Install using 15 drywall screws in a colour that coordinates with your chosen felt backing.
- Top Tip: Use the appropriate fixings for your walls (e.g. wall plugs). Suggested screw size 3.5mm x 35mm.
- Each panel requires 15 screws aligned in rows of 3. For 2400mm height panels, we recommend spacing the rows 575mm apart. For 3000mm height panels, we recommend spacing the rows 725mm apart. Always ensure your outer screws are spaced 50mm away from the edge of the panel.
- If you are installing SlatWall on a ceiling ensure your fixings are into structural points, such as joists.
- For maximum acoustic performance (Class A) install the panels onto 45mm (D) battens and use 45mm mineral wool between the battens.

PREPARATION

Ensure your wall is clean and remove any screws, nails or other fixings.


CUTTING

- Measure and mark your cut line using a pencil and square edge.
- You can cut the panels using a fine tooth wood saw or hand-held power tools.
- The felt can be cut with a sharp utility knife.

FIXTURES

- You can install any fixtures or fittings, including shelves and TV brackets. Simply drill through the panel and into your sub wall, then use the appropriate fixings i.e. wall plugs and screws.

INSTALLATION WITH GRAB ADHESIVE

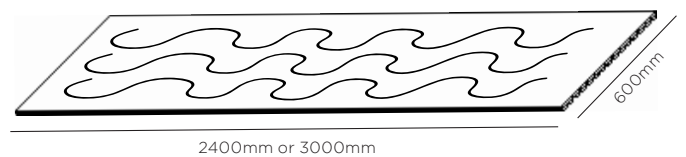

INSTALLATION WITH GRAB ADHESIVE

- Use a cartridge gun to apply grab adhesive to the back of your panel.
- Top Tip: 1 tube of grab adhesive will cover 3 panels.
- Apply this in an undulating pattern as shown in the diagram to achieve a flawless finish.
- Position the panel immediately in place against your wall and apply pressure to firmly secure.

