



WHAT YOU'LL NEED


- SlatWall Mini panels
- Tape measure
- Pencil
- Spirit level
- Hybrid Grab Adhesive
(depending on the method)
- Sealant gun
(depending on the method)
- 7 (3.5mm x 35 mm) screws
(depending on the method/suggested size)
- Screwdriver (depending on the method)
- Fine-toothed hand saw
- Sharp utility knife

GET TO KNOW YOUR PANELS

- Panel size: 600mm (H) x 600mm (W) x 21mm (D)
- Slat size: 27mm (W) x 12mm (D)
- Slats per panel: 15
- PET felt backing: 9mm (D)
- Single panel coverage: 0.36m²
- Four-pack panel coverage: 1.44m²

PLAN AHEAD

1. Remove any screws, nails or other fixtures from your wall.
2. Make sure your wall is clean, smooth and level.
3. Unbox all your packages and check the panels.
4. Rotate the panels in different directions to decide on your layout.
5. Cut the panels to size if needed.

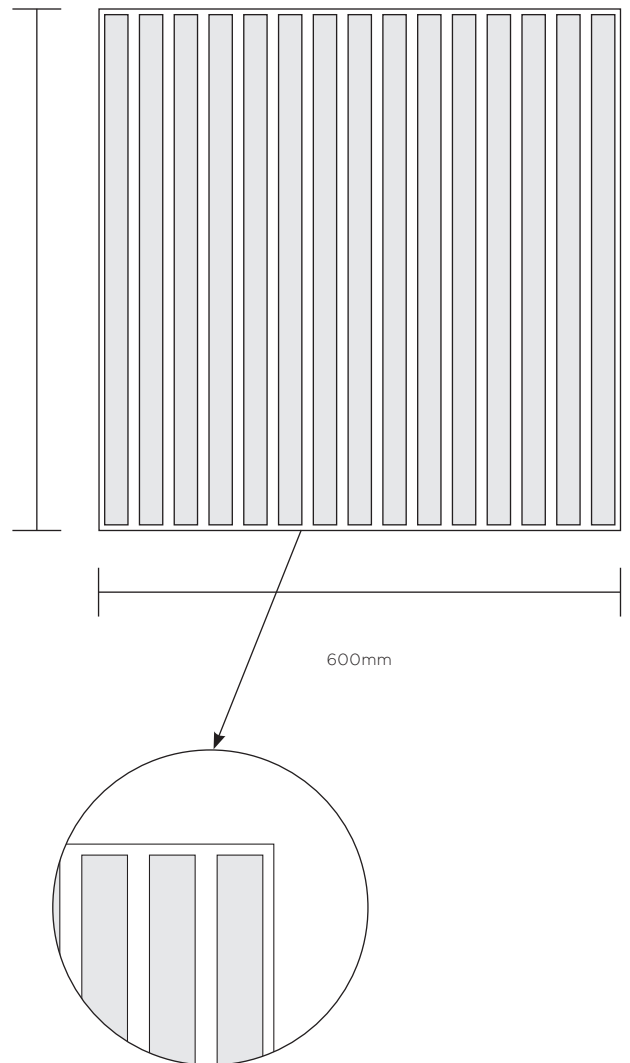



FORM A STRONG BOND

With screws:

1. Install your first panel by aligning six screws in rows of three and fixing it to your wall. If you wish, you can also position a seventh screw in the centre of the panel. Pick screws in a colour that coordinates with your felt backing and use the appropriate fixings for your wall (e.g., wall plugs). Top tip: make sure the outer screws are 50mm from the panel's edge.
2. For maximum (Class A) acoustic performance, install the panels onto 45mm (D) battens with 45mm mineral wool between each batten.
3. Repeat for each panel.

Important: if installing the panels on a ceiling, fix the screws to structural points such as joists.

With Hybrid Grab Adhesive:

1. Following the square shape, apply Hybrid Grab Adhesive approximately 20mm from the edges, along with an 'X' formation on back of your first panel. Top tip: one tube of adhesive covers 12 panels.
2. Position the panel against your wall and press firmly to secure it.
3. Repeat for each panel.

MAKE THE CUT

1. Measure where you want to cut.
2. Mark a straight line with a square tool and pencil.
3. Cut the panel horizontally with a fine-toothed hand saw or cut the felt backing vertically with a sharp utility knife.

DO AS YOU SEE FIT

If adding fixtures and fittings, such as shelves or TV brackets, drill through the panel and sub wall, then use appropriate wall plugs and screws.

LAST BUT NOT LEAST

Stand back and marvel at your beautiful wall.

We're here to help with your wall transformation. If you have any questions about installing SlatWall Mini, please contact our customer service team at info@naturewall.com.

