



### DIMENSIONS

#### Panel Size:

2400mm (H) x 168mm (W) x 18mm (D)

#### Slats:

27mm (W) x 13mm (D)

### PREPARATION

Ensure your wall is clean and remove any screws, nails or other fixings.

### CUTTING

- Measure and mark your cut line using a pencil and square edge.
- Cut the panels with the panel face positioned upwards.
- We recommend using a fine-toothed wood saw to prevent splintering.

We do not recommend using a circular saw or jigsaw to cut your panels.



### FIXTURES

Mount fixtures, including mirrors, through the panels by using the appropriate wall plugs and screws.

### INSTALLATION

Install by applying grab adhesive onto the back of your panel. Top tip: we recommend using grab adhesive to help you achieve a flawless finish.

(\*Three panels per pack overlap seamlessly together. When interlocked the full width is 486mm)

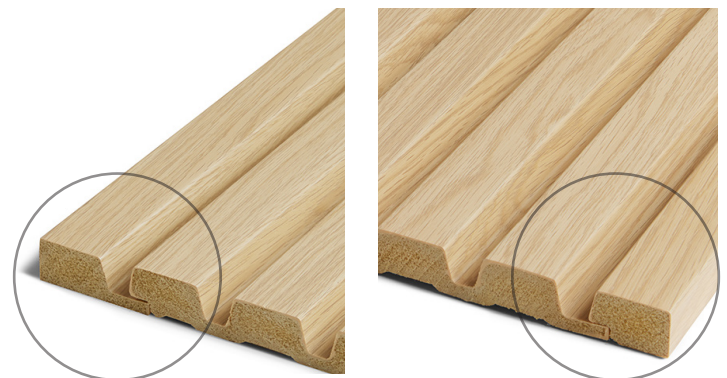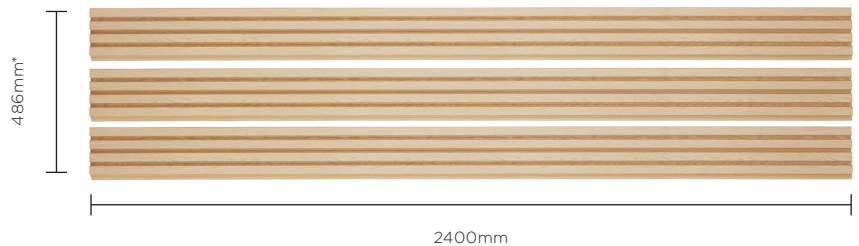

End Cap - Tongue

End Cap - Groove

### END CAPS AND EDGE TRIM

Each panel slots seamlessly together. Add a Tongue or Groove End Cap\* to finish any exposed edges. For a half height effect, use an Individual Slat\* as the top trim to complete your project.

(\*Tongue and Groove End Caps and Individual Slats sold separately)

