



# FULL DIVIDED LITE – FIXED PANEL

## INSTALLATION INSTRUCTIONS


- 1) Mark centerline on the curb. Position the sill on the centerline with the front snap cover to the exterior of the enclosure and the weep holes to the interior. Hold in place with tape.
- 2) Set the wall jamb into the sill against the wall and hold plumb.
- 3) Using the wall jamb's pre-drilled installation holes, mark and drill 3/16" (5mm) installation holes 1-1/4" (32mm) deep. Insert plastic screw anchors into the holes. Secure the wall jamb to the wall with #6 Head - #8 x 1-1/4" (32mm) screws.
- 4) Set the panel into the sill with the mullions toward the outside of the enclosure. Slide it towards and over the wall jamb.
- 5) Attach the snap cover to the panel vertical.
- 6) Mark the sill to trim excess as needed. 2" (50mm) extra provided to make exact cut for installations with wall out of plumb (leaning in).
- 7) Remove panel and sill. Trim sill to length marked and reposition.
- 8) Using the sill's pre-drill installation holes, mark and drill 3/16" (5mm) installation holes 1-1/4" (32mm) deep. Insert plastic screw anchors into the holes. Secure the sill to the curb with #6 Head - #8 x 1-1/4" (32mm) screws.
- 9) Set the panel back into place.
- 10) Secure the panel to the wall jamb with 3 screws #8 x 3/4" (19mm) and to the sill with 3 screws #8 x 3/4" (19mm). Drill 9/64" (3.5mm) holes 3/4" (19mm) deep on the inside of the enclosure at 1/4" (7mm) from the edge of the panel.
- 11) Insert the end cap into the end of the sill.
- 12) From outside of the enclosure, caulk the full length where the sill meets the curb and the wall jamb meets the shower wall.

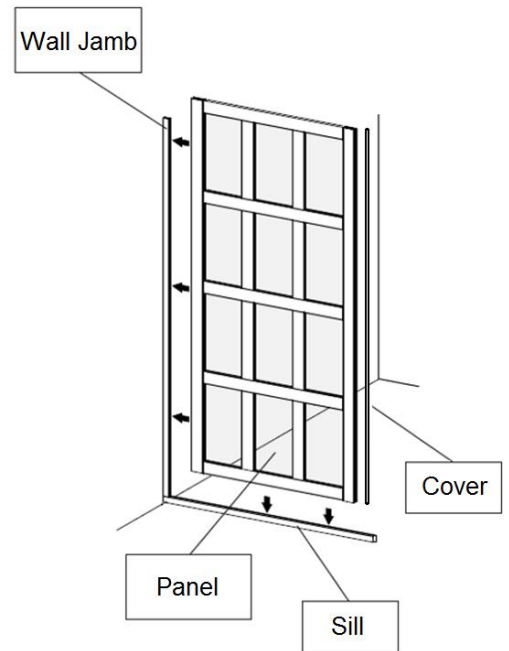


Outside of Enclosure

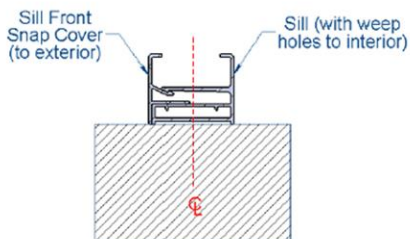

Step 1

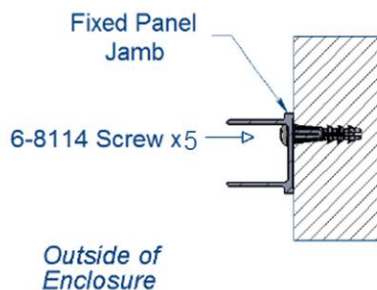

Step 3

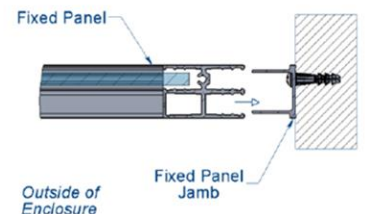

Step 4