



**www.mud-busters.com**

Email us for digital instructions: [Mudbusters@gracemfg.com](mailto:Mudbusters@gracemfg.com)

Thank you for purchasing MudBuster's **Radiator Protection Panels for the 2016-2020 Polaris General 1000!** We manufacture the best-selling fender flare kits for UTVs and side by sides! All MudBusters products are made in the USA, and these fender flares are manufactured from high-quality American made material. Your new extended fenders are designed to deflect debris and reduce the amount of mud that typically gets thrown from the tires into unwanted areas. They can withstand a lot of abuse, but they are not designed for crash protection, absorbing impacts, rollovers, or uprooting trees. If you have an accident or if you happen to damage your fenders, order discounted replacement fenders by phone (for existing customers only). Unlike other manufacturers, you do not have to buy a complete set if you damage just one fender.

**IMPORTANT:**

Some of the images in the instructions below may differ from the actual product. In our continual effort to increase customer satisfaction, we may change the style, material, and/or hardware to serve you better. If your fenders get slightly distorted while in transit, apply pressure to the distorted areas to straighten them out before installation.

Use caution when drilling into the factory panels of your vehicle. Make sure that you do not penetrate the surrounding parts or the chassis (unless instructed). Self-tapping screws and push rivets are included as an effective and easy way to fasten the fender flares to your machine. However, you can use other methods of securing our extended fenders to your vehicle as well (i.e., rivets, misc. hardware, etc.). Remember, it may be helpful to have a friend assist you with the installation.

**Unboxing:**

Carefully open your package from the box's top (or bottom) by removing the staples with a flat-head screwdriver or pliers. Slide the fenders out of the box and make sure that any staples do not scratch your fenders. MudBusters are formed to fit your machine but shipped in a narrow box. You may find it necessary to apply pressure and re-bend some of your fenders for a better fit. Don't worry, they're very durable and will not break from re-shaping them!

**Note:** Using a larger drill bit may allow the fender to come off when riding! The rivets need to be a tight fit to secure the fender flare to the fender. We recommend a 21/64" drill bit.

**Note:** Max coverage set shown. Smaller sets (Mud-Lite, or Race-Lite) may have less hardware in the front of the front fender or the lower front of the rear fender than pictured. In these cases, it may be helpful to use the rear mounting locations first for installation ease.

**Thank you for your business!**

Please send us pictures and/or videos of your vehicle with MudBusters installed to our Facebook page

<https://www.facebook.com/UTVMudbusters/>

#utvmudbusters.com

or email us via [mudbusters@gracemfg.com](mailto:mudbusters@gracemfg.com)

We may feature your ride on our website, social media, Amazon and/or eBay!

For technical assistance or product inquiries, please call us at:

1-844-MUD-FLAPS or 844-683-3527

Hours: Mon-Fri 8-4 MST

**▲ WARNING**

This product can expose you to chemicals, including phthalates which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more info, go to [www.p65Warnings.ca.gov](http://www.p65Warnings.ca.gov)

# Installation Instructions

## 2016-2020 Polaris General 1000

### Radiator Protection Panel Installation (Passenger Side)



- 1) Install the passenger side protection panel by inserting the top of the panel sideways as shown in [\(Figure 1\)](#). The notch for the lower radiator hose should be positioned as shown.
- 2) Rotate the panel clockwise and set the panel into position as seen in [\(Figure 2\)](#).
- 3) Drill through the side radiator plastic with a 5/16" drill bit and insert the plastic rivets.



Figure 1



Figure 2

This notch is cut out for the lower passenger side radiator hose.


Drill out the holes and holes and insert 4 rivets per side.

## Installation Instructions

### 2016-2020 Polaris General 1000

#### Radiator Protection Panel Installation (Driver Side)

- 1) Installation of the driver side panel should be easier than the passenger side. Simply insert the panel between the radiator and upper radiator hose as shown in [\(Figure 3\)](#)
- 2) Drill through the side radiator plastic with a 5/16" drill bit and insert the plastic rivets.

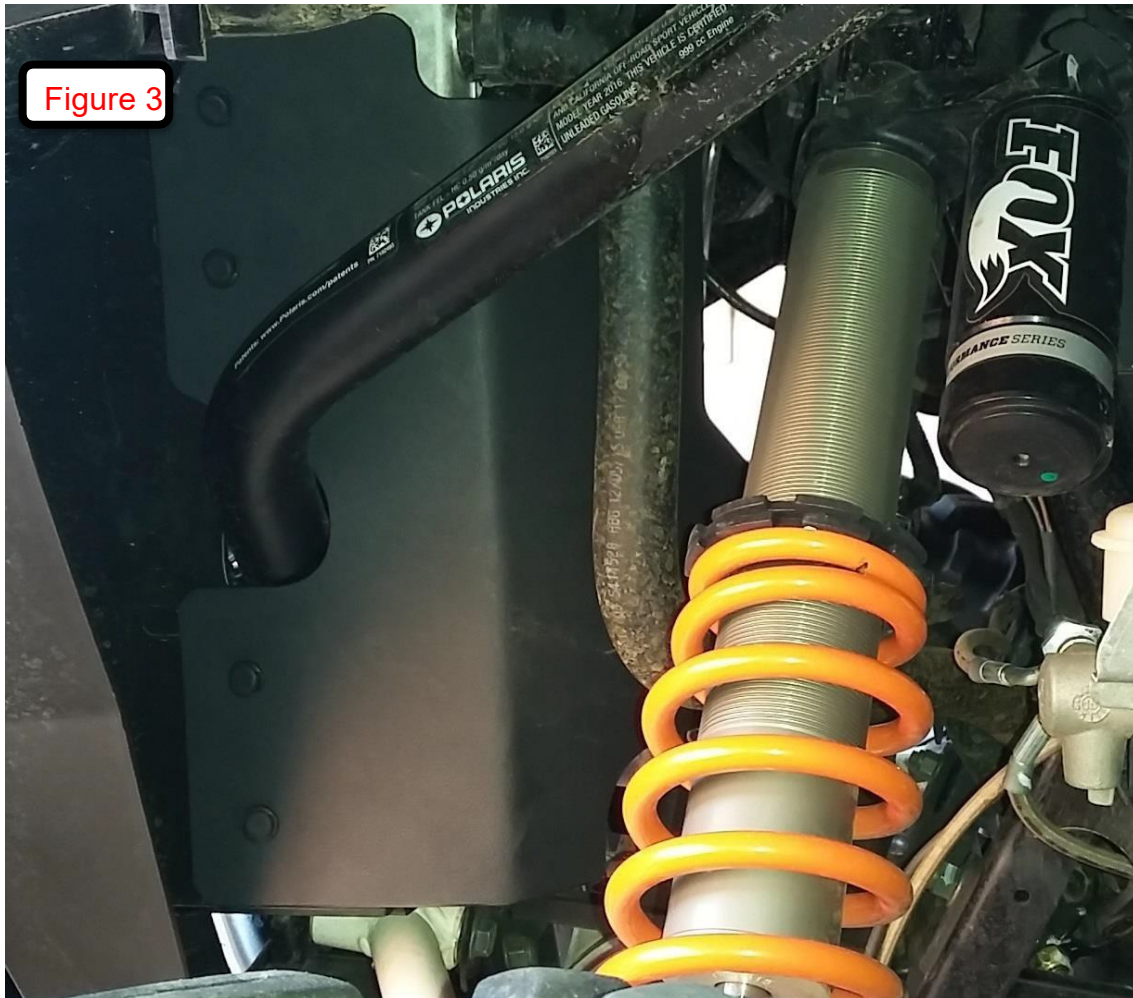

#### Hardware Included

Radiator Protection Panel Kit  
(2) Radiator Protection Panels  
(8) Plastic Rivets