



www.mud-busters.com

Email us for digital instructions: Mudbusters@gracemfg.com

Thank you for purchasing MudBuster's **fender flares for the 2012-2021 Kawasaki Teryx 4!** We manufacture the best-selling fender flare kits for UTVs and side by sides! All MudBusters products are made in the USA, and these fender flares are manufactured from high-quality American made material. Your new extended fenders are designed to deflect debris and reduce the amount of mud that typically gets thrown from the tires into unwanted areas. They can withstand a lot of abuse, but they are not designed for crash protection, absorbing impacts, rollovers, or uprooting trees. If you have an accident or if you happen to damage your fenders, order discounted replacement fenders by phone (for existing customers only). Unlike other manufacturers, you do not have to buy a complete set if you damage just one fender.

IMPORTANT:

Some of the images in the instructions below may differ from the actual product. In our continual effort to increase customer satisfaction, we may change the style, material, and/or hardware to serve you better. If your fenders get slightly distorted while in transit, apply pressure to the distorted areas to straighten them out before installation.

Use caution when drilling into the factory panels of your vehicle. Make sure that you do not penetrate the surrounding parts or the chassis (unless instructed). Self-tapping screws and push rivets are included as an effective and easy way to fasten the fender flares to your machine. However, you can use other methods of securing our extended fenders to your vehicle as well (i.e., rivets, misc. hardware, etc.). Remember, it may be helpful to have a friend assist you with the installation.

Unboxing:

Carefully open your package from the box's top (or bottom) by removing the staples with a flat-head screwdriver or pliers. Slide the fenders out of the box and make sure that any staples do not scratch your fenders. MudBusters are formed to fit your machine but shipped in a narrow box. You may find it necessary to apply pressure and re-bend some of your fenders for a better fit. Don't worry, they're very durable and will not break from re-shaping them!

Note: Using a larger drill bit may allow the fender to come off when riding! The rivets need to be a tight fit to secure the fender flare to the fender. We recommend a 21/64" drill bit.

Note: Max coverage set shown. Smaller sets (Mud-Lite, or Race-Lite) may have less hardware in the front of the front fender or the lower front of the rear fender than pictured. In these cases, it may be helpful to use the rear mounting locations first for installation ease.

Thank you for your business!

Please send us pictures and/or videos of your vehicle with MudBusters installed to our Facebook page

<https://www.facebook.com/UTVMudbusters/>

#utvmudbusters.com

or email us via mudbusters@gracemfg.com

We may feature your ride on our website, social media, Amazon and/or eBay!

For technical assistance or product inquiries, please call us at:

1-844-MUD-FLAPS or 844-683-3527

Hours: Mon-Fri 8-4 MST

▲ WARNING

This product can expose you to chemicals, including phthalates which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more info, go to www.p65Warnings.ca.gov

Installation Instructions

2012-2015 Kawasaki Teryx 4

Front Fender Flare Installation

1) Open the hood and the front doors. Remove the following plastic rivets and Phillips head bolts from both sides of the vehicle (See Figures 1 & 2)



Figure 1



1) Remove the plastic rivets from both sides of the body panel and set them aside.

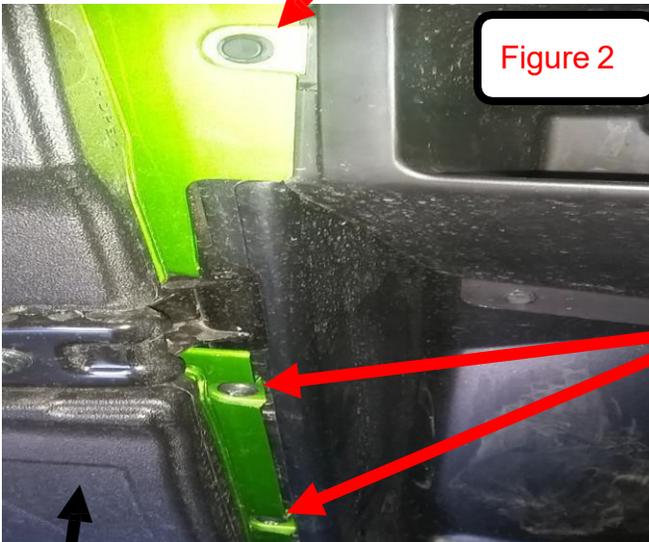


Figure 2

Driver's side door

2) Open the front doors to expose the (2) Phillips head bolts and remove them.

*Be cautious when removing these bolts. They can be tight, so use the correct bit and/or screwdriver.

Installation Instructions

2012-2015 Kawasaki Teryx 4

Front Fender Flare Installation

2) Once you have removed the below body panels, place them on a flat surface, and match the MudBusters front fenders to the inside of the panel that faces the wheel well.

Please note: the smooth side of the fender flare faces the tires.

3) Mark the holes using a marker or a punch.



4) Using a 1/4" drill bit (or slightly larger), drill the holes to make room for the hardware.

5) Add (1) 3/4" Phillips bolt with (1) washer on each side and a locknut to each hole as seen below.



Installation Instructions

2012-2015 Kawasaki Teryx 4

Front Fender Flare Installation

6) Insert the body panels with the installed MudBusters back into their original locations, install the factory plastic rivets and Phillips head screws. Be sure that the MudBusters fender slips between the roll bar and the plastic lip as seen below.



Insert the lower portion of the fender between the plastic and the roll bar.

Installation Instructions


2012-2015 Kawasaki Teryx 4

Rear Fender Flare Installation

- 1) In the forward section of the rear wheel wells, locate the area below and remove the outlined piece of plastic with a razor knife.



- 2) Open the rear doors.
- 3) Remove the factory Phillips bolt and set it aside.
- 4) Slip the rear fender flare between the plastic and the roll bar.
- 5) Push the fender against the roll bar, tighten the Phillips bolt.

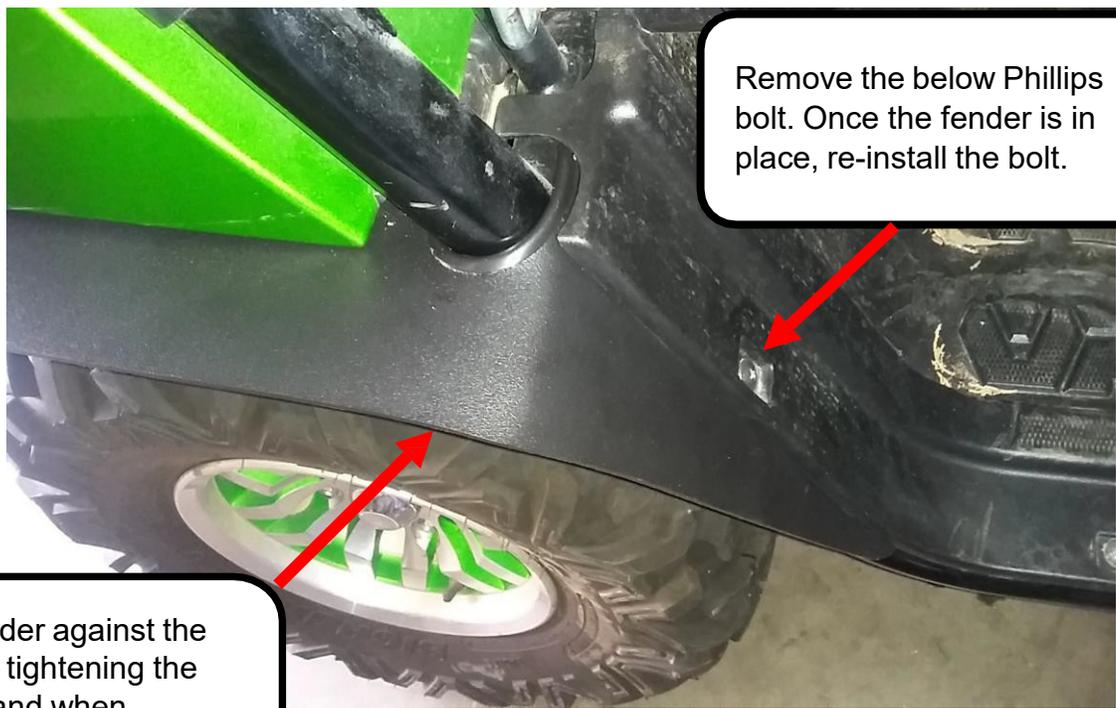

Remove the below Phillips bolt. Once the fender is in place, re-install the bolt.

Push the fender against the roll bar while tightening the Phillips bolt and when installing the self-tapping screws (see below).

Installation Instructions

2012-2015 Kawasaki Teryx 4

Rear Fender Flare Installation

6) Install self-tapping screws to secure the fender to the wheel well. Space them evenly to reduce any gaps that may be visible from the outside of the vehicle.



Push the fender against the roll bar while installing the self-tapping screws with a cordless drill.

Note: Self-tapping screws can be installed to reduce any remaining gaps after all of the aforementioned hardware has been tightened down.

Hardware Included

Included in the Fender Flare Kit

- (2) Front Fender Flares
- (2) Rear Fender Flares
- (25) Self tapping screws
- (6) 1/4-20 x 3/4" Phillips bolts
- (12) Washers
- (6) Lock nuts