

Evokit cartongesso - Evokit placo - Evokit p.board - Evokit pladur












Ermetika®

EP




- Ⓘ ISTRUZIONI MONTAGGIO CONTROTELAIO EVOKIT CARTONGESSO
- Ⓕ INSTRUCTIONS MONTAGE CONTRE-CHASSIS EVOKIT PL. DE PLATRE
- ⒼB SET UP INSTRUCTIONS POCKET SLIDING SYSTEM EVOKIT P.BOARD
- ⒺS INSTRUCCIONES DE MONTAJE ARMAZON EVOKIT PLADUR

Evokit 100-125

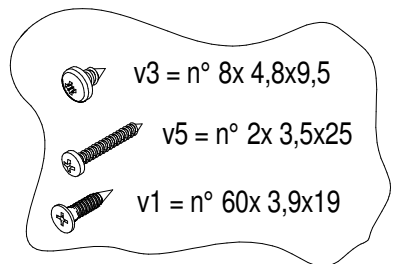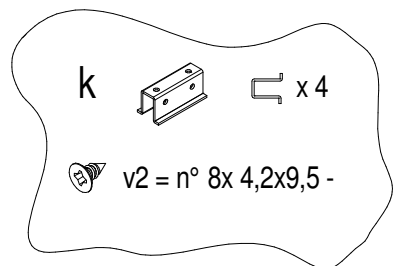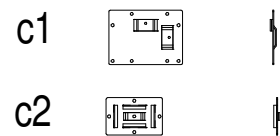
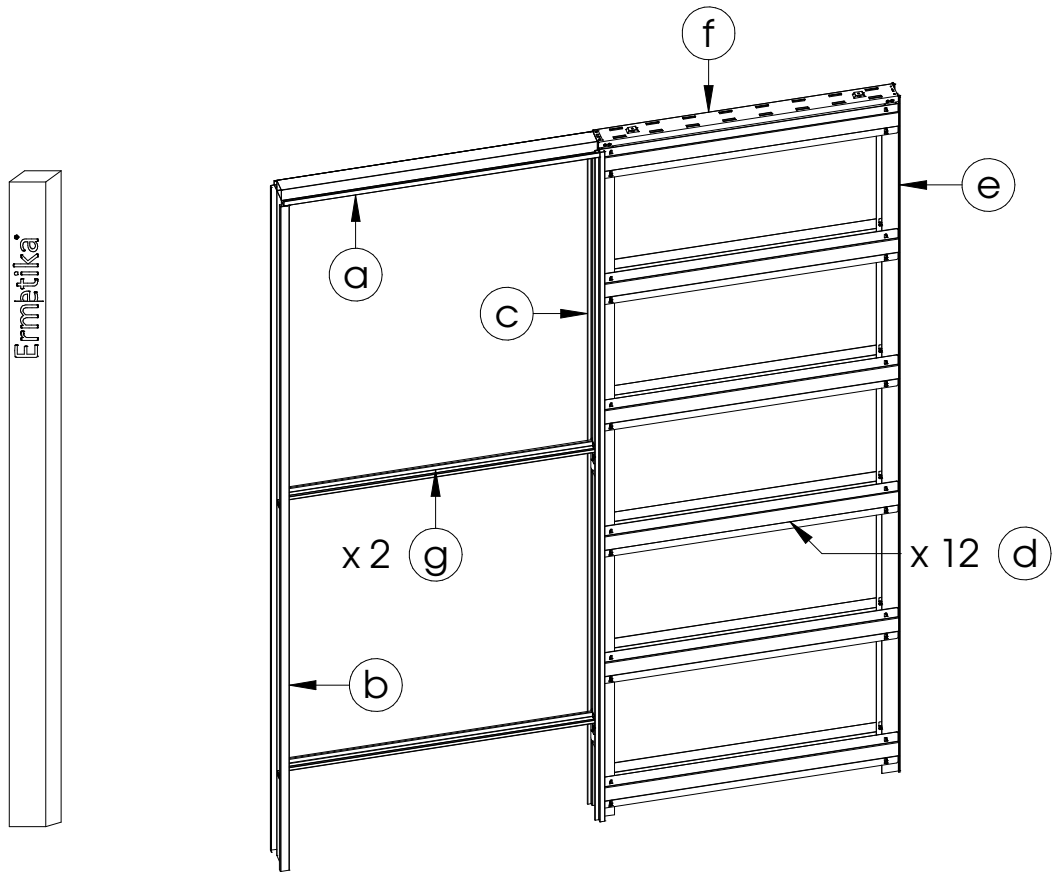


Evokit 100

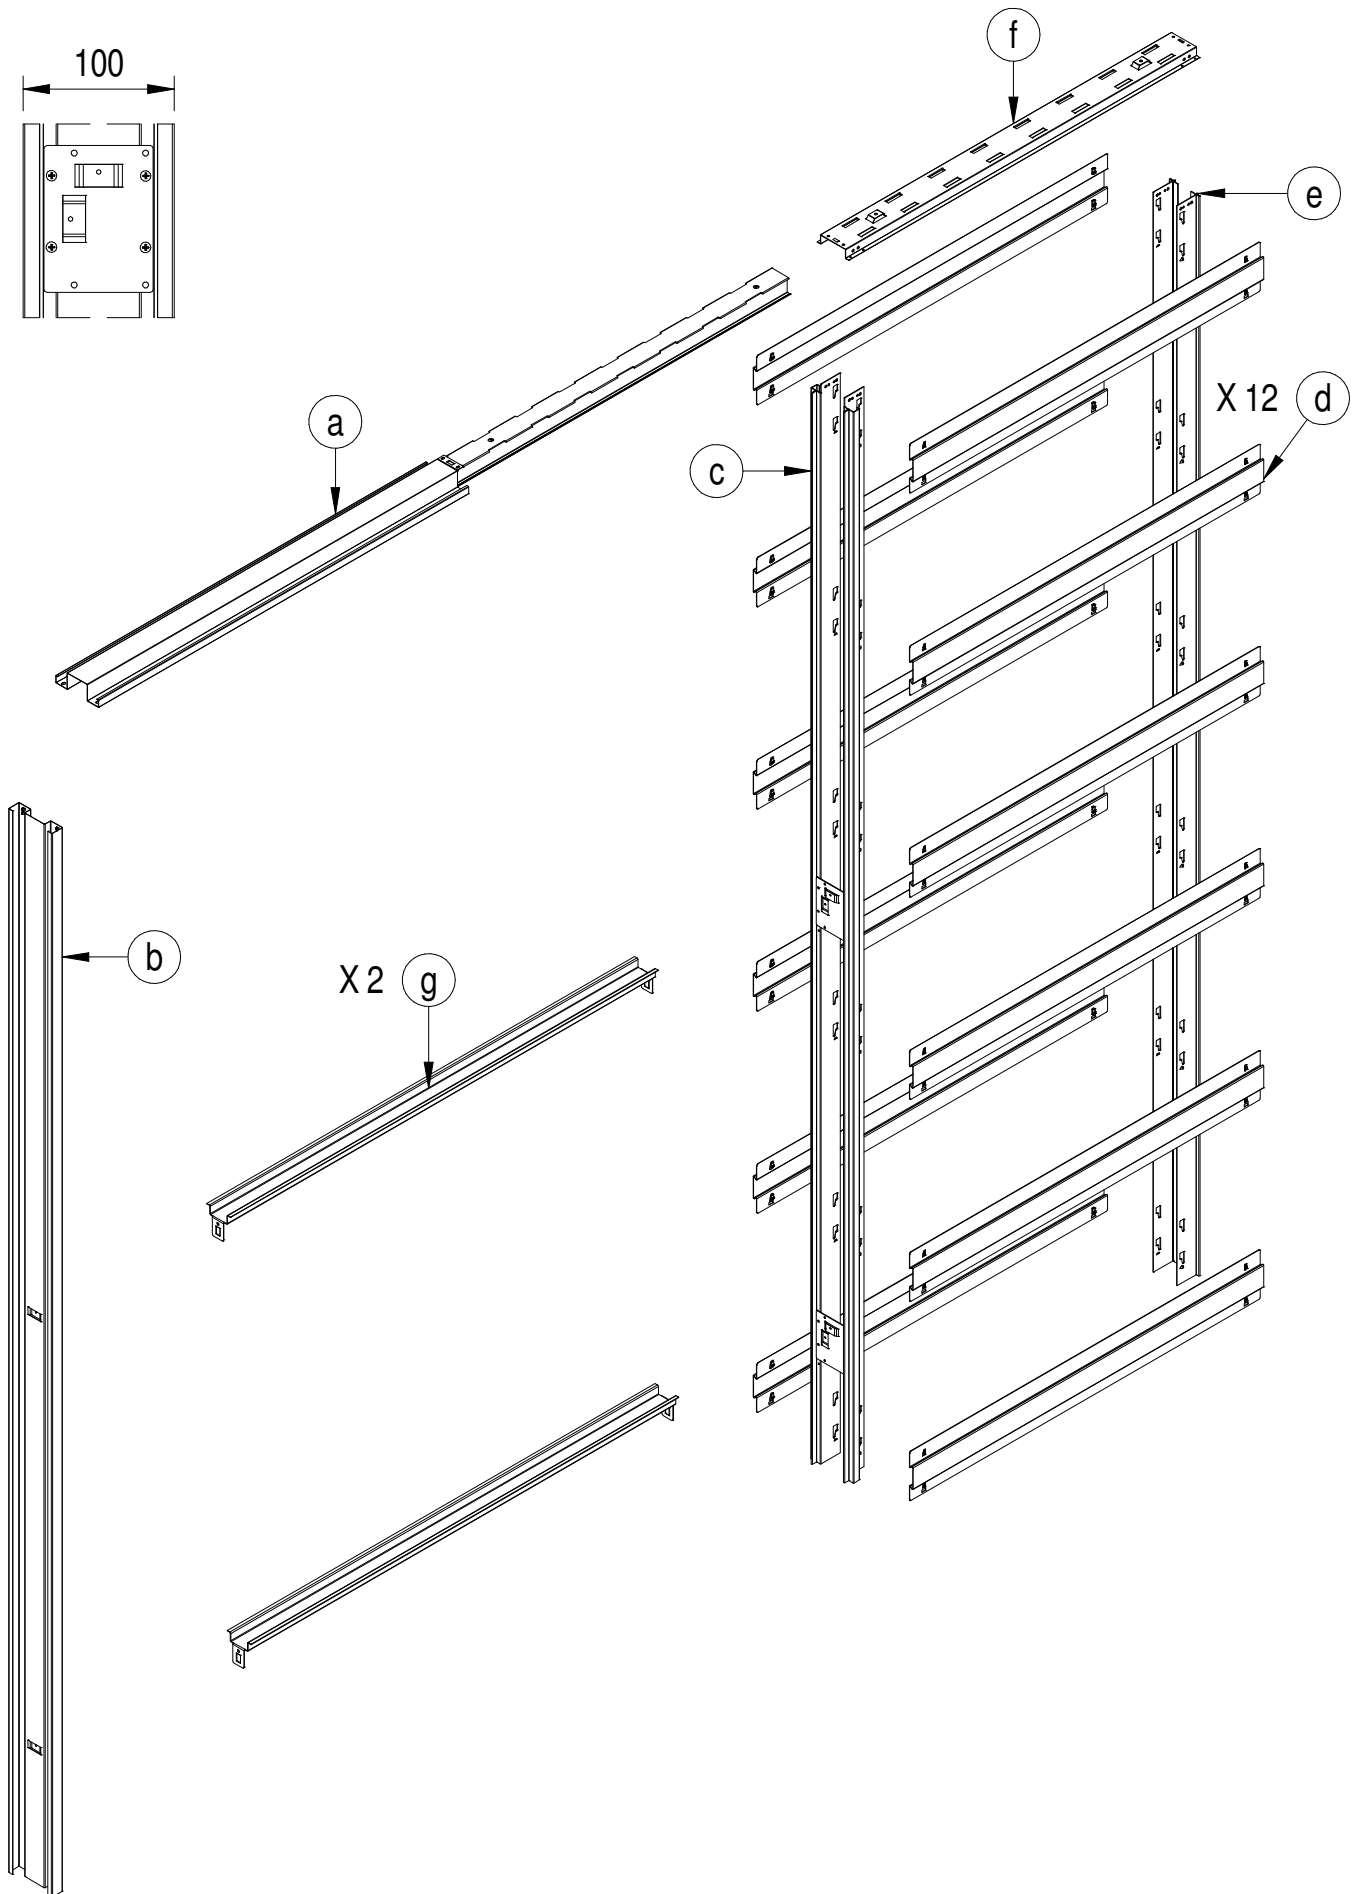


Evokit 100

1

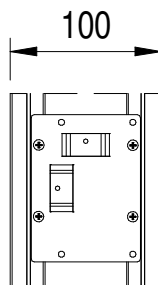
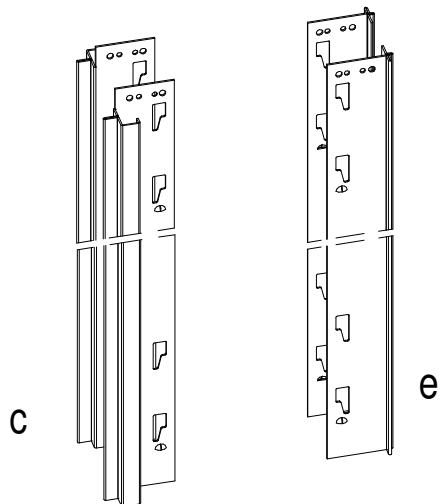


c





e


2

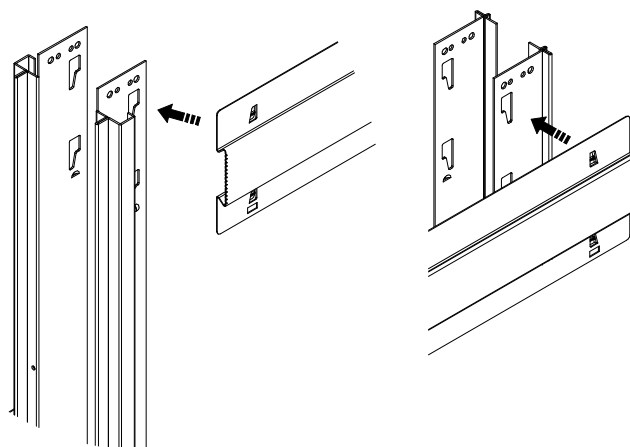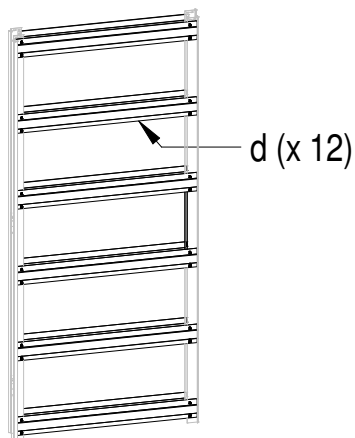

3

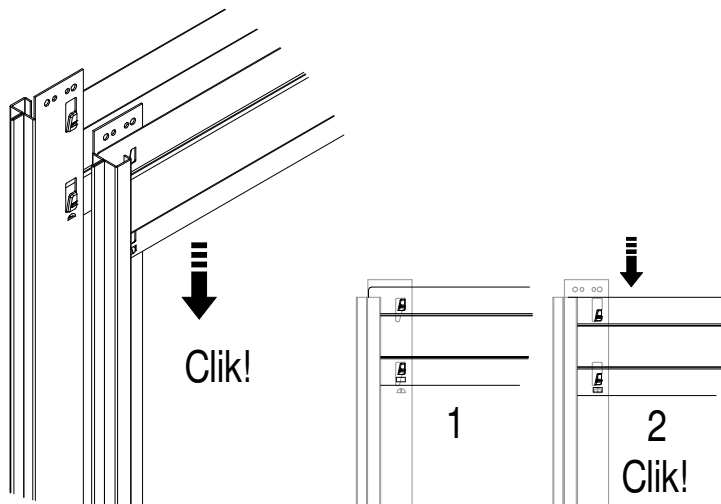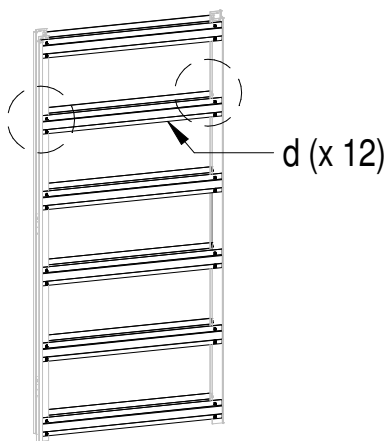




4

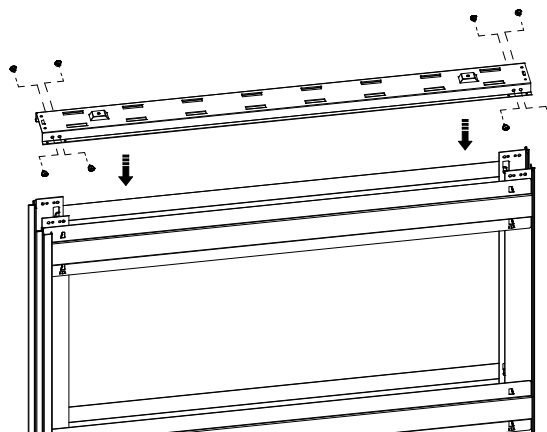




v3 = n° 8x 4,8x9,5




5

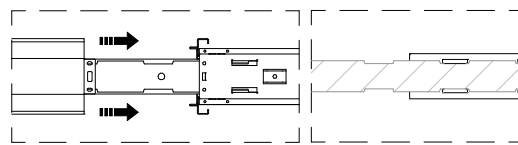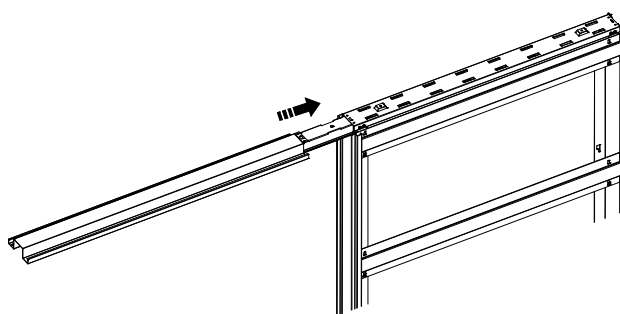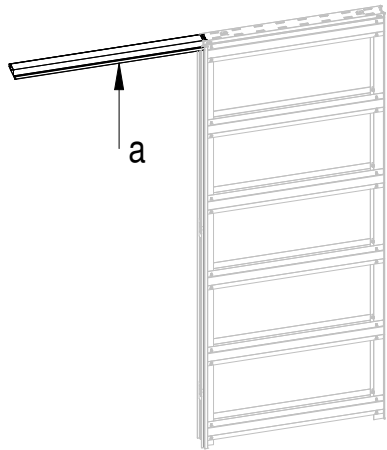


6

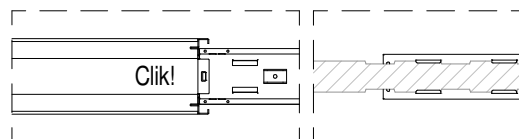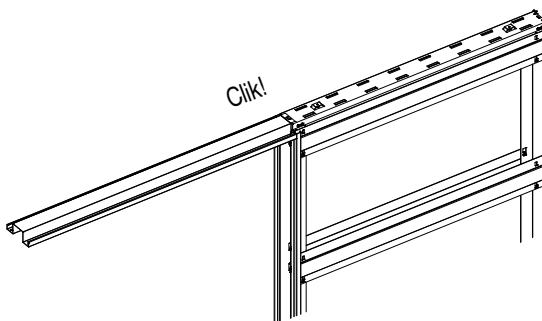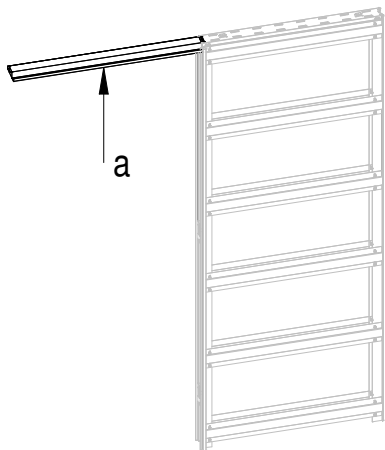



7

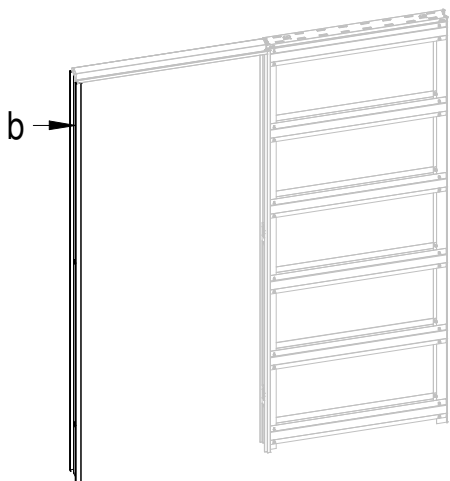

v5 = n° 2x 3,5x25



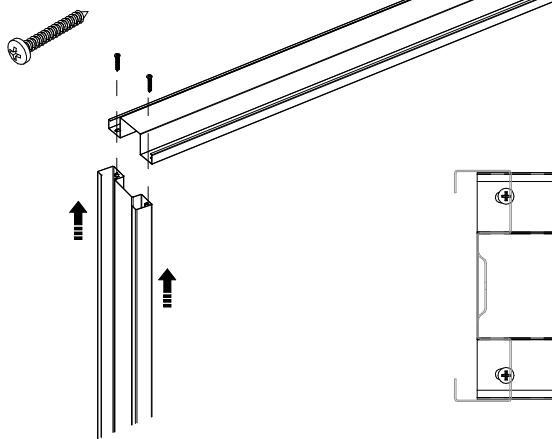


8

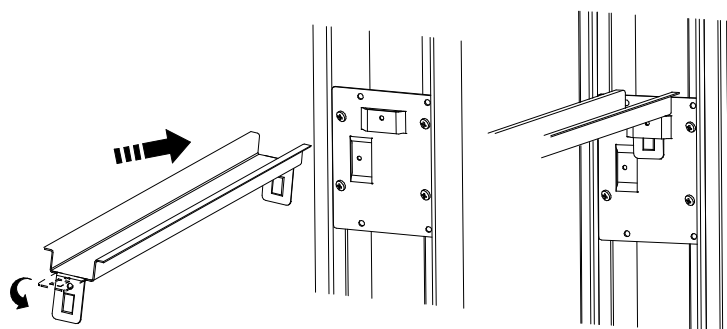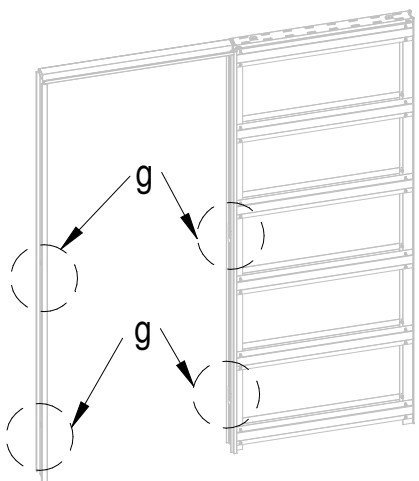


Evokit 100

Posizionamento su tramezzo - Framing -
Installation sur structure placo - Fijacion de la estructura

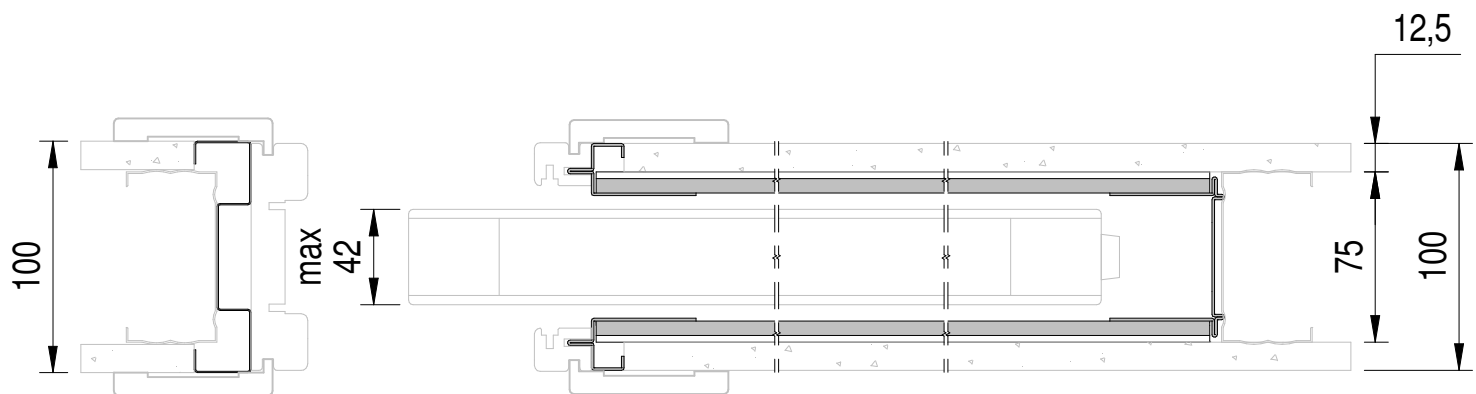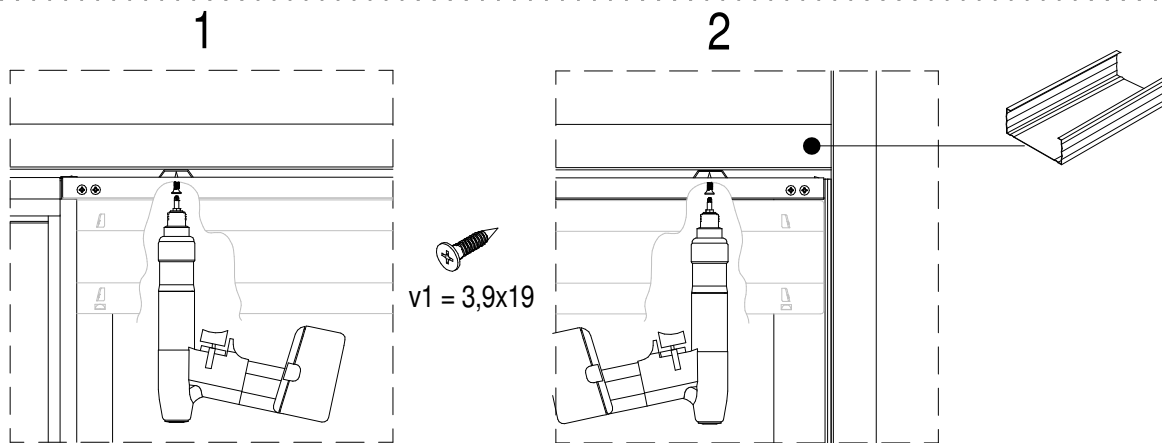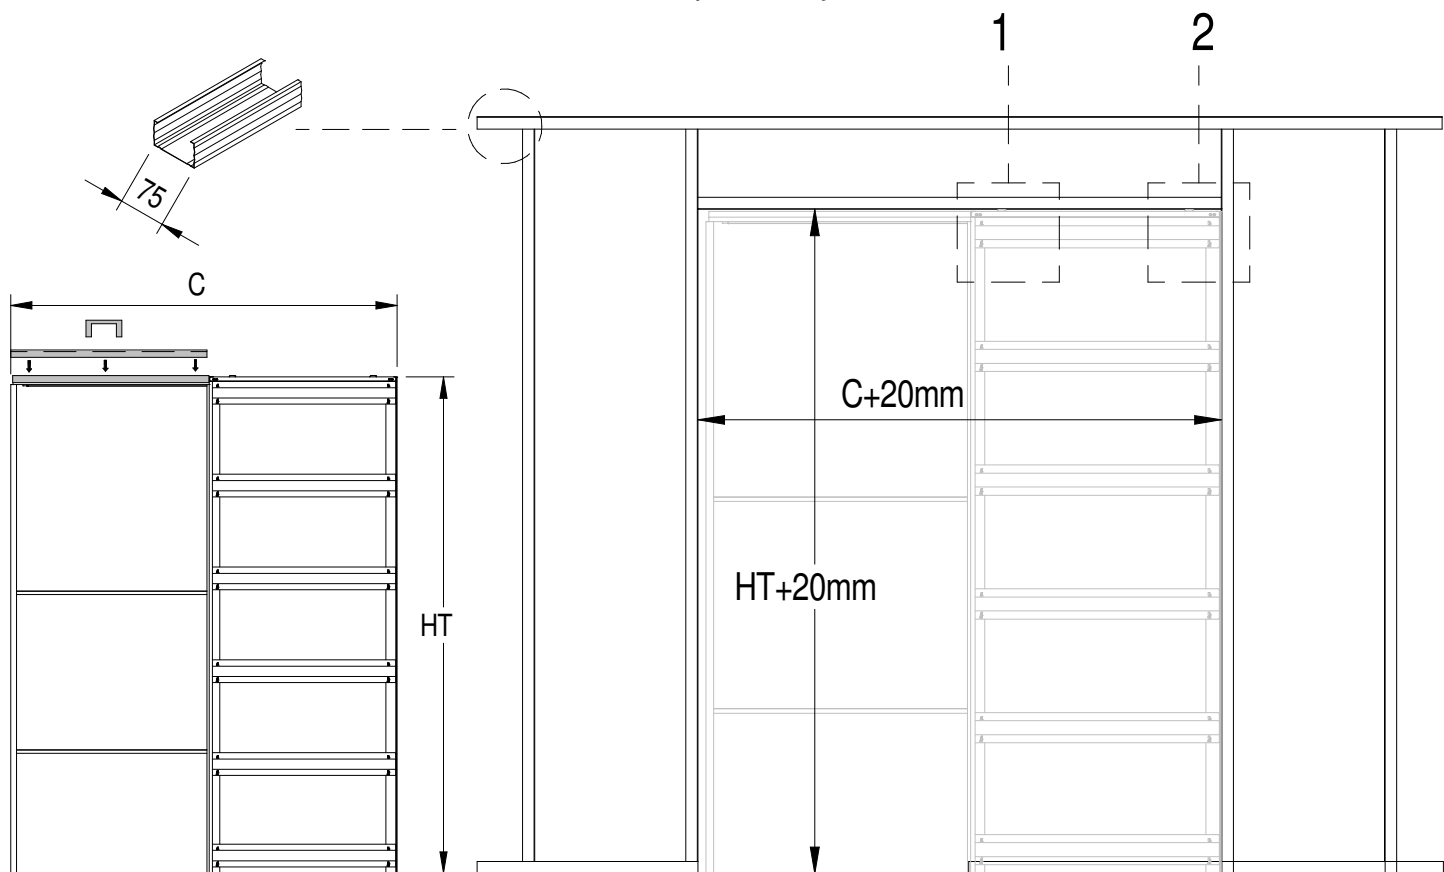


Evokit 125

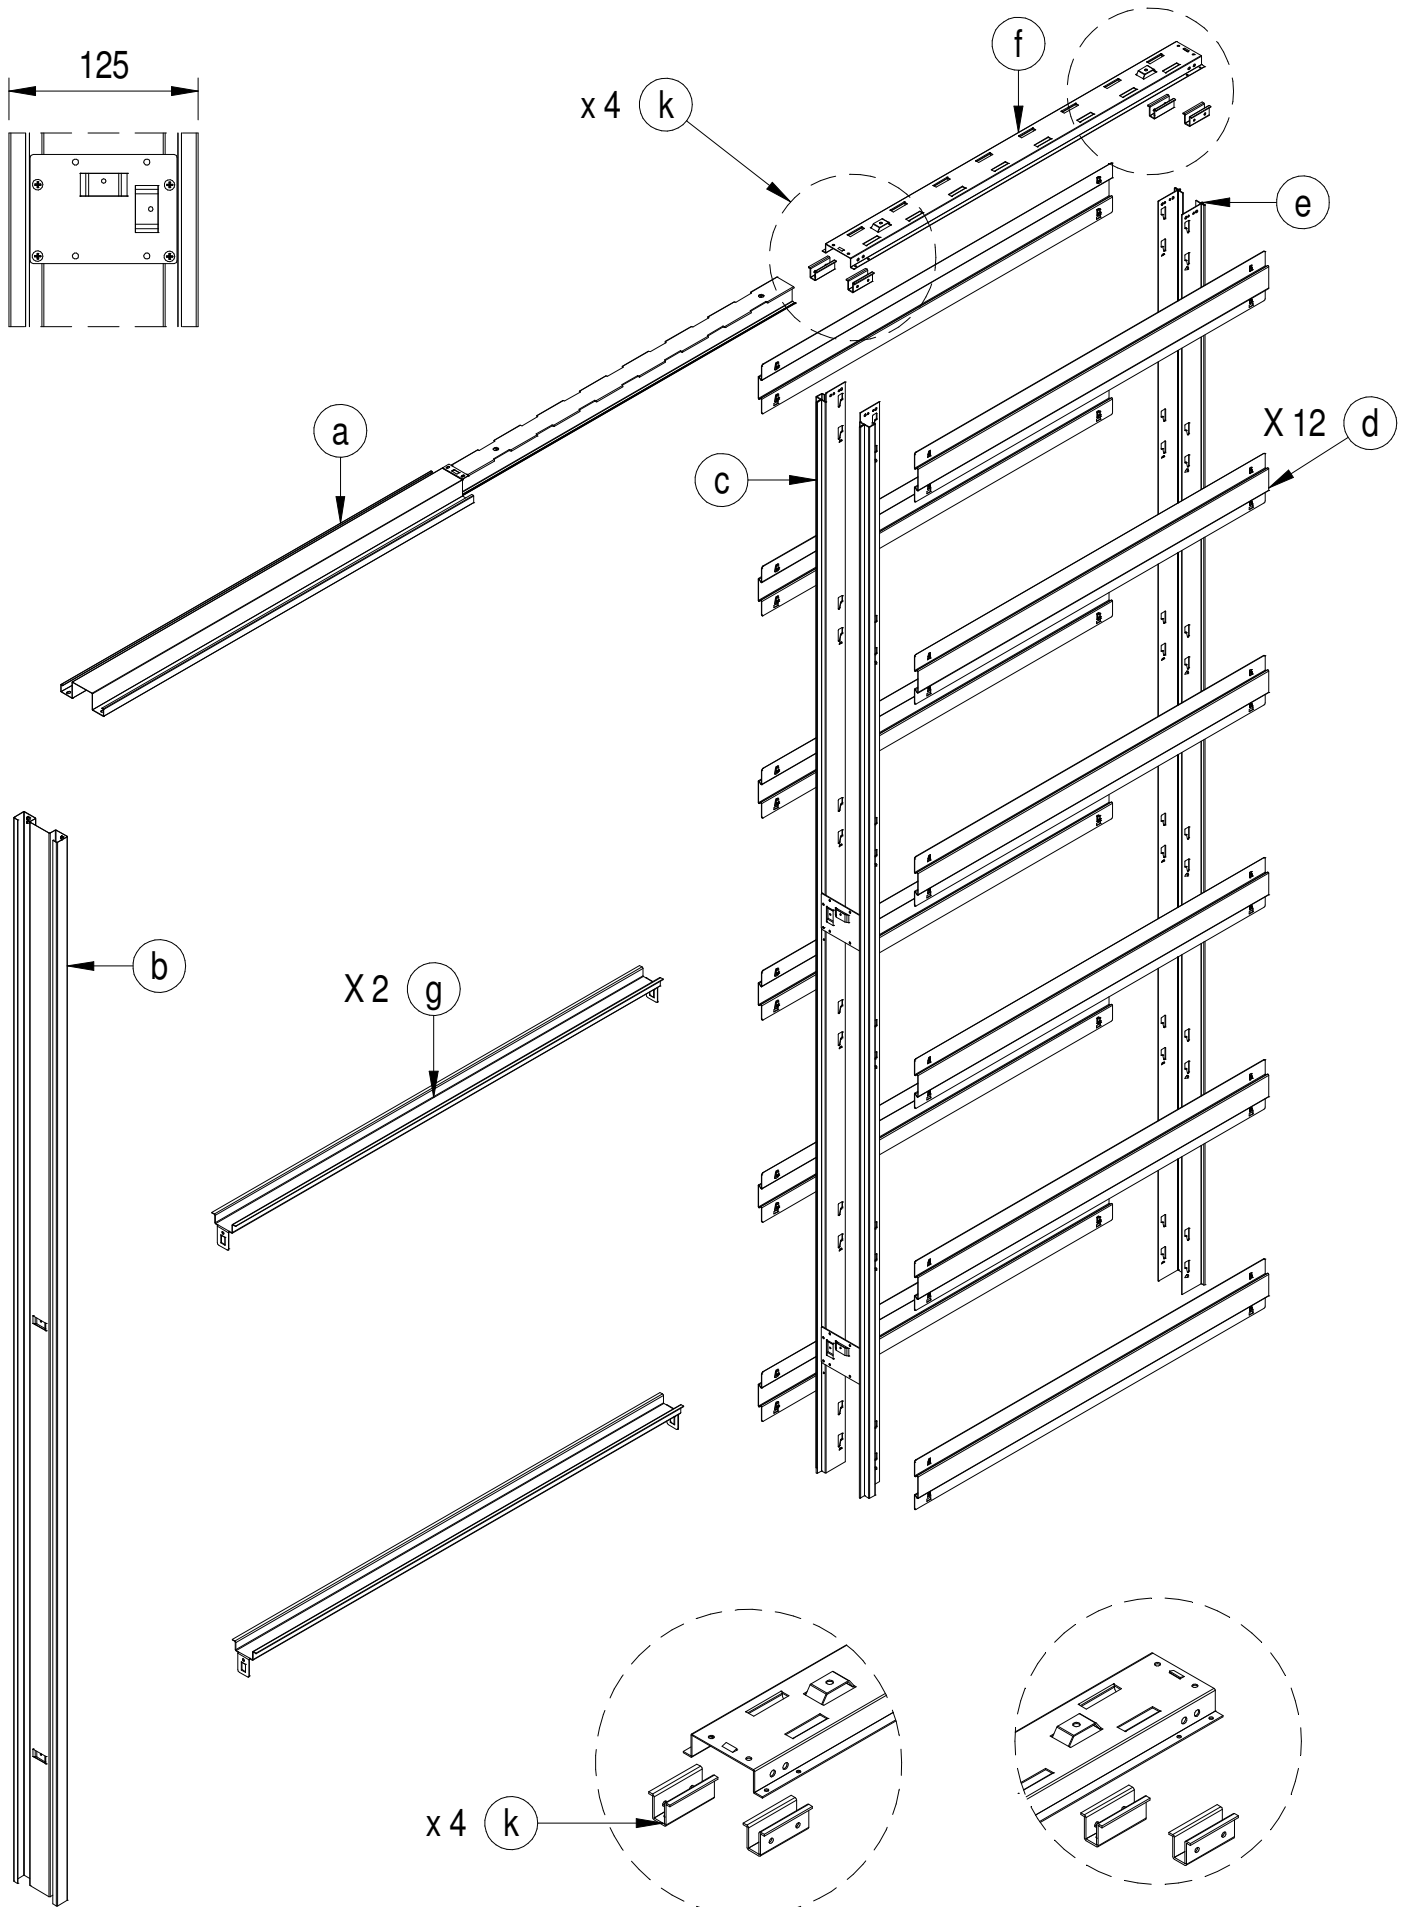


Evokit 125

1.1

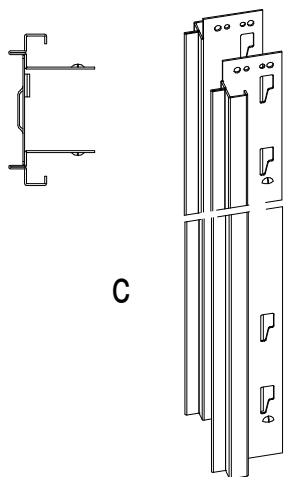


C

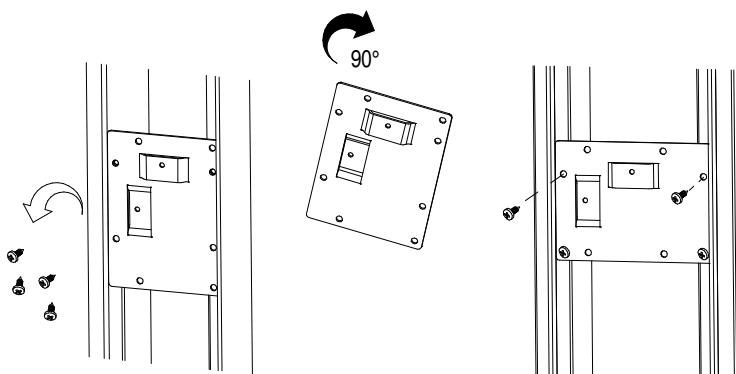


n° 4x 3,9x19

2.1

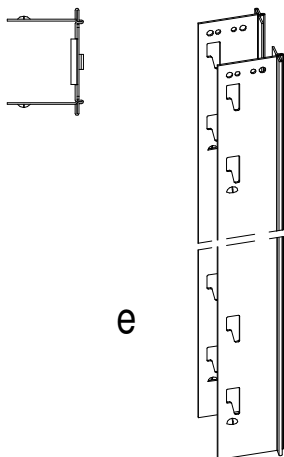


e

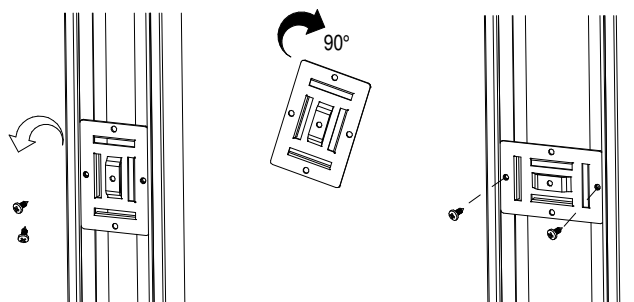


n° 2x 3,9x19

3.1

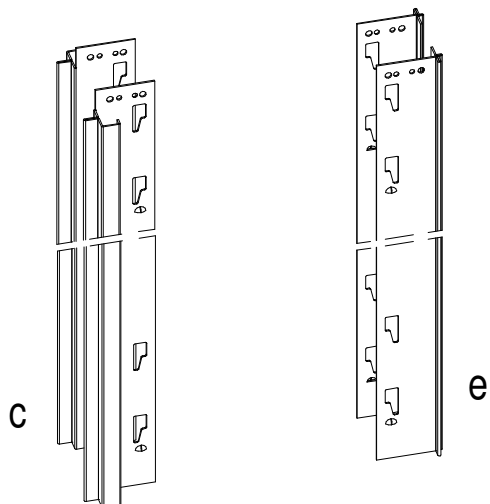

C

e

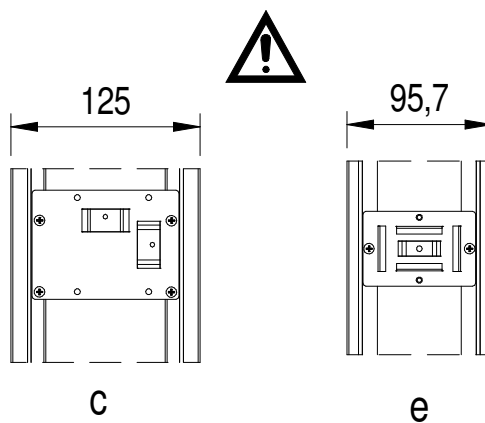


125

95,7


C

e

4.1



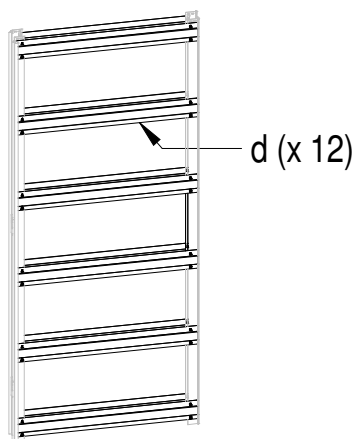


d (x 12)

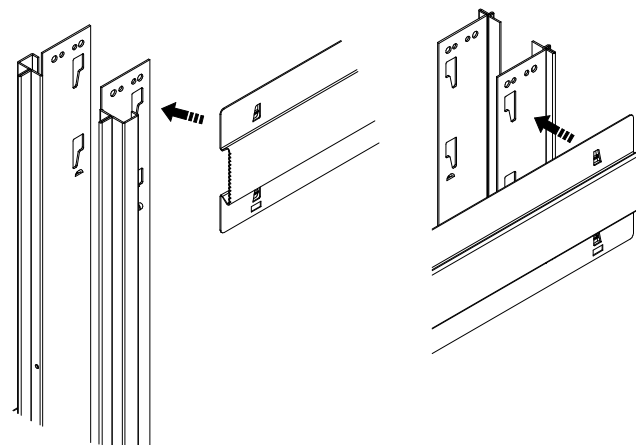


Evokit 125



5.1

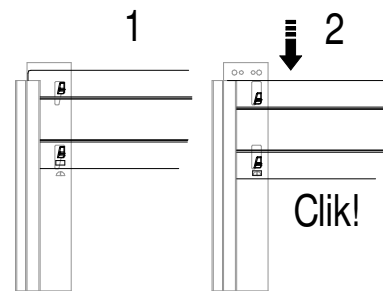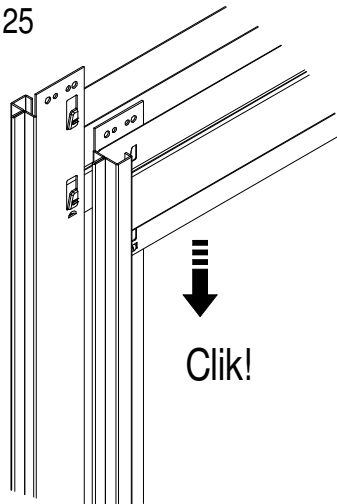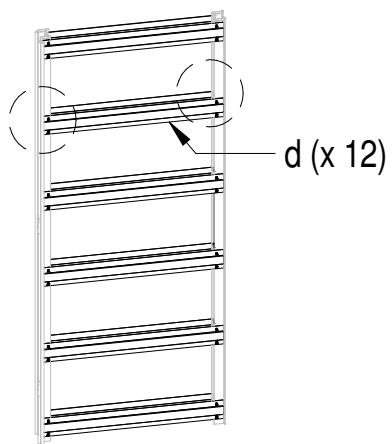


6.1

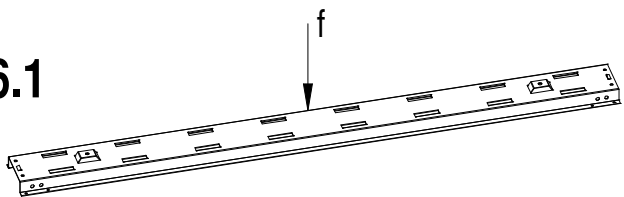

v2 = n° 8x 4,2x9,5

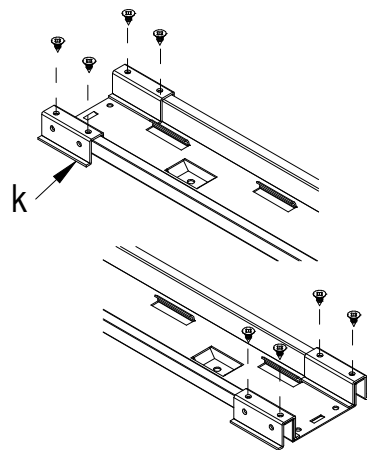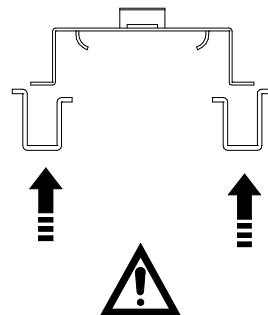




7.1

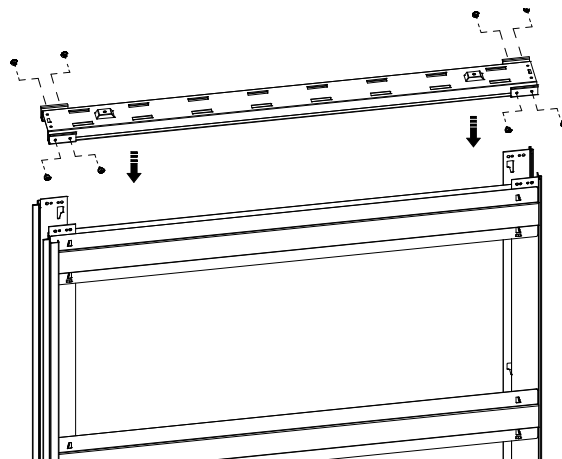



v3 = n° 8x 4,8x9,5





8.1

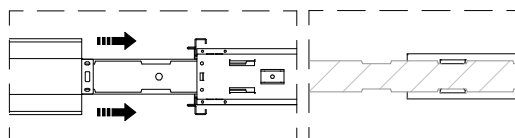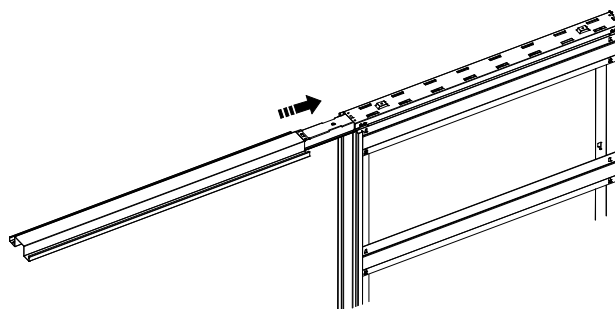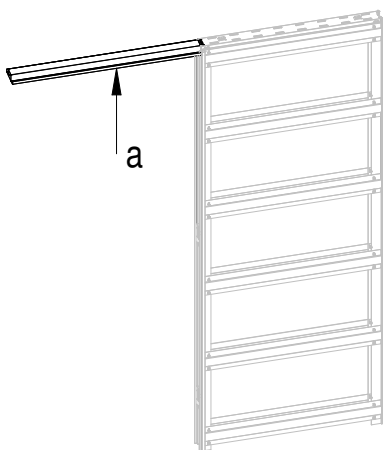



9.1

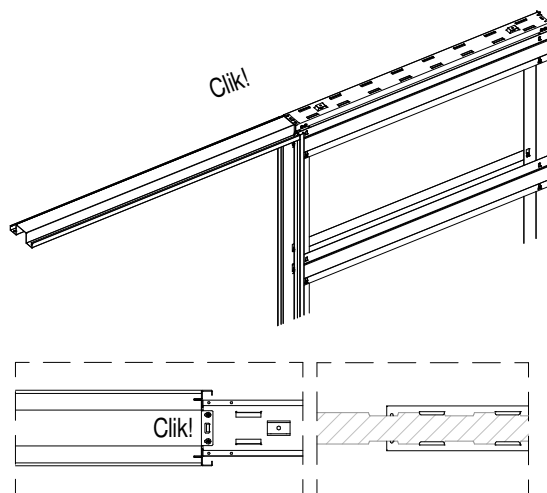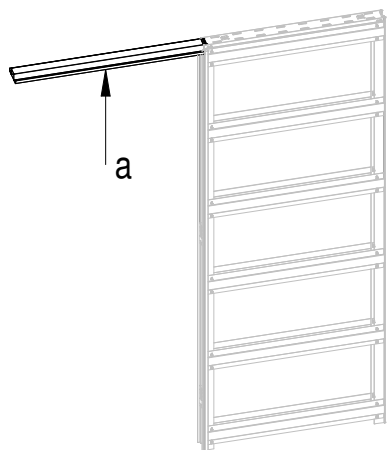

10.1


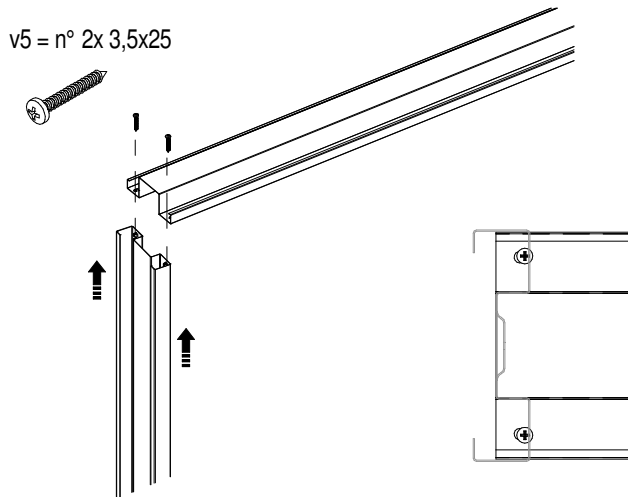
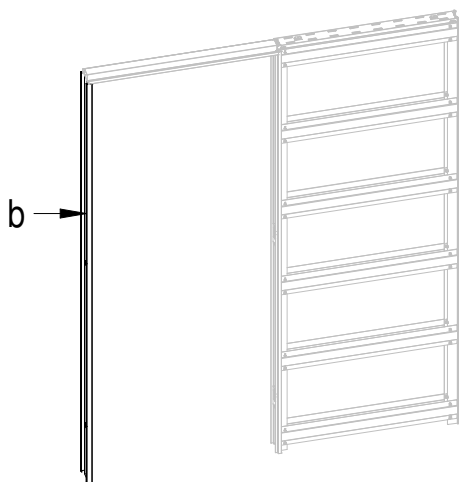


11.1

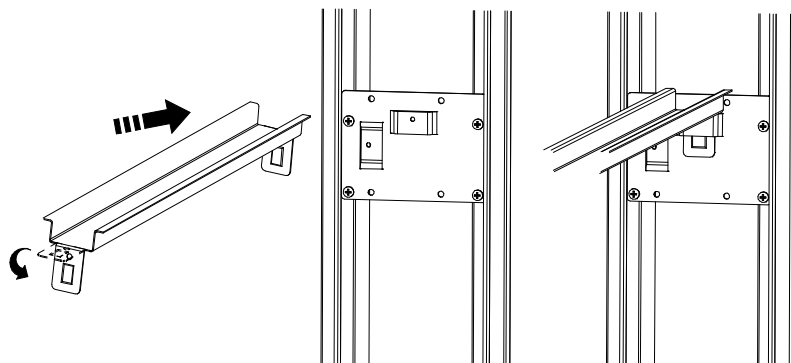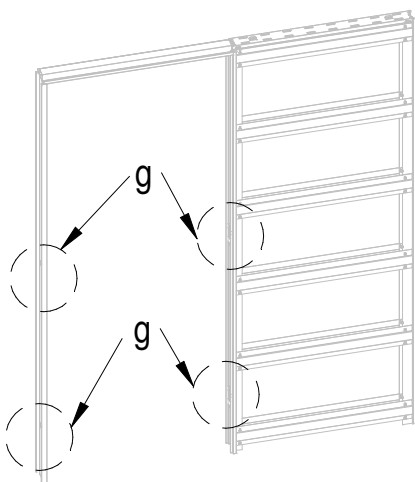

Evokit 125

Posizionamento su tramezzo - Framing -
Installation sur structure placo - Fijacion de la estructura

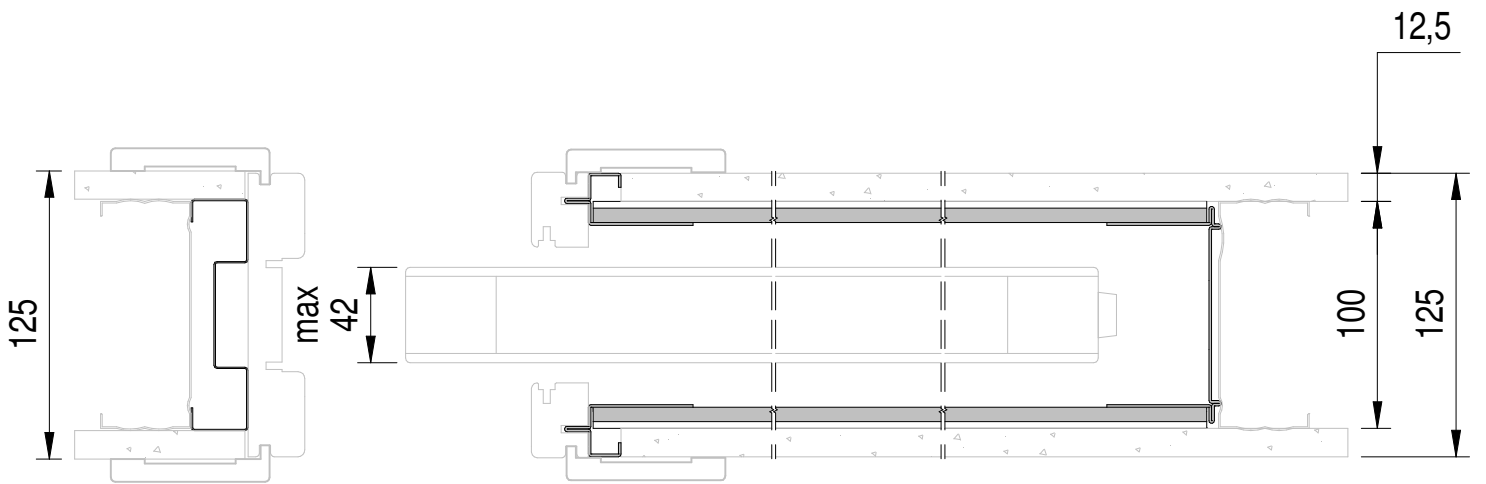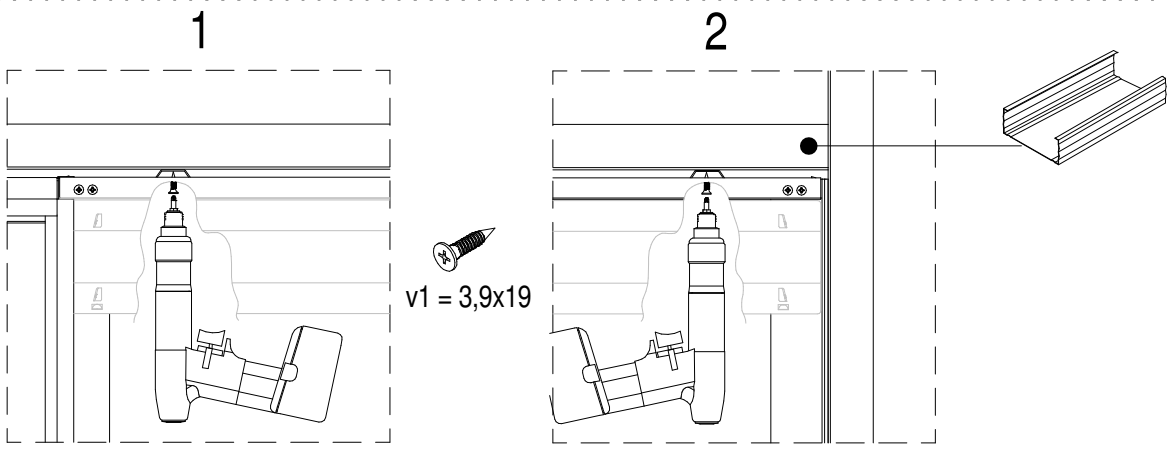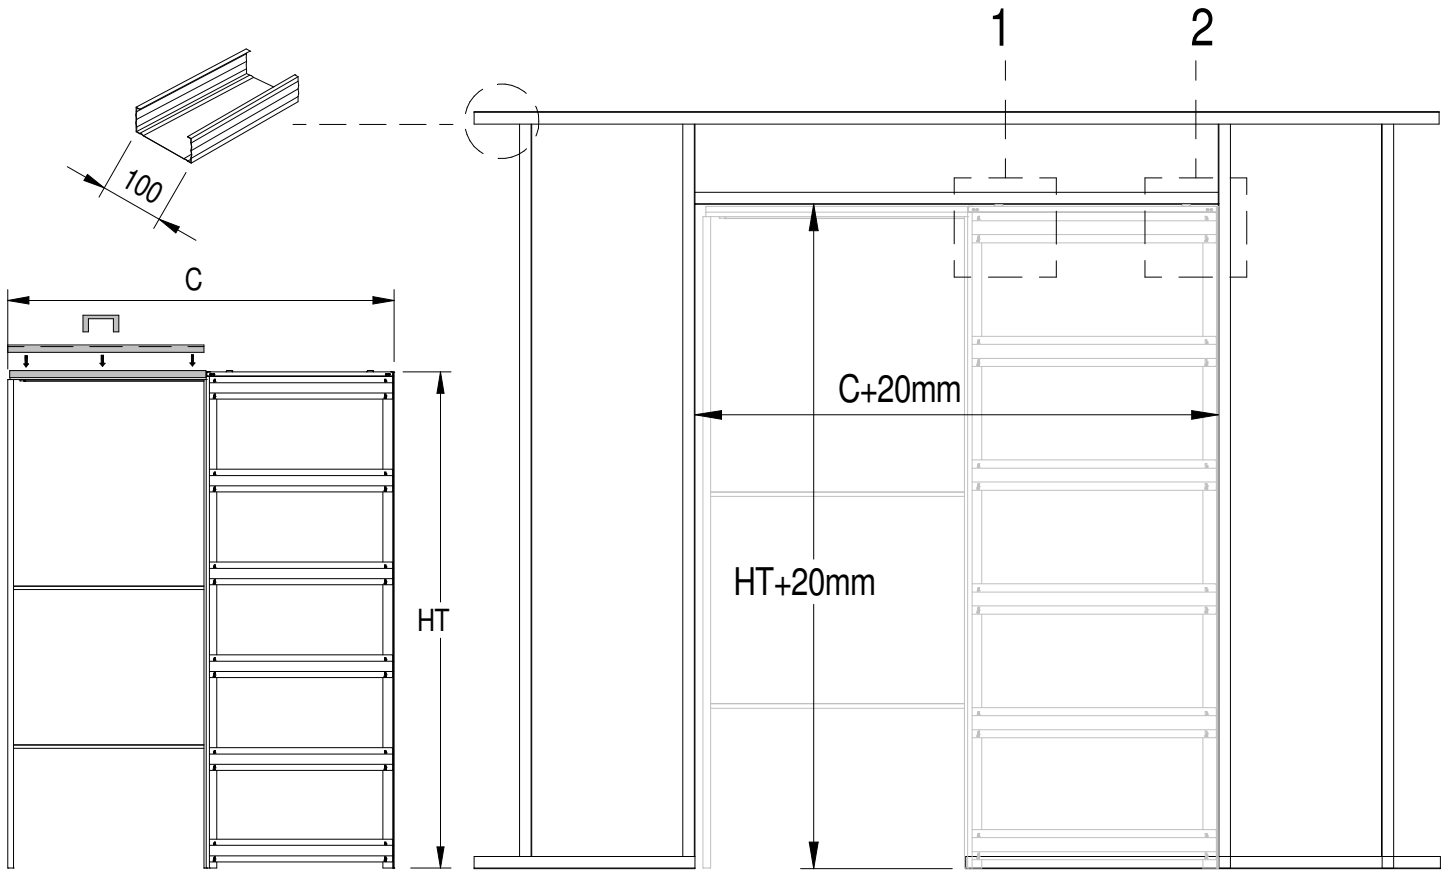

Ermetika®

www.ermetika.it

Tel. +39.0883.535781