# EasiKit DOORSETS







# EasiKit Doorsets

**Our EasiKit Door Sets** offer effortless installation with factory-machining of hinges, latch or bathroom lock fittings.

The kit arrives complete with high-quality handles in a variety of styles and finishes, you can customize your door set to suit your taste. The pre-machined frame is supplied packaged as a convenient flat pack kit, plus, our mitred architrave kit is designed to perfectly complement all frame sizes for a seamless finish.

#### 6 frame breadths available:

White & other primed options: 88mm, 94mm, 100mm, 108mm, 120mm, 133mm.
Oak: 108 & 133mm available.

#### Handles available:

Monroe & Orlando or our newest ranges: Bari, Turin or Zenith.

#### Distance from floor to handle:

940mm but may alter to suit specific door manufacturing restrictions.

#### Locking:

Latch or bathroom lock available, narrow stiles doors are available with slim locks and slim latches.

#### Finish available:

Unfinished oak, white primed, black primed + 6 premium primed finishes of our Eco-Urban doorsets.


## Frames

Heavy duty MDF, thickness: 30mm

Six frame breadths available for white & other primed options: 88mm, 94mm, 100mm,

108mm, 120mm, 133mm. Oak: 108 & 133mm available.

Leg lengths will be provided 12mm longer to facilitate levelling with the floor.

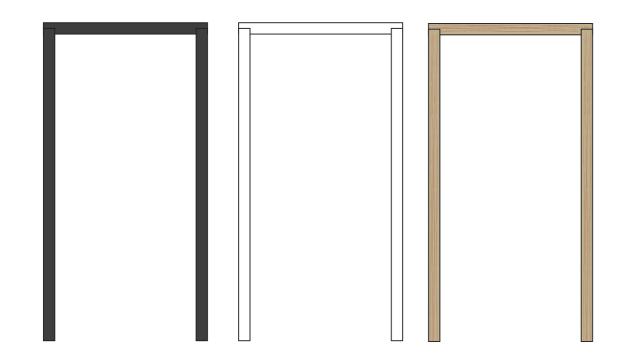

## Architraves

Heavy duty MDF, mitred for easy fitting.

White, Black and Premium Primed Eco Urban architraves: Chamfered, 69mm x 14.5mm Oak Unfinished architraves: Simple style 69mm x 14.5mm.



## Ironmongery available:



\*The Shelton Range is exclusively available with our industrial doors featuring narrow stiles and rails.

All doors are supplied with a latch fitted. If the bathroom option is chosen, the thumb turn and fitted bathroom lock will also be provided. The hinges and latch/lock finish will complement the finish of the handles. If Industrial style doors are purchased with narrow rails and stiles, there is only one handle available: Shelton (in three finishes above), and this will be fitted with the slim latch or slim bathroom lock.



-



# Easikit DOORSETS

## **Dimensions**

Door Width	Lining Thickness	Fitting Tolerance	Overall Door Kit Width	Overall Door Kit Height	Structural Opening Width & Heig
533mm	30mm	Sides: 3mm, Head: 4mm	599mm	2017mm	W: 609mm, H: 2022mm
610mm	30mm	Sides: 3mm, Head: 4mm	676mm	2017mm	W: 686mm, H: 2022mm
686mm	30mm	Sides: 3mm, Head: 4mm	752mm	2017mm	W: 762mm, H: 2022mm
762mm	30mm	Sides: 3mm, Head: 4mm	828mm	2017mm	W: 832mm, H: 2022mm
838mm	30mm	Sides: 3mm, Head: 4mm	910mm	2017mm	W: 920mm, H: 2022mm
813mm	30mm	Sides: 3mm, Head: 4mm	879mm	2068mm	W: 889mm, H: 2073mm
626mm	30mm	Sides: 3mm, Head: 4mm	692mm	2076mm	W: 702mm, H:2081mm
726mm	30mm	Sides: 3mm, Head: 4mm	792mm	2076mm	W: 802mm, H:2081mm
826mm	30mm	Sides: 3mm, Head: 4mm	892mm	2076mm	W: 902mm, H:2081mm
926mm	30mm	Sides: 3mm, Head: 4mm	992mm	2076mm	W: 1002mm, H:2081mm

The fitting tolerance relates to the gap between the door and the lining and is usually approximately 3mm on each side of the door and 4mm on the head.

The frame will need to be cut as required to suit individual floor coverings or floor levels, we recommend the gap under the door to the floor is set at 2mm or so. Frame leg lengths will be provided 16mm longer to facilitate levelling with the floor or partial allowance for floor coverings.


## Delivery

Standard door sizes typically have a lead time of 4-5 weeks, depending on the chosen door style.

For our Eco-Urban range, please anticipate an additional two weeks, extending the lead time to 5-7 weeks.

The door and frame will be delivered in flat-pack format. Hinges will be pre-installed on the door, requiring only attachment to the pre-machined and pre-drilled frame. The lock or latch will also be pre-fitted. Additionally, handles and, if requested, bathroom thumbturns will be separately packaged for on-site installation. Although the frame stop will be provided, it won't be affixed and will require pinning to the frame at the specified location. All loose components will arrive pre-drilled and pre-machined for easy assembly.

6

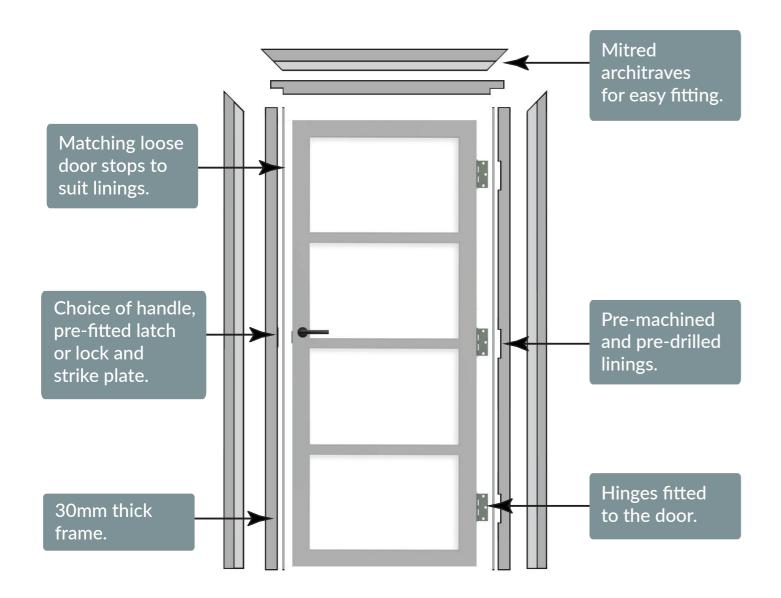

## Handing & Storage

It's best to store doorsets flat, preferably in the same room where they'll be installed. Keeping them protected from moisture and dirt is essential, and they should be placed where they won't get damaged during storage. Leave them in their packaging until they're ready to be treated or installed.

Avoid installing doors in areas prone to extreme temperatures or humidity, such as newly plastered rooms. In new construction, only install doors during the 'final fit' stage, once the property is ready for finishing touches. Maintaining gentle internal heating and good ventilation can help mitigate the effects of humidity and heat on the doors.

## **Finishing**

Our Unfinished Oak, White Primed, and Premium Primed Eco-Urban door sets preferably require full treatment before fitting but if this proves impractical all decoration must be concluded immediately afterwards. Begin and decorating process by very lightly sanding them with super fine-grade sandpaper.

For primed doors, only a paint finish is suitable.

Unfinished Oak and Pine Doors can be treated with a high-quality paint, stain, or varnish suitable for veneered doors.

Ensure all timber surfaces are fully finished, paying particular attention to sealing the timber end grain on the tops and bottoms of the doors.

Treat/seal all lock, latch, and hinge cut-outs thoroughly to prevent excessive changes in moisture content, which could lead to shrinking, swelling, splits, or distortion.

When finishing glazed doors, take care to avoid getting any decoration finishing material on the glass. Consider using masking tape for added protection but do not leave tape on any areas for extended periods of time, use "low tack" tape, some doors with glass have a plastic coating (Paint and Peel) and can be peeled off after decoration.

Here are some finishing reminders:

#### Important requirements:

Apply your chosen decorating finish to all faces and edges. Apply an equal number of coats to the face, edges, lock, latch, and hinge cut-outs. Apply at least one coat of finish as soon as possible after unpacking the door.

#### Please do not use the below:

Thin penetrating seals, oils, wax, dyes, or hard brittle finishes.

Thinned/mixed paints or stains.

Mixed incompatible products, such as applying paint on one door face and stain on the opposite face.

## Contact

Email: enquiries@directdoors.com Phone: +44 (0)1968 671 681



