





SETUP INSTRUCTION


EVOKIT


INDEX


Setup for 100 finished wall	6 - 10
Setup for 125 finished wall	11 - 15
Setup plasterboard	16 - 18
Fitting Easy stop AB twin dual soft closer/opener	19 - 24


KIT CONTENTS


Standard equipment

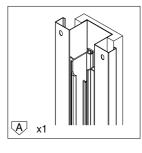


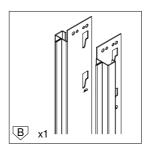


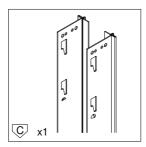


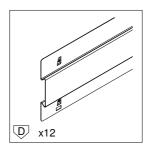


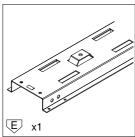

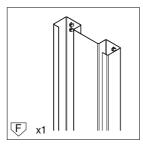


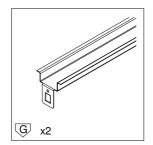

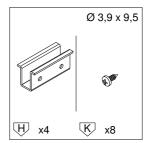


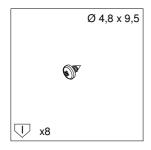




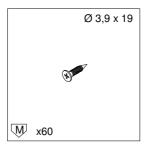



Tools

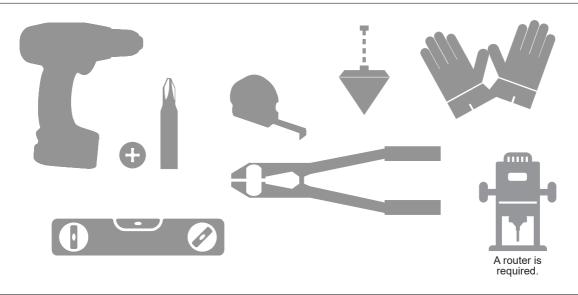


Easystop Ab Twin - equipment

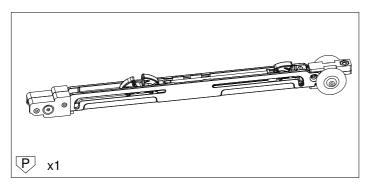

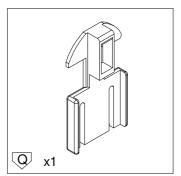

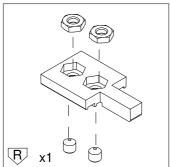



Tools

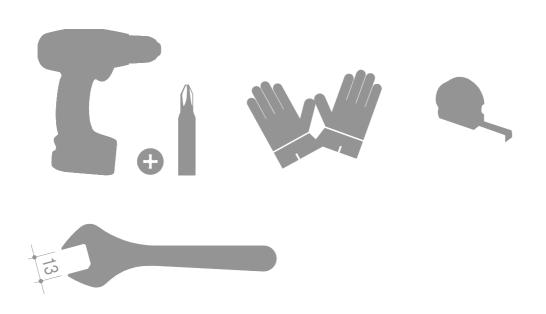



KIT CONTENTS


Overall view

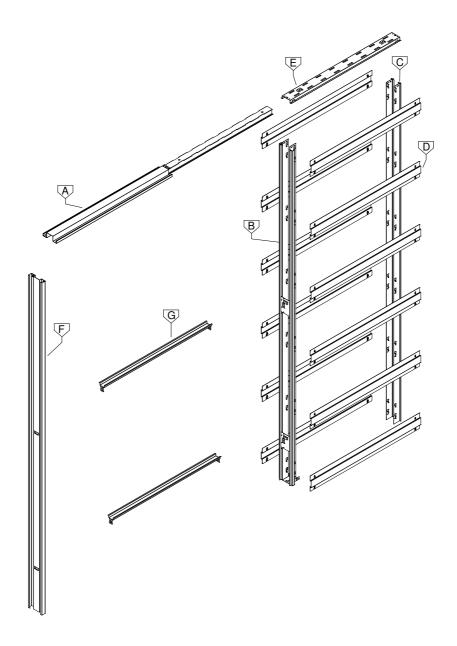


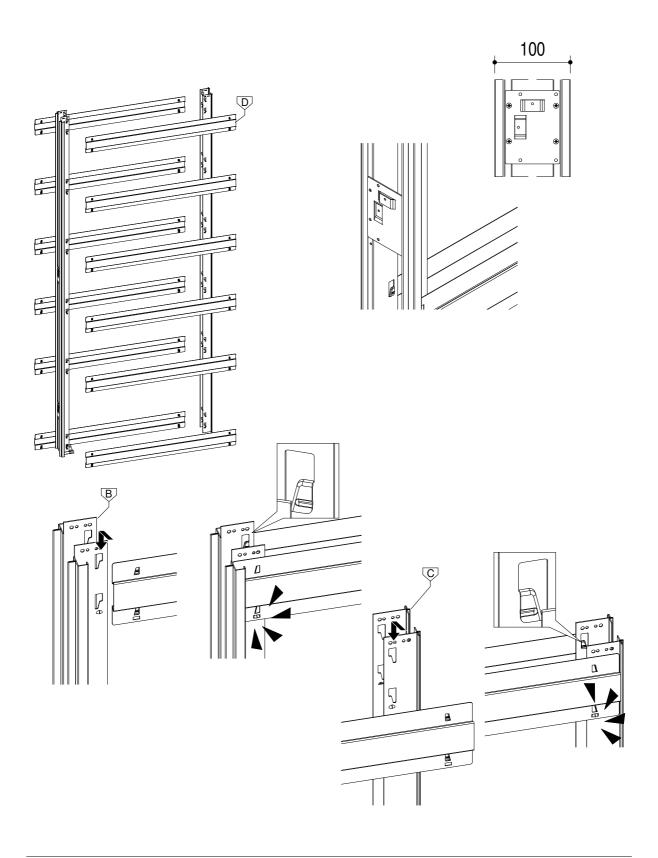


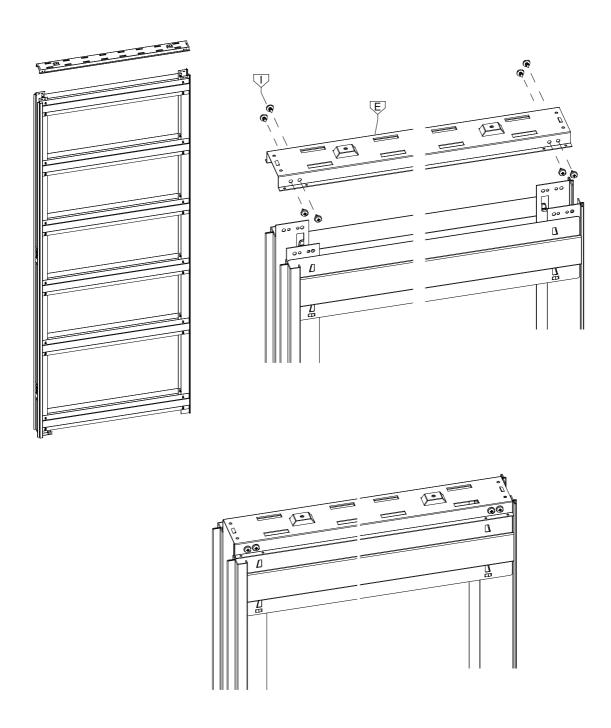


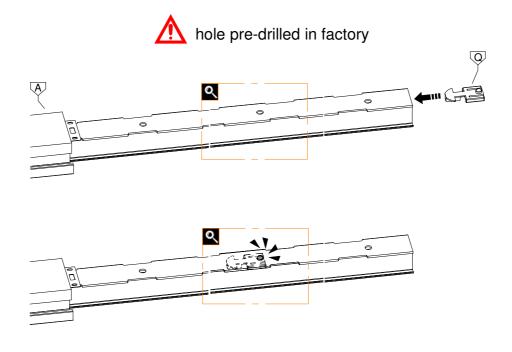

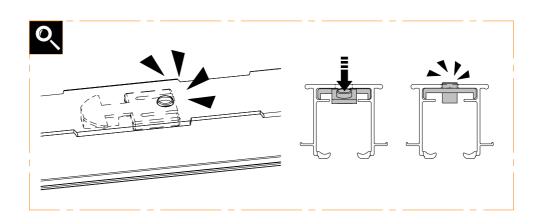


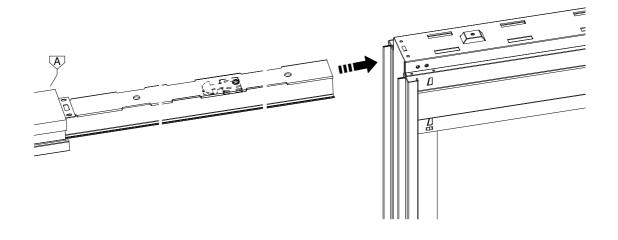


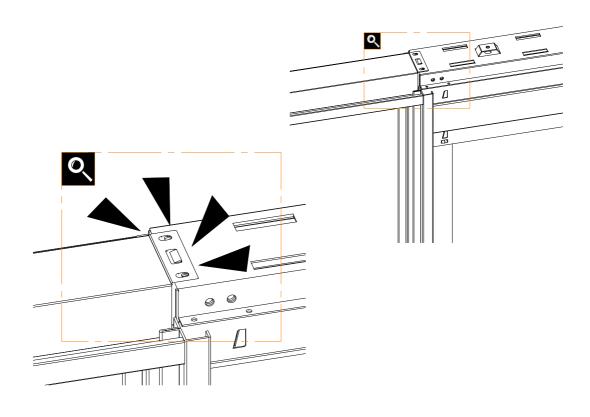


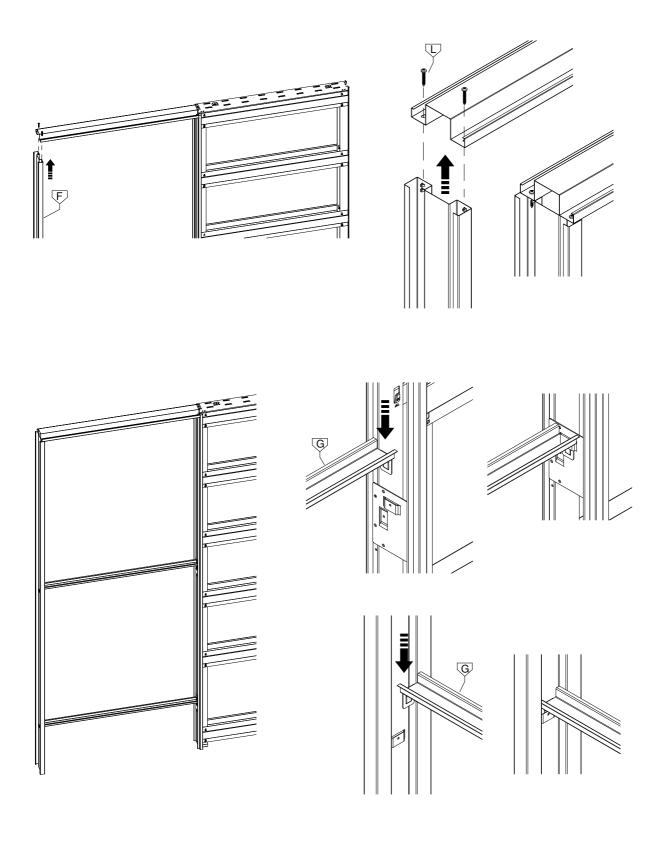



2.1

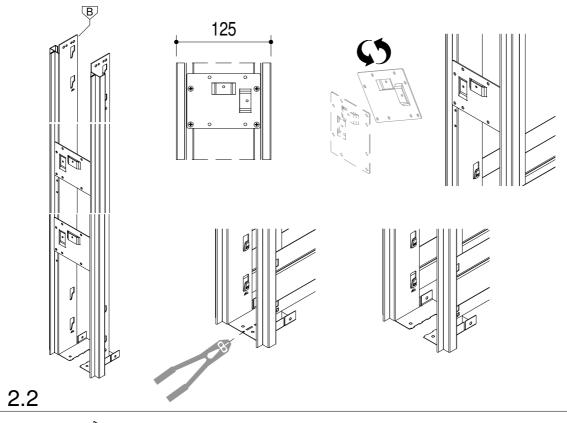


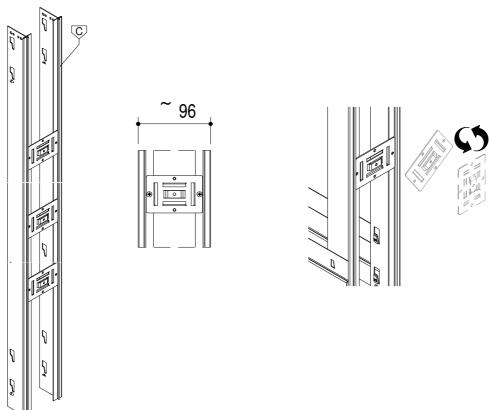


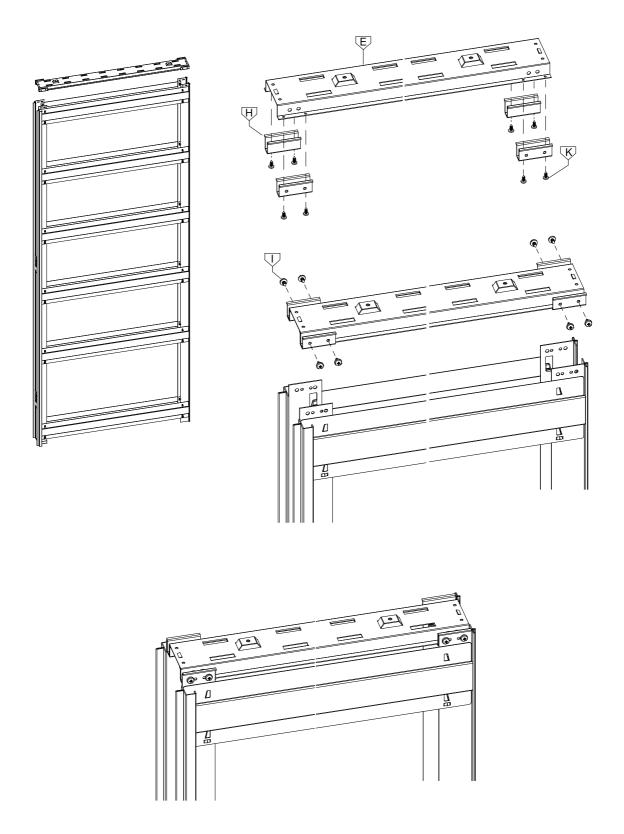


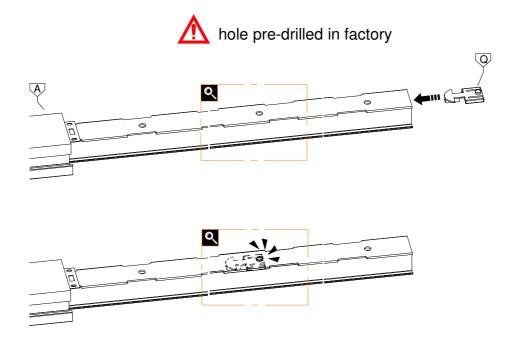

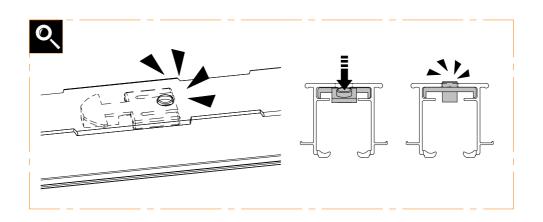


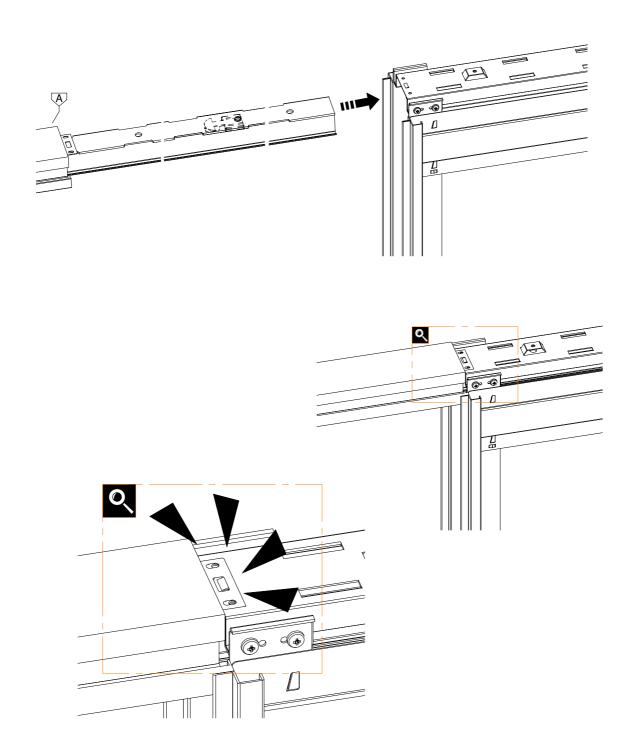


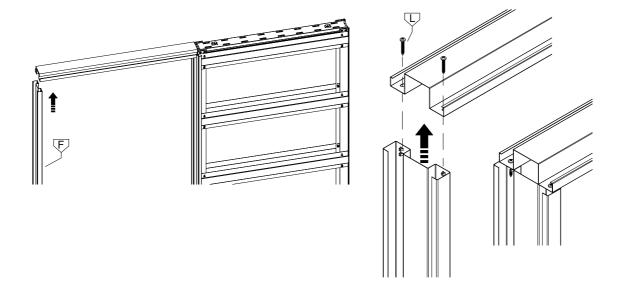


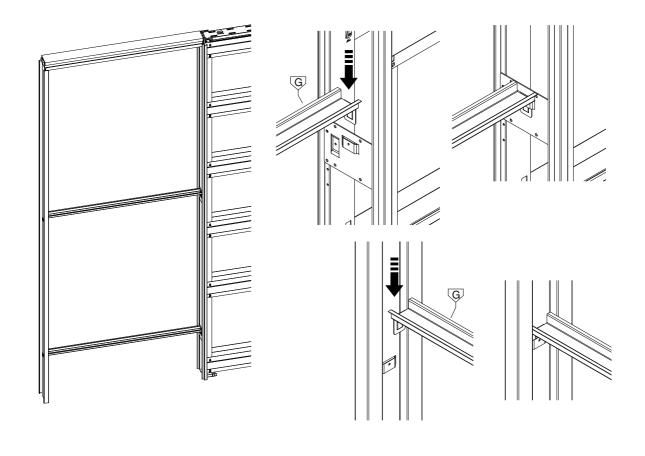


3.1

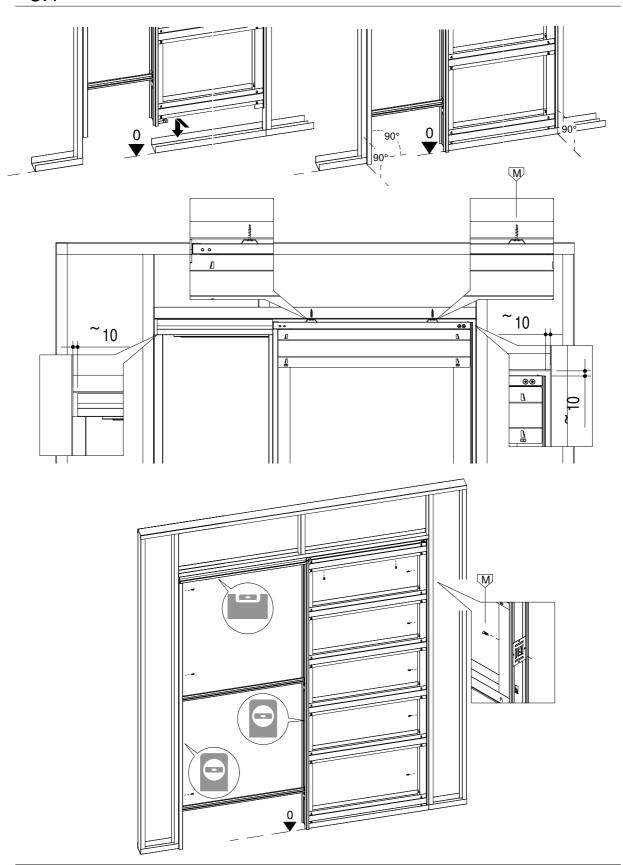

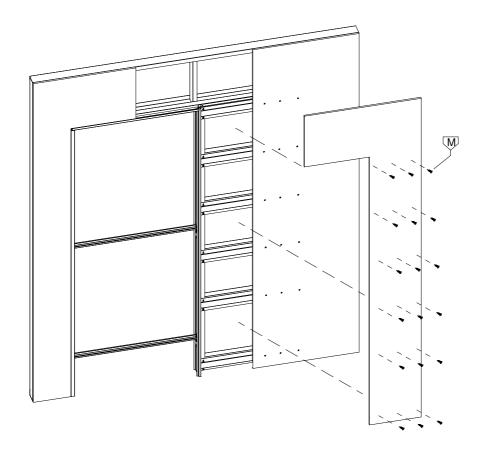


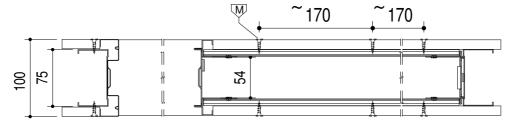

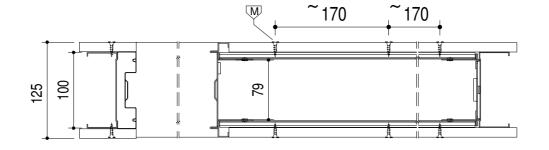

 \triangle


ATTENTION: USE ONLY SCREWS INCLUDED IN KIT!

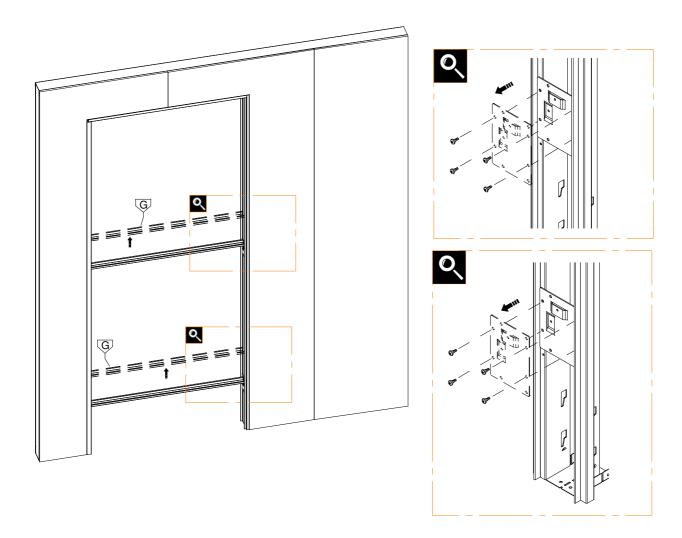



SETUP





4.1

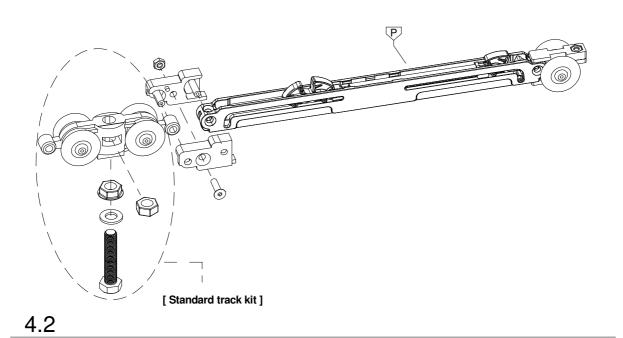

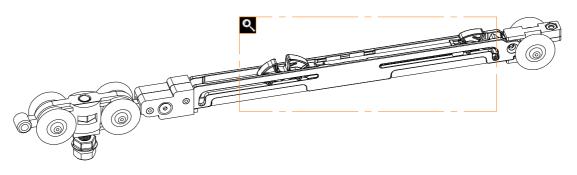

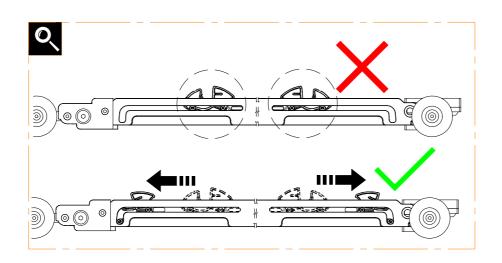

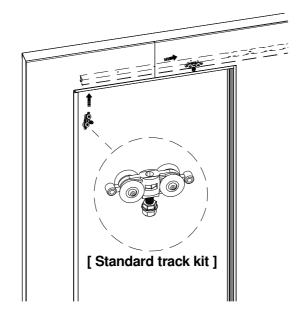

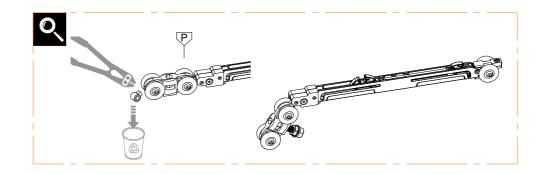




SETUP




4.4


WOOD SINGLE DOOR

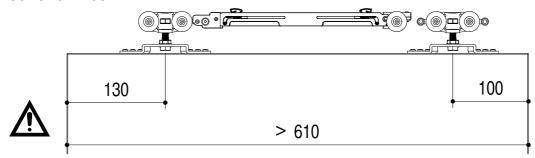


WOOD DOUBLE DOOR

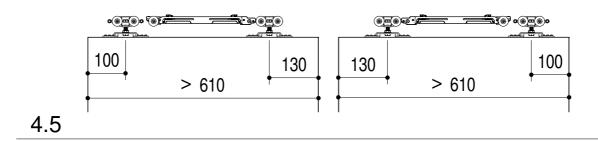

GLASS DOOR

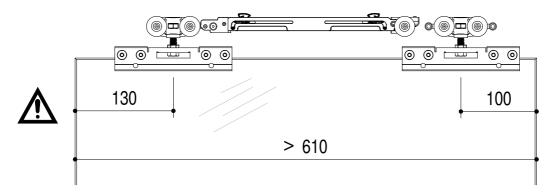



GLASS DOUBLE DOOR

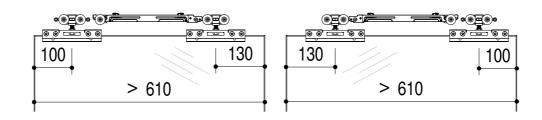

4.6


ACTIVATOR POSITION FOR WOOD / GLASS SINGLE DOOR

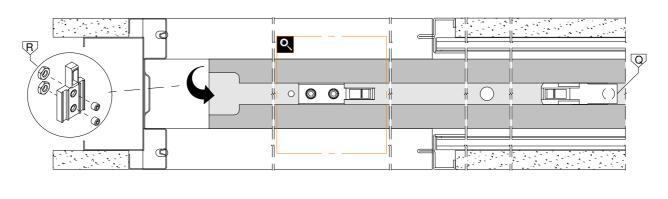

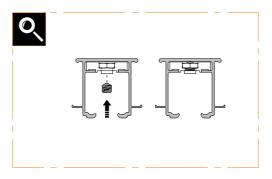

4.7

ACTIVATOR POSITION FOR WOOD / GLASS DOUBLE DOOR

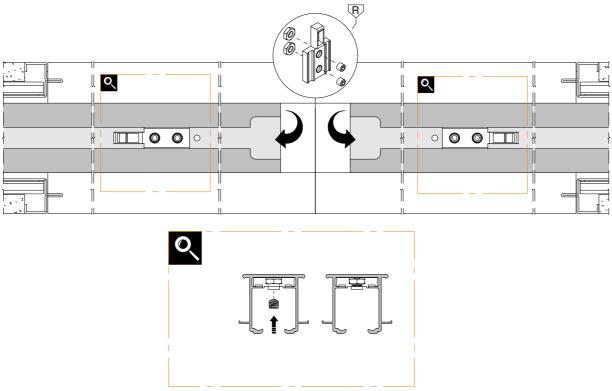


SETUP



4.8

SOFT CLOSING...

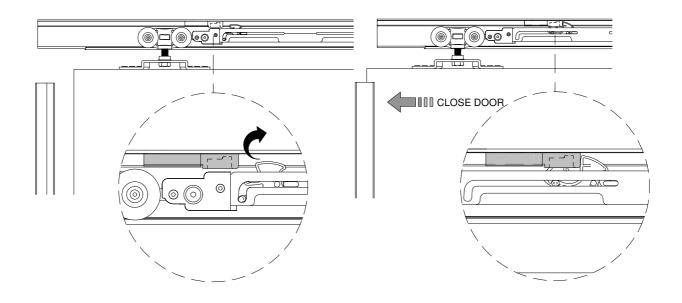

... SOFT OPENING

