

Congratulations on purchasing the KECO Glue Pull Repair Collision System!

This document aims to help you set up your new system to achieve successful glue pulling with efficiency and organization. KECO's GPR system facilitates repairs in today's least invasive method available to technicians.

STEP 1 Tool Cart

- Unbox the Tool Cart and 3rd Panel Conversion Kit - Set the shorter set of brackets aside (For the L1 - Only the Tool Cart box is needed)
- Begin assembly - Follow the video embedded in the QR code



STEP 2 Tab Print Organizer

- Unbox and install the Tab Print Organizer, making sure it's in the correct orientation - As shown in the video
- Unbox all tools and place tabs in the Tab Print Organizer (L1 will have fewer tabs)



STEP 4 Z-Channel

- Install the Z-Channel on the right side of the Tool Cart
- This will hold your Glue Gun, Infrared Thermometer, Heat Gun, Isopropyl Alcohol, and Glue Sticks




STEP 5 Tools

- Hang all tools on the back panel with the provided hooks - Use the graphics below as a guide



L2E Tool Placement

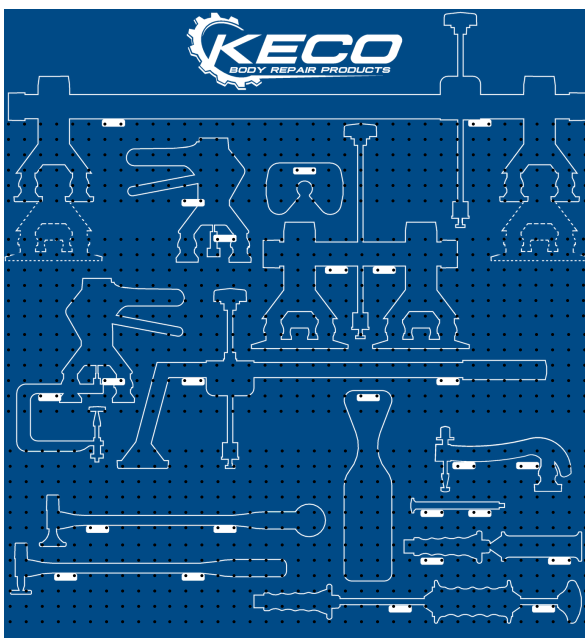

L1 Tool Placement

