




SG HI BAR

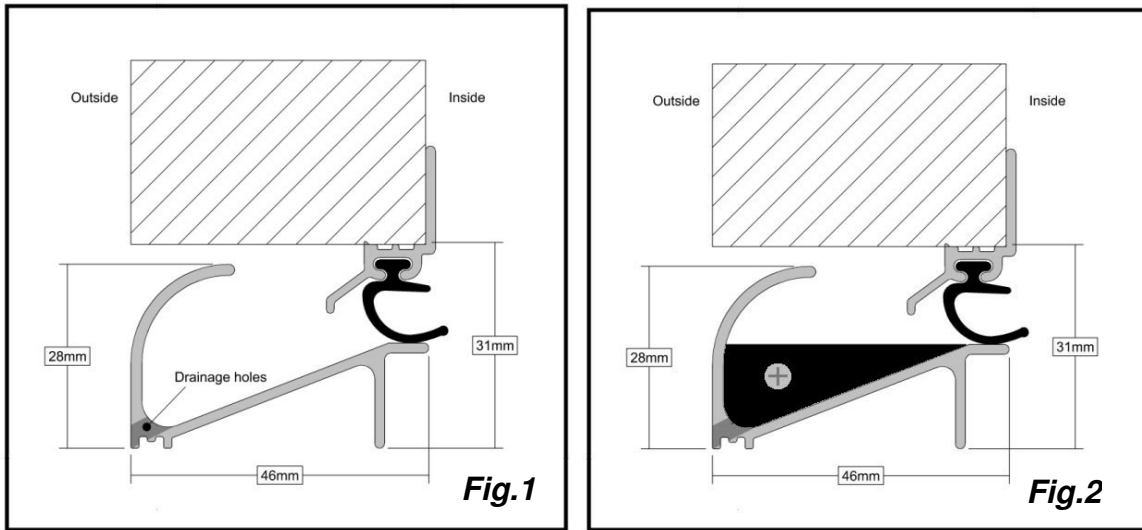

Fitting Instructions

- 1 Measure the greatest distance between door jambs and cut off weather bar to this length.
- 2 Remove material from the bottom of the door sufficient to leave a 31mm gap under the door above the base threshold. **As shown in Fig.1.**
- 3 Set weather bar on bedding mastic between door jambs. Ensure that the lower edge is on the inside and flush with the inside face of the door. When finally positioned screw down the threshold.
- 4 Cut weather trim piece to suit the door width.
- 5 Position weather trim on the inside face of the door with the EPDM seal blade against the inside face of the previously positioned weather bar and with the water barrier tongue engaged under the door. **As shown in Fig.1.**
- 6 Set the weather trim up as far as it will go and insert the screws to fix finally in position.
- 7 Place the end fixing lugs into the channel, **as shown in Fig.2**, ensure there is mastic between the end lug and the door frame and screw into the frame. **NB The end lugs may have an adhesive film on one side, this needs to be removed before fitting.**