

# UPC:906640



## RAISED GARDEN BED INSTRUCTION

**WARNING: PROTECT YOUR HANDS - WEAR GLOVES WHEN ASSEMBLING. PRODUCT MAY HAVE SHARP EDGES**


**Recommended Tools for Assembly:**

**Parts List:**


(M8 x 34) 

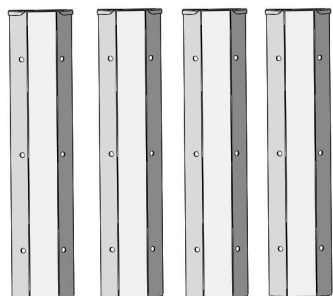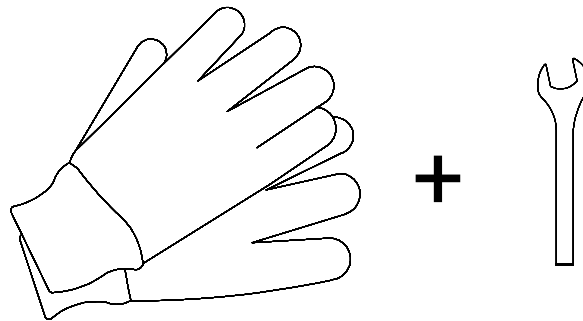


Frame x 4

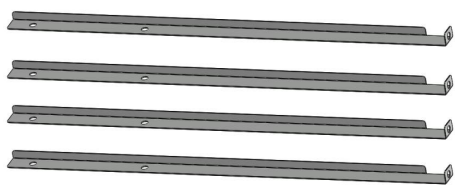

Center Brace x 4

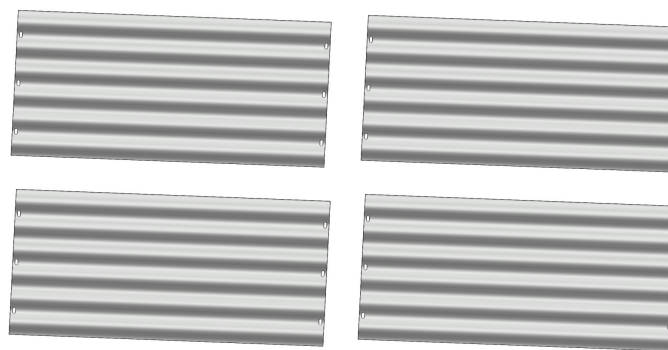

Long Wall (LW) x 4

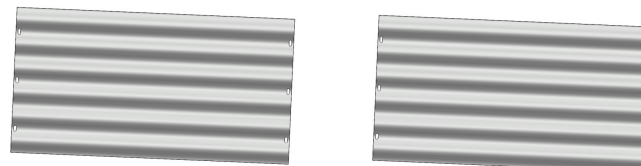

Short Wall (SW) x 2

**Assembly Instructions:**

1. Install the long walls and short walls following the first step.
2. Install the center brace
3. Install the center brace to the long walls using screws.

