


Waterdale COLLECTION


INSTALLING YOUR PLAQUE

INSTALLATION KIT INCLUDES:

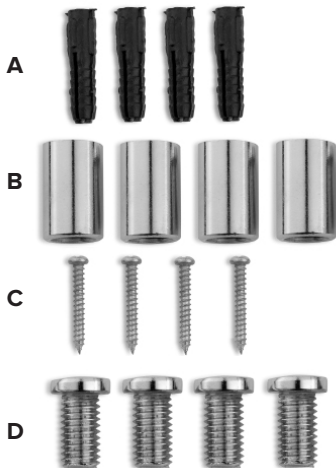

Step 1: Using the enclosed crazy glue, glue the barrels (B) over the two holes located on the back acrylic.

Step 2: Place plaque onto the exposed barrels and finish off installation by fastening caps (D) over plaque and thread into barrels.

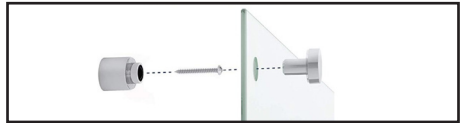

Step 3: Wait 12 hours before mounting on the door.

Step 4: Peel off the backing of the red mounting stickers on the back of the plaque and mount on the door.

(Part A and C can be discarded).