



Car Tent Bubble Assembly Instructions



Unroll your Bubble & spread out flat. Unzip the top clear PVC from the basemat & fold back toward the black air intake panel




stick the box / bag of poles inside



Plug the connector between the electric fan to turn on the blower



Once it is fully inflated you have to open one of the zips and get inside quickly before it goes down. Once inside you put in the frame which takes about 20 mins.

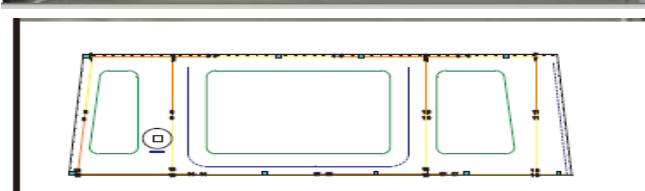


Have a good look at the last photo above. The frame can be clearly seen. (No frame obviously at the back/entry). The DC fan can be seen on the left side and the cross attachment frame on the front side (maybe back wall to some).

Tip, to begin with, treat your new tent the same way as a Car Bubble. A good video for installation is at the foot of the Premium Motorcycle Bubble page at www.carcoversandshelter.com.au




General (blow up) View from Bottom of page 1

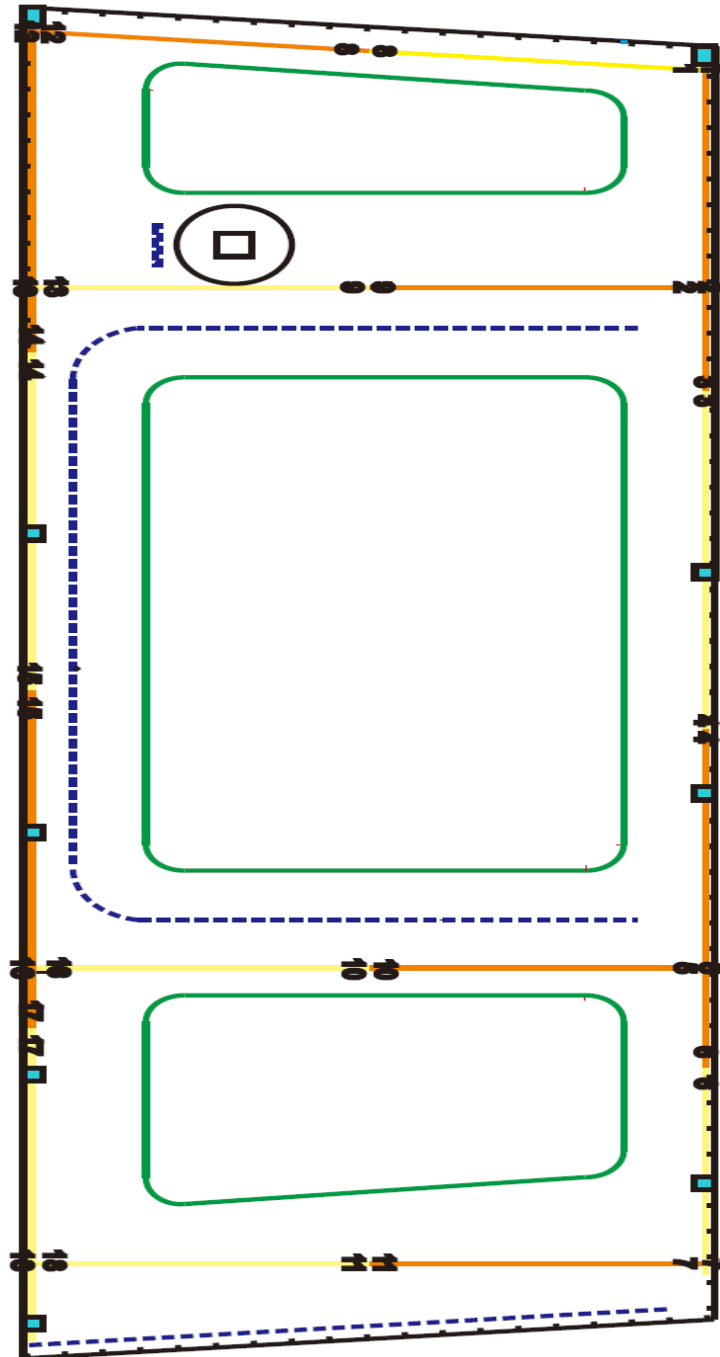


All Pieces are marked A,B,C, etc. (A will join to A; BB would join to BB)

1. Left Side (DC Brushless Fan Side)

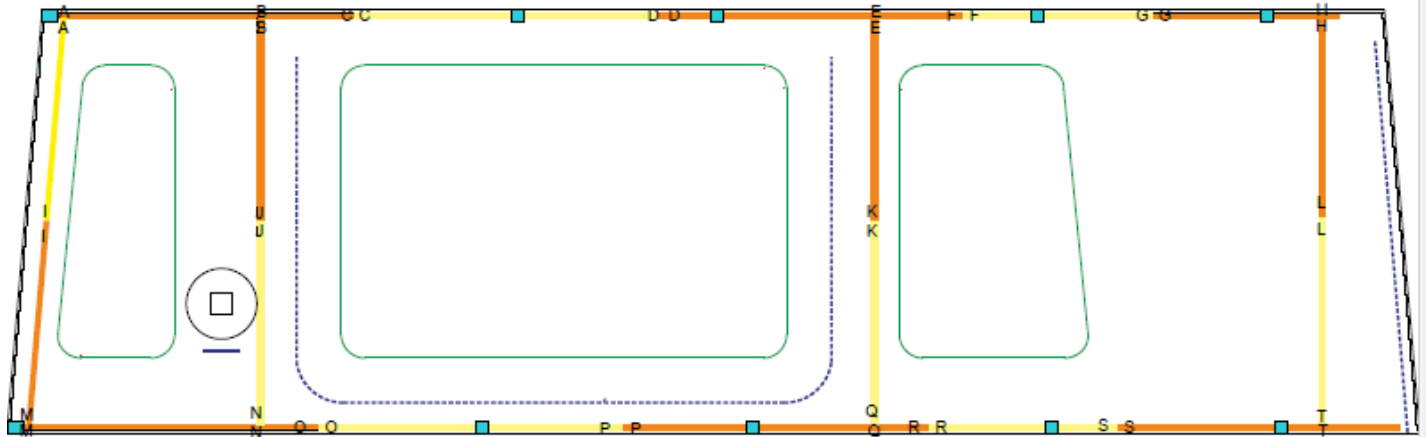


2. Front Side

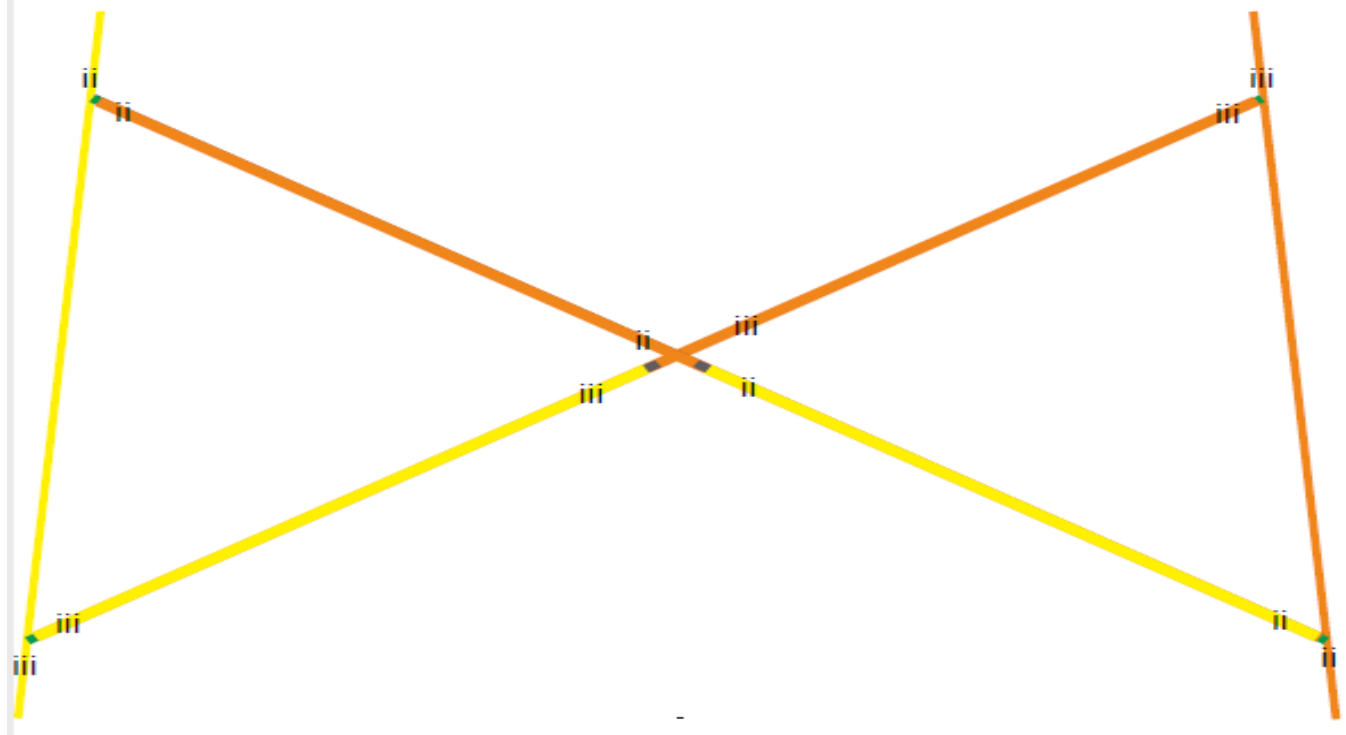




3. Right Side

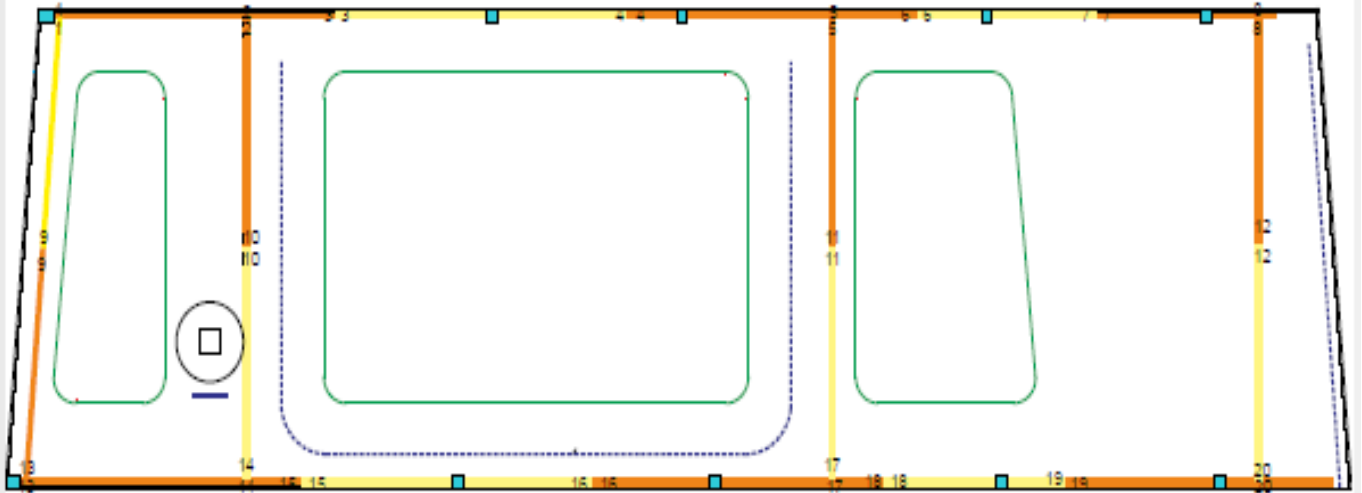

4. Top Side

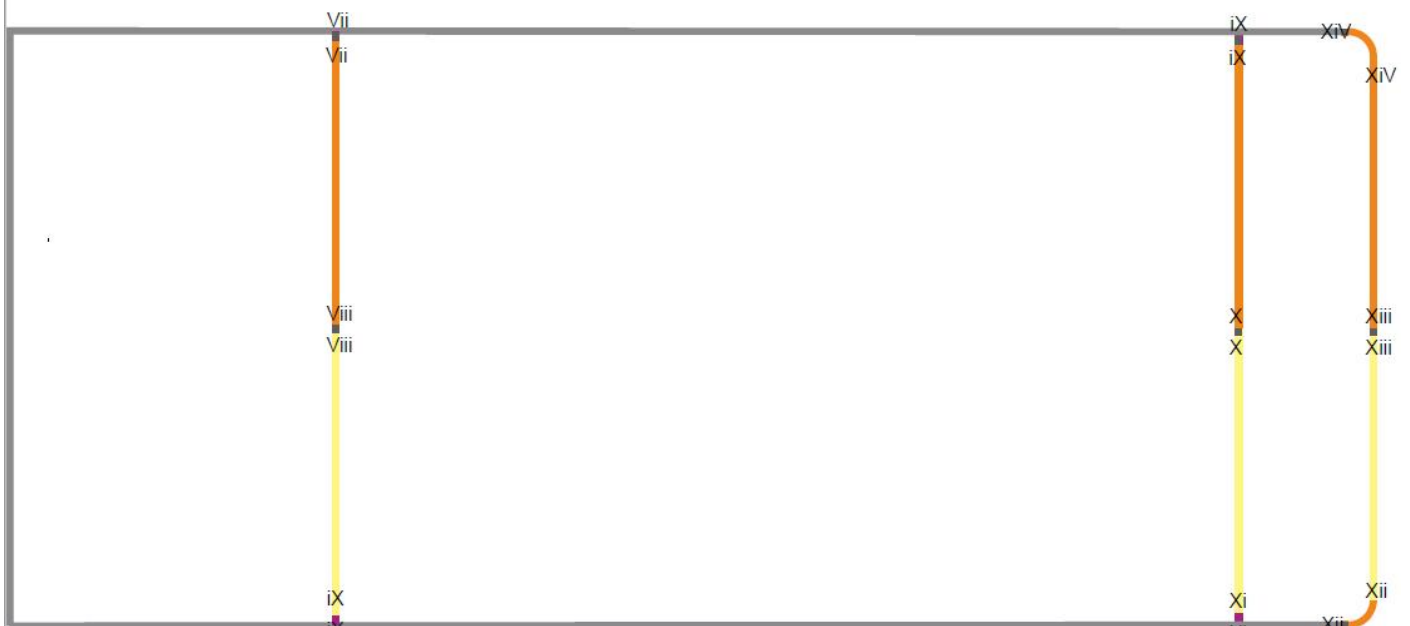

Now it's fully assembled, Slip back out the door and your Tent Bubble is complete – just unzip and drive in and out anytime you want!