



INSTALLATION INSTRUCTIONS FOR FERRARI 458 CARBON FIBER REAR BONNET LATCH COVER

Thank you for choosing to purchase a Carbonio product. Please take the time to fully read over these instructions before attempting to install the kit. This will greatly speed up the installation process and minimize any difficulties you may encounter.


Tools Required:

- 4 mm Allen head (hex) tool

Kit includes:

1 – Carbon fiber latch cover

Step1: Using a 4 mm Allen head tool, loosen and remove the 4 screws that hold the factory metal latch cover in place.

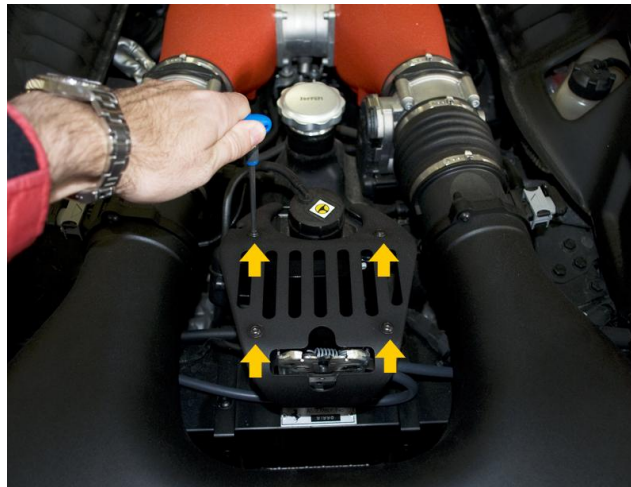

Step 2: With the 4 screws removed, remove the factory metal latch cover

Step 3: Installation of the carbon fiber latch cover is the reverse of the removal.

TIP: Start all 4 screws **FIRST** and then tighten them down to the point where the heads just touch the surface of the carbon and then tighten each screw down one at a time. **DO NOT OVERTIGHTEN** the hardware! Just past snug is all that is necessary.

LABOUR ESTIMATE GUIDE

5 Minutes