



INSTALLATION INSTRUCTIONS FOR NO DRILL LICENSE PLATE MOUNT FERRARI F458 SPECIALE & SPECIALE APERTA

Thank you for choosing to purchase a Carbonio product. Please take the time to fully read over these instructions before attempting to install the kit. This will greatly speed up the installation process and minimize any difficulties you may encounter.

Tools Required:

- Flat head screwdriver (for North American installs)

Kit includes:

- Pre-assembled front license plate mount
- 4 clear self-adhesive bumpers

North American License Plates

Using a flat head screwdriver affix your license plate to the mount using the two screws provided.

Note: These screws should be long enough to accommodate most aftermarket license plate frames and there is no issue using a plate frame or cover with the Carbonio mount.

Rest of World (ROW) License Plates

Rest of world cars have their license plates adhered to the plate mount using high strength 3M mounting tape. Included in your kit is a small packet of adhesion promoter. After ensuring that the backside of the license plate is clean, open the packet and wipe the soft sponge over the backside of the plate. Once this cleaner is given 30 seconds to dry, peel off the red covering on the 3M tape and then adhere the license plate to the exposed 3M tape.

NOTE: The bond between the 3M tape and the bumper is VERY STRONG. Be sure of its positioning before touching the license plate to the tape because you will only get one chance to make the bond.

LABOUR ESTIMATE GUIDE

5 Minutes


Fitting to Car

1. Place the foam lined portion of the mount in the 'V'-shaped area above the Ferrari horse but below the leading edge of the nose ('A' on image right)

*Note that there are minor shape variances in the bumpers from car to car. If your mount does not fit perfectly to the shape of your bumper the soft foam will conform over time to make up for any gaps.

2. While holding the plate mount in place, extend the spring loaded mounting arm and hook the end in the cavity shown by figure 'B' on the image right.

3. With one side hooked in place, repeat step 2 for the other mounting arm for the opposite side

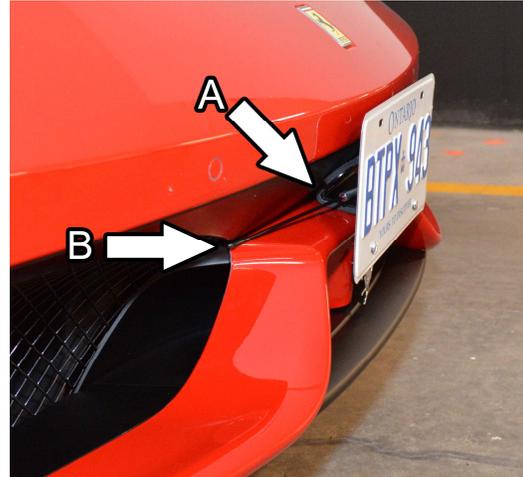

Recommended Additional Protection

Depending on the country / size of the front plate, it is possible that with extreme wind pressure or if bumped, that the plate can contact the body. In order to eliminate the chance of any paint damage, 4 self-adhesive clear rubber bumpers have been included.

One or more of these bumpers should be adhered to the backside of the number plate to act as an additional guard for the front bumper.

The final location of these bumpers is **up to the discretion of the installer** however below there is an image with arrows that show the potential locating points for two of these bumpers for the fairly tall license plates used in North America.

