



INSTALLATION INSTRUCTIONS FOR  
NO DRILL LICENSE PLATE MOUNT  
**PORSCHE 911 (992 BODY)**

Thank you for choosing to purchase a Carbonio product. Please take the time to fully read over these instructions before attempting to install the kit. This will greatly speed up the installation process and minimize any difficulties you may encounter.


**Tools Required:**

- Phillips head (star) screwdriver (for North American installs)

**Kit includes:**

- Pre-assembled front license plate mount
- Allen head (hex) tool

**Procedure 1: Fitting the Mount to the Underside of the Front Bumper**

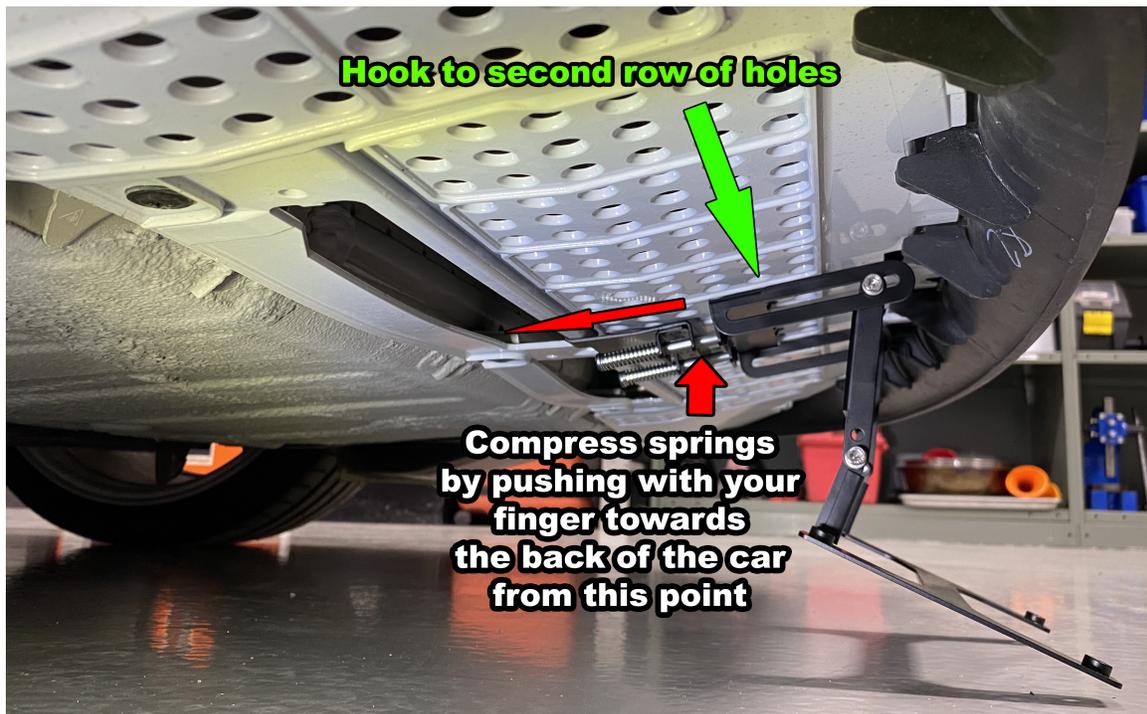

The first step is to fit the pre-assembled license plate mount to the car. The position of the plate holder is done in the next step.

The mount fits to the underside of the front bumper via a series of hooks. The forward part of the mount has 4 hooks while the rear has 2 hooks.

Start by locating the center of the bumper and by hooking the 4 hooks on the forward part of the mount to the holes under the bumper. **The 4 hooks must enter the 2<sup>nd</sup> row of holes as shown in the photo above.**

Once the forward part of the mount is installed, press (with your finger) the rear part of the mount towards the rear of the car. This will compress the springs of the mount and allow you to hook the two rear hooks to the large rectangular openings near the rear side of the bumper.

During this step the rest of the mount can dangle loosely as seen in the photo above.



The plate mount is adjustable for both angle and distance. Using the included Allen head (hex) tool, loosen the 4 screws on either side of the plate holder and set the desired final position for the license plate holder. When the final position is achieved, tighten down the screws. It is easiest to first snug all the screws before returning to tighten them.

Note: The Porsche 992 has a number of different front lip variations that may vary from the photo above. The adjustable nature of the mount allows for a nice close fit to different lip styles

**The position of the plate holder only needs to be set once. After the initial setting the assembly can be installed and removed in seconds using the clipping procedure outlined in the first step.**

## **Procedure 3 - Fitting the plate to the mount**

### **North American License Plates**

Using a Phillips head (star) screwdriver affix your license plate to the mount using the four screws provided. Note: These screws should be long enough to accommodate most aftermarket license plate frames and there is no issue using a plate frame or cover with the Carbonio mount.

### **Rest of World (ROW) License Plates**

Rest of world cars have their license plates adhered to the plate mount using high strength 3M mounting tape. Included in your kit is a small alcohol cleaning wipe. After ensuring that the backside of the license plate is clean and dry, peel off the red covering on the 3M tape and then adhere the license plate to the exposed 3M tape.

**NOTE: The bond between the 3M tape and the bumper is VERY STRONG. Be sure of its positioning before touching the license plate to the tape because you will only get one chance to make the bond**