


Dodge 2018+ Smart Access Cable Installation Instructions

1. Disconnect and isolate the negative battery terminal.
2. Locate the Security Module within the vehicle. Contact Support@HPtuners.com for assistance in locating the module.
3. Remove the wider plug from the Security Module and connect it to the end of the Smart Access Cable.

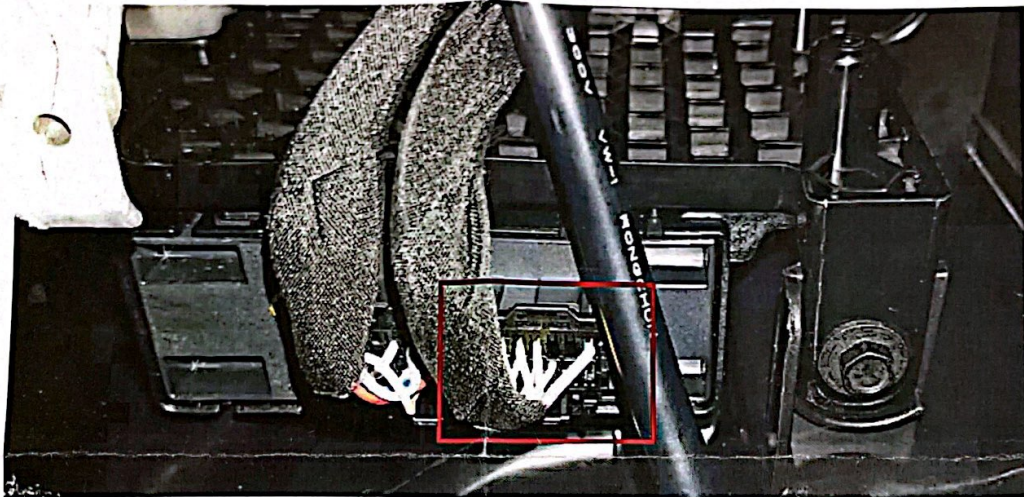

4. Plug the smart access cable into the now vacant port on the Security Module.
5. Reconnect negative battery terminal.
6. The Smart Access Cable is now installed. Simply plug your MPVI into the pre-existing OBDII port in the vehicle and tune away!

If you have any questions, please contact us at <https://support.hptuners.com/>

Make sure to include the Year/Make/Model of the vehicle when contacting support.

HP Tuners, LLC.
700 Eastwood Lane
Buffalo Grove, IL 60089, USA

